Light Fixture Installation

Tools Required:





Adjustabie Wrench

Philips Screwdriver

Before Installation

 Please read these instructions before assembling or installing the product. NOTE: Installation by a licensed electrian is recommended.

2. Take out the fixture and the mounting package and make sure all parts are included. If any part is missing or damaged, please contact us.

3. All parts must be used as indicated in these instructions. Do not substitute any parts, leave parts out, or use any parts that are worn out or broken.
4. Do not disassemble the main body, as it has been installed & commissioned correctly & precisely before leaving the factory.

5. **IMPORTANT**: Turn off the main power at the circuit breaker and place the wall switch or pull chain in the "OFF" position.

6. Do not use bulbs with wattage greater than specified on this fixture.



Part	Name	Quantity
А	mounting strap	1
В	chain	1
С	light fixture	1
D	top chain connector	1
E	mounting nut	1
F	canopy	1
G	ground wire	1
Н	bottom chain connector	1
AA	wire connector	2

Installation Guide



Troubleshooting

Problem	Possible Cause	Corrective Action
	1. Fixture may be wired incorrectly.	1. Check wiring.
Fixture does not light.	Worn or broken bulb.	2. Replace bulb.
T IXture does not light.	Lamp socket or LED transformer	3. Replace lamp socket or
	(if applicable) may go bad.	LED transformer (if applicable).
	1. Swith Contacts are bad.	1. Replace the switch.
Light bulb flickers.	Wire connections are loose.	Check wire connections.
	Light bulb socket may go bad.	Replace the socket.

-B	AA
ough the chain ottom chain ht fixture (C).	3. Feed the main wire through the top chain connector (D), mounting nut (E) and canopy (F). Connect the wires with wire connectors (AA) to the corresponding wires in ceiling.