




COSMOPOLITAN / ESSEX / CITY

Cosmopolitan 9 Piece Dining Set

MODEL # AXCDS9-COS-BL

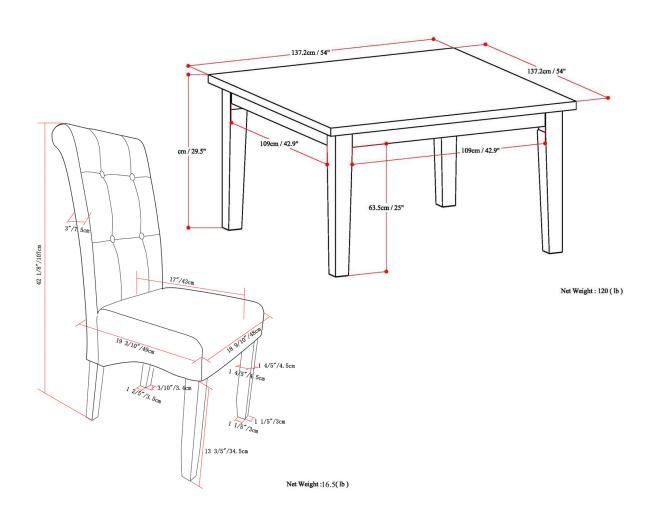



FOR REPLACEMENT PARTS OR HELP WITH ASSEMBLY PLEASE CONTACT US AT:

simpli-home.com/customer-support

PLEASE ENSURE TO HAVE THE MODEL #
FROM THE PACKAGING OR INSTRUCTION BOOKLET

TO RETURN THE PRODUCT:
PLEASE CONTACT THE RETAILER
WHERE THE ITEM WAS PURCHASED FROM





ENTER TO WIN

Upload an image of our furniture in your home with a short review to our facebook page for a chance to

Win up to \$3000 of **Simpli Home** furniture!!!

www.facebook.com/simplihomefurnishings



IMPORTANT: Please read this manual carefully before beginning assembly of this product. Keep this manual for future reference.

SAFETY INFORMATION

Identify all the parts and hardware. Do not discard of the packaging until you have checked that you have all of the parts and hardware required. Hardware package may have spare parts.

WARNING: This item contains small parts which can be swallowed by children and pets. Keep children and pets away during assembly. To avoid danger of suffocation, always keep plastic bags away from children and pets. We recommend that you assemble this unit on a carpeted floor to avoid scratches. If using power tools, set the tool to low torque to avoid damage.

May require 2 people for ease of assembly.

CARE and MAINTENANCE

To clean, use a soft or slightly damp cloth, then wipe with a clean, dry cloth. Dust with soft dry cloth.

Do not use ammonia-based cleaning products, as they will damage the finish.

Do not leave liquids or damp cloths on this furniture.

To avoid dulling of the finish, do not place furniture in direct sunlight.

Please inspect and tighten all screws or bolts on a regular basis to ensure proper performance and safety of your item.







EASTWOOD / COLBURN / HALSTEAD


54 INCH SQUARE DINING TABLE

MODEL # 3AXCDNT-002

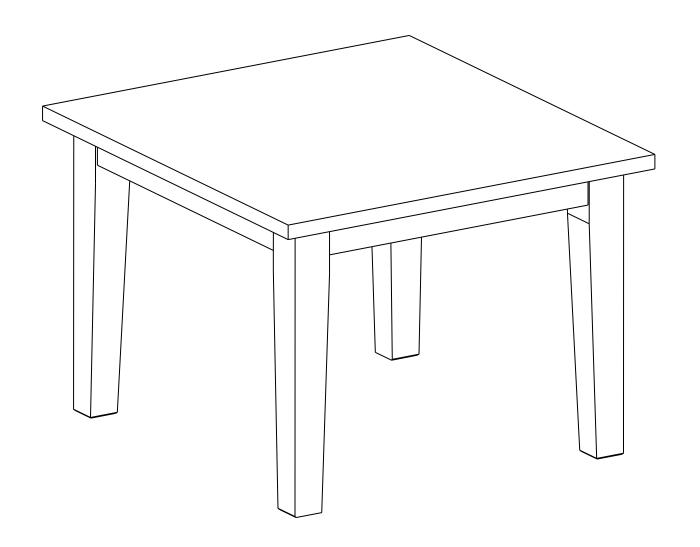


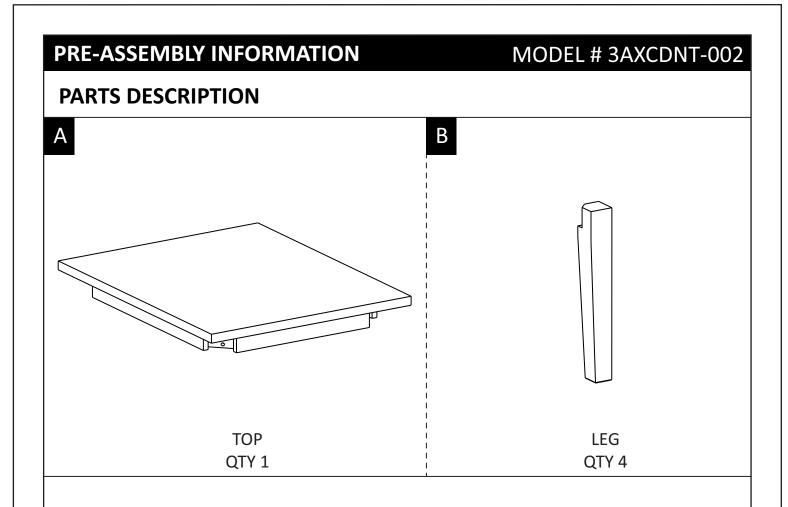

PRE-ASSEMBLY INFORMATION HARDWARE DESCRIPTION 2 ALLEN KEY BOLT M8 X 70 mm QTY 8 SETS ALLEN KEY QTY 1

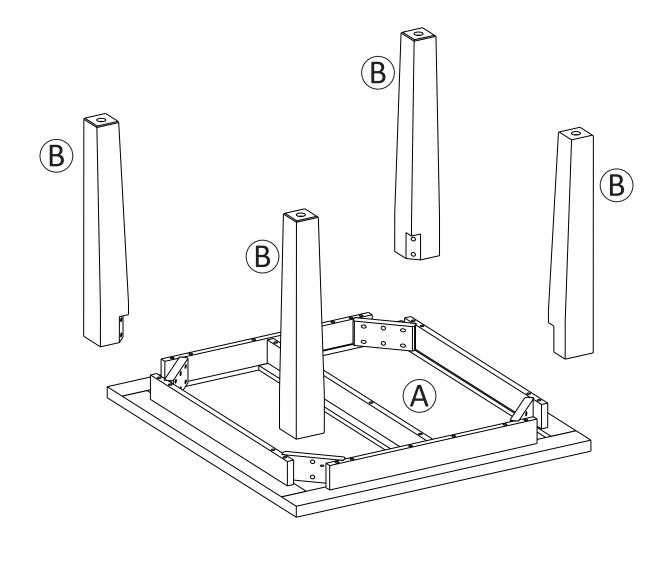


STEP 1

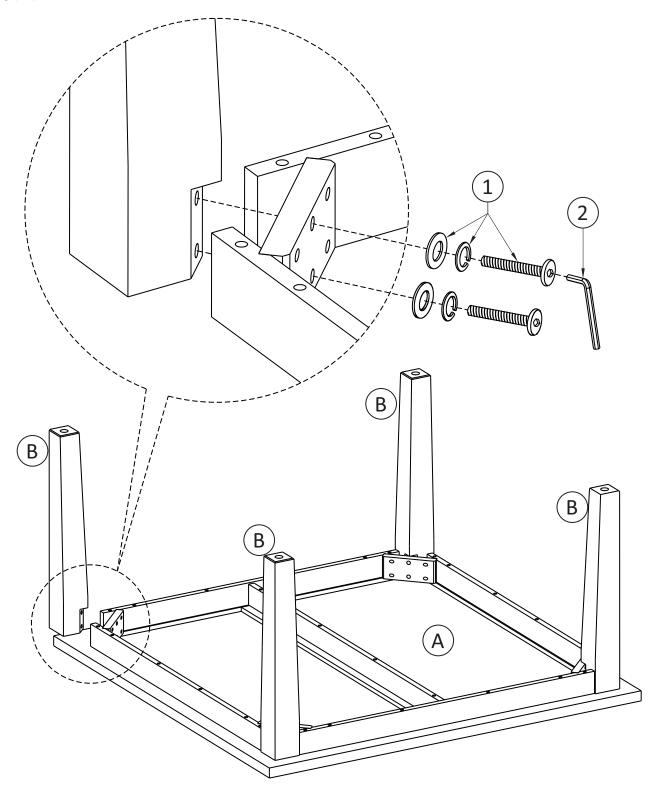

- 1. Attach Legs B to Top A.
- 2. Use 8 Allen Key Bolts 1 to secure part A and B.
- 3. Use Allen Key 2 to tighten Allen Key Bolts. Do not over-tighten.

STEP 2

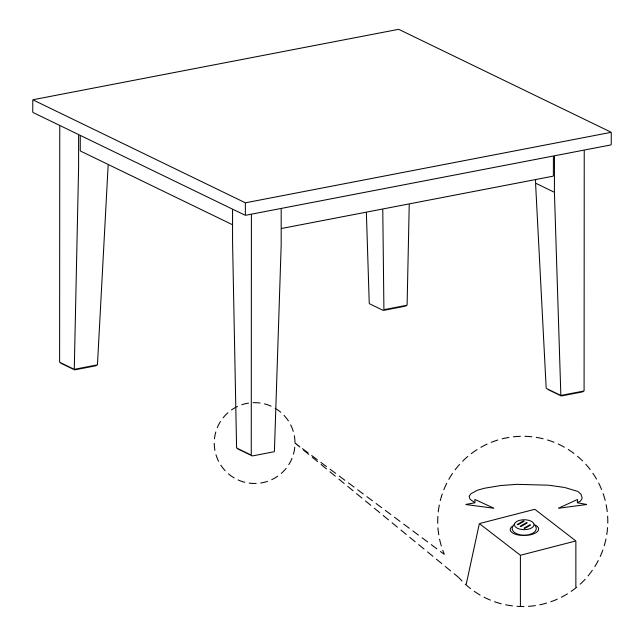

Note: Levelers on bottom of legs can be adjusted if floor is uneven.






COSMOPOLITAN / ESSEX / CITY


2 PACK DELUXE TUFTED PARSON CHAIR

MODEL # WS5109-4-BL

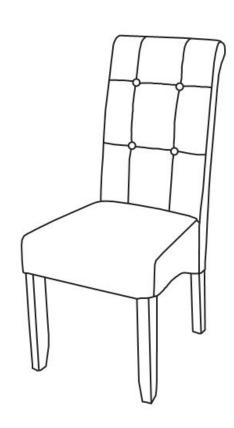


PRE-ASSEMBLY INFORMATION

PARTS DESCRIPTION

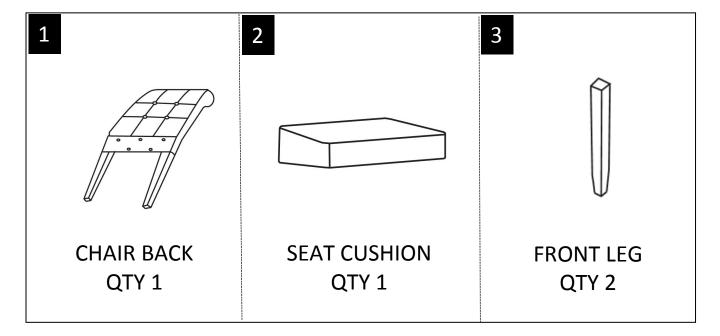


PRE-ASSEMBLY INFORMATION

HARDWARE DESCRIPTION

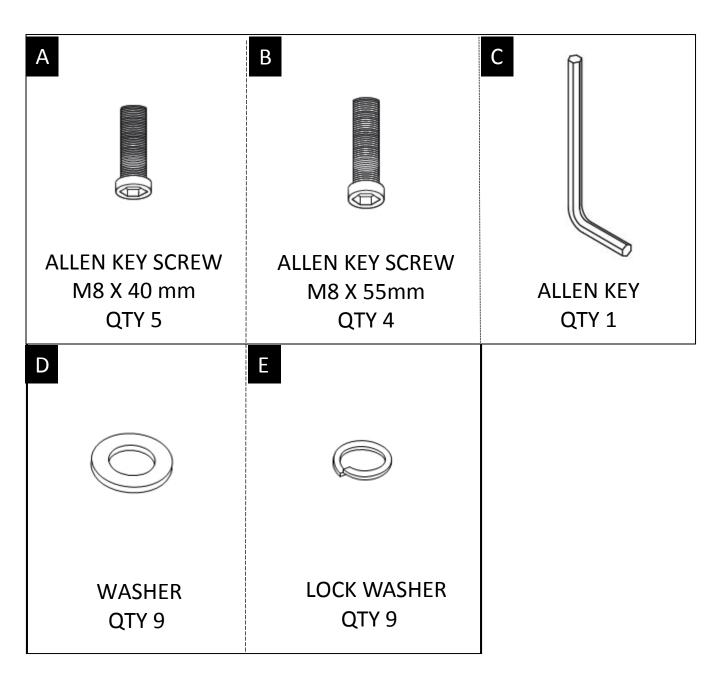


STEP 1

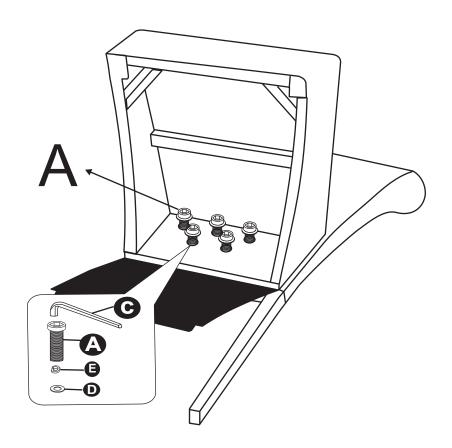

Attach Seat Cushion (2) to Chair Back (1) by inserting Allen Key Screws (A) and five Washers (D) and five Washers (E) into pre-drilled holes.


Use Allen Key (C) to tighten.

STEP 2

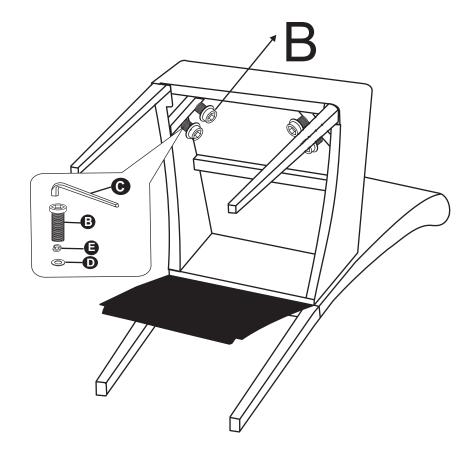


Attach Front Legs (3) to Seat Cushion (2) using Allen Key Screws (B) and four Washers (D) and four Washers (E) into pre-drilled holes. Use Allen Key (C) to tighten.

STEP 3

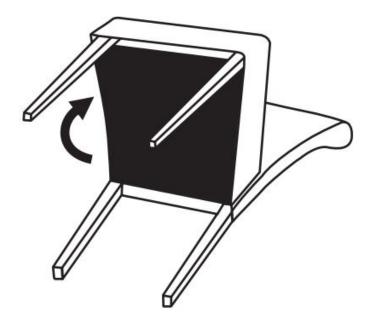

Attach fabric with velcro to bottom of seat.

STEP 4

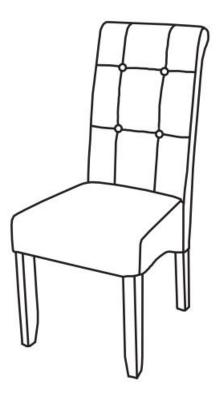

Turn Chair right side up.





WARRANTY

Thank you for purchasing a **Simpli Home – Wyndenhall – Brooklyn + Max** product. These products have been made to demanding, high-quality standards and are guaranteed for domestic use against manufacturing faults for a period of 12 months from the date of purchase. This warranty does not affect your statutory rights.

In case of any malfunction of your product (failure, missing parts, etc.) please contact us at our toll free service line at 1-866-518-0120 ext. 262 from 9 am to 4 pm, Monday to Friday, Eastern Standard Time or by email at simpli-home.com/customer-support.

We reserve the right to repair or replace the defective product, at its discretion.

This product is guaranteed for 12 months if used for normal purposes. Any warranty is invalid if the product has been overloaded or subject to neglect, improper use or an attempted repair by other than an authorized agent. Heavy-duty or daily professional/commercial usage are not guaranteed.

Due to continuous product improvement, we reserve the right to change the product specifications without prior notice.





Questions, problems, missing parts?

Before returning your product please email Customer Support at simpli-home.com/customer-support

or call

Customer Support at 1-866-518-0120 ext. 262 Monday to Friday between 9 am – 4 pm EST

For more information visit us on our website www.simpli-home.com

Like us on facebook www.facebook.com/simplihomefurnishings