
CONVENIENCE CONCEPTS

Oslo TV Stand 205035/205035WG

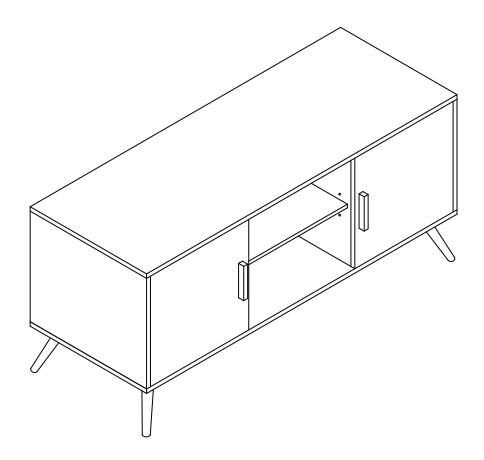



Assembly Instructions

We have designed our furniture with you, the customer in mind. Our clear, easy to follow step by step instructions will guide you through the project from start to finish. Feel confident that this will be a fun and rewarding project. The final product will be a quality piece of furniture that will go together smoothly and give years of enjoyment.



Please do not return to the store Broken or missing Hardware? Need help with Assembly? If you have any questions just call 1-800-468-6447 or email us at parts@convenience-concepts.com

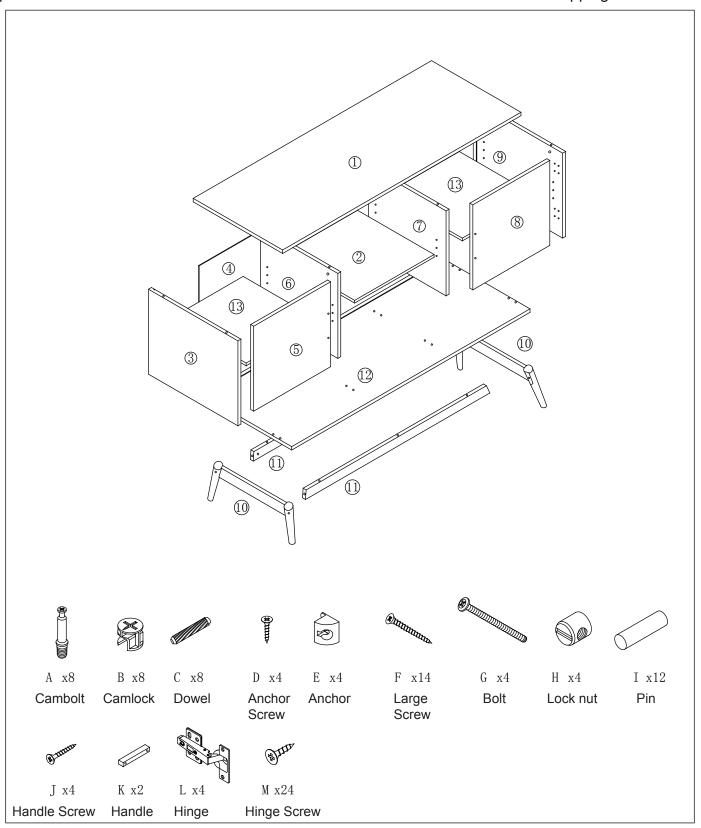


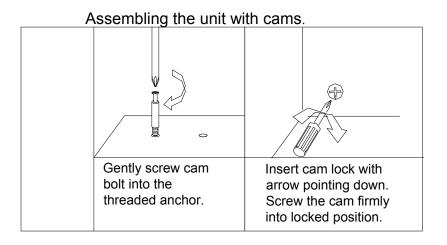

Step1


1. Insert lock nuts (H) into panel 11 with threads facing bolt holes.

2. Attach legs ① to panels ① using bolts (G).

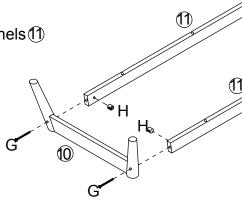

Step2

- 1.Place top panel 1 on soft surface to prevent scratching.
- 2. Screw cambolts (A) into top panel ①.
- 3.Insert camlocks (B) into panels \Im , \bigcirc , \bigcirc and \bigcirc .
- 4.Attach panels ③, ⑥, ⑦ and ⑨ to top panel ① by gently tightening camlocks(B).

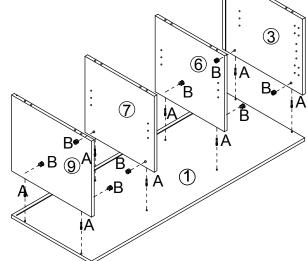



∕G

10


Step3

1.Slide back panel 4 into grooves on inside of assembly as shown.

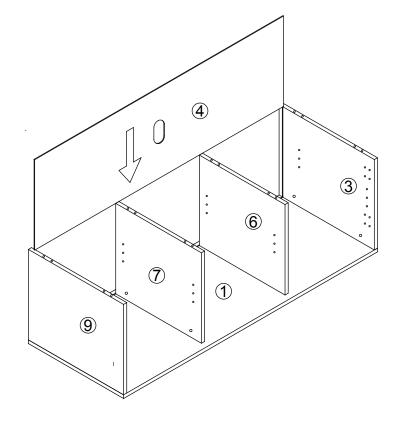


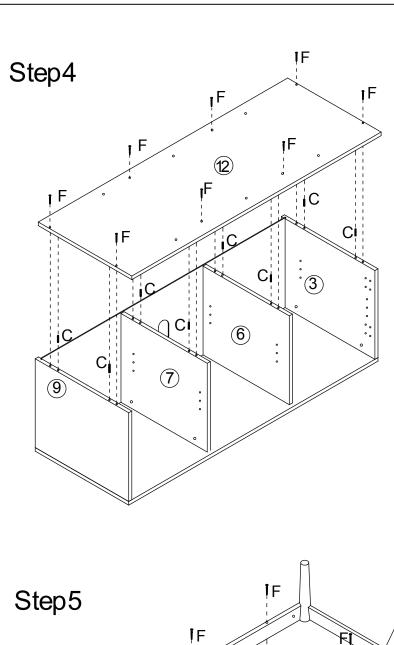

1. Attach lower panel (2) to assembly using dowels (C) and large screws (F).

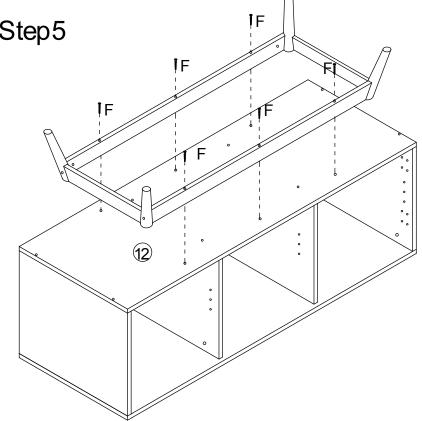


1. Attach leg frame from step 1 to unit using large screws (F).

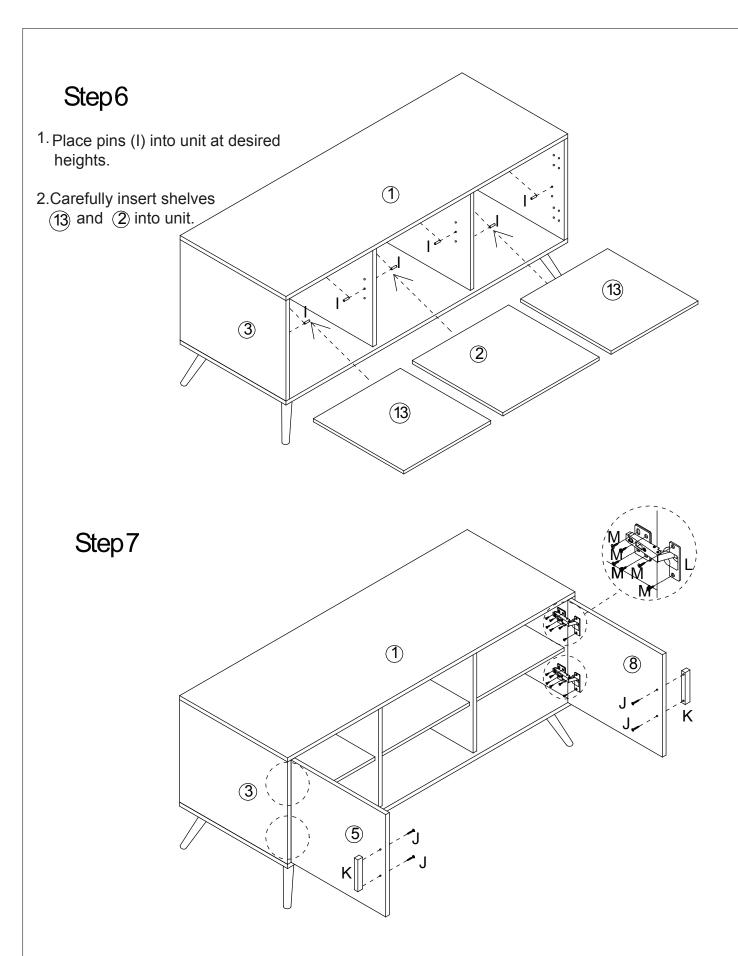

- 1. Attach handles (K) to doors 5 and 8 using handle screws (J) .
- 2. Attach hinges (L) to doors and unit using hinge screws (M) as shown.

Step8

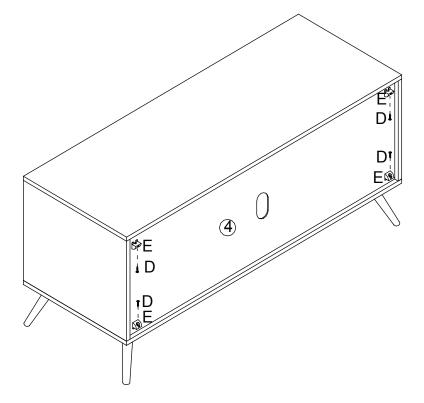

- 1. Attach back panel $\ensuremath{\textcircled{4}}$ to unit using anchors (E) and anchor screws (D) .
- 2.Enjoy.