

ASSEMBLY INSTRUCTIONS



LIBERTY LATTICE AC SCREEN KIT

$45 \ MIN \ {}^{\text{approximate assembly}}_{\text{time for 3 panels}}$



6935 Reames Rd. Ste. K. Charlotte, NC 28216

support@zippity-outdoor.com



704-892-5222 / 877-234-6196

GENERAL INFORMATION



IMPORTANT

- Please read through before starting assembly.
- Important: Check the inside of the larger pieces in your box for other materials packed inside.
- When assembling components, place on a non-abrasive surface (i.e. shipping box) to avoid scratching.
- We recommend an area approx 5'x 8' for unobstructed assembling.
- You should not need to use excessive force when assembling components.

MISSING OR DAMAGED PARTS?

CALL US FIRST SO WE CAN HELP YOU RIGHT AWAY!

Although great care has been taken to ensure proper packaging and handling of this product, occasionally problems occur. If you discover any missing, damaged or defective parts, please contact our customer service department.

EMAIL: support@zippity-outdoor.com



PHONE: 704-892-5222 / 877-234-6196

Customer service agents are available to take calls weekdays from 8am-5pm EST.

To help you quickly and accurately, please have reference item number <u>ZP19052</u> and the specific part name which can be found on the next page. It is helpful if you can provide the batch lot which is a stamped number on the end of the box.

NEED ASSEMBLY HELP?

If you are having problems with the assembly or installation of this product, we are happy to assist you with the process, so please give us a call at 704-892-5222 / 877-234-6196.

NEED TO RETURN?

If for some reason you need to return this product, please allow us to help resolve your issues first. If you still decide to return the product, you will need to intitate the return from the company you originally purchased from.

STEP 1: LAY OUT MATERIALS

LIBERTY LATTICE AC SCREEN KIT 3 PANEL



TOOLS YOU WILL NEED

- AR

Tape Measure

STEP 2: ASSEMBLE THE HORIZONTAL PICKETS



Identify the horizontal top rail - front (F) and the horizontal bottom rail - front (D) as shown below. Pressure fit two loose rail end caps (B) into the ends of each rail. Set these rails aside for now.



STEP 3: ATTACH THE VERTICAL PICKETS

STEP 3.1

- **1.** Take one of the horizontal bottom rails front (D) and slide it up over the posts as illustrated. Ensure the routed picket holes in the rail are facing up.
- **2.** Align the pre-drilled holes in the posts and the rail.

3. Drive a ¾" screw (J) in each of the pre-drilled holes on the front and back of the rail (4 total).



STEP 3.2

Insert the eight vertical pickets (I) into the routed picket holes in the rail.



STEP 4: COMPLETE THE PANELS



STEP 4.12. Guide the pickets into the top rail and slide it down until the pre-drilled holes in the rail align with the holes in the post.





6

Repeat Steps 2-4 to create the other two screen panels. The other two panels will use side horizontal rails that have extra holes at the ends.



STEP 5: CONNECT THE PANELS



2. Drive (4) 4" screws (K) into the pre-drilled holes in the top and bottom rail.

3. Repeat this process on the other side with the third screen as shown below.



STEP 6: INSERT THE POST CAPS

STEP 6.1

STEP 5.1

Insert (6) post caps (A) over the top of the posts to complete the screen.



OPTIONAL STEP 7: PURCHASE ROOF ACCESSORIES



These products can be found at www.zippity-outdoor.com.

Follow the instructions included with the optional accessory kits to assemble and install.

