


ASSEMBLY INSTRUCTIONS


DINING CHAIR

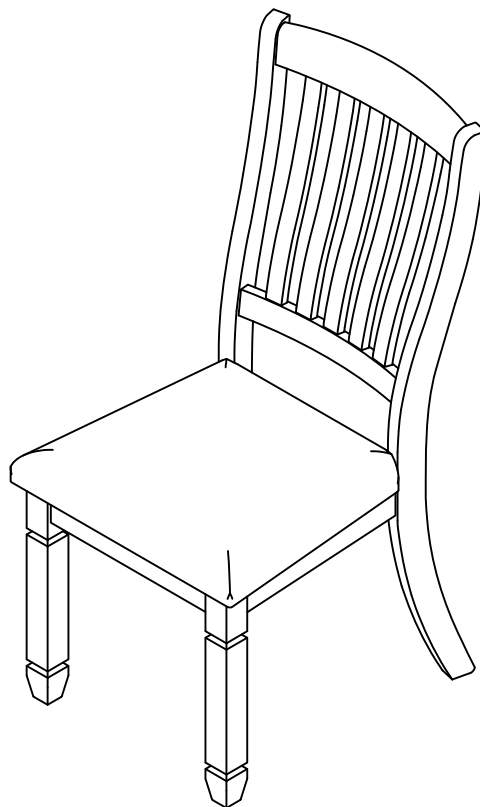

 



 

WF306328

IMPORTANT NOTE:



 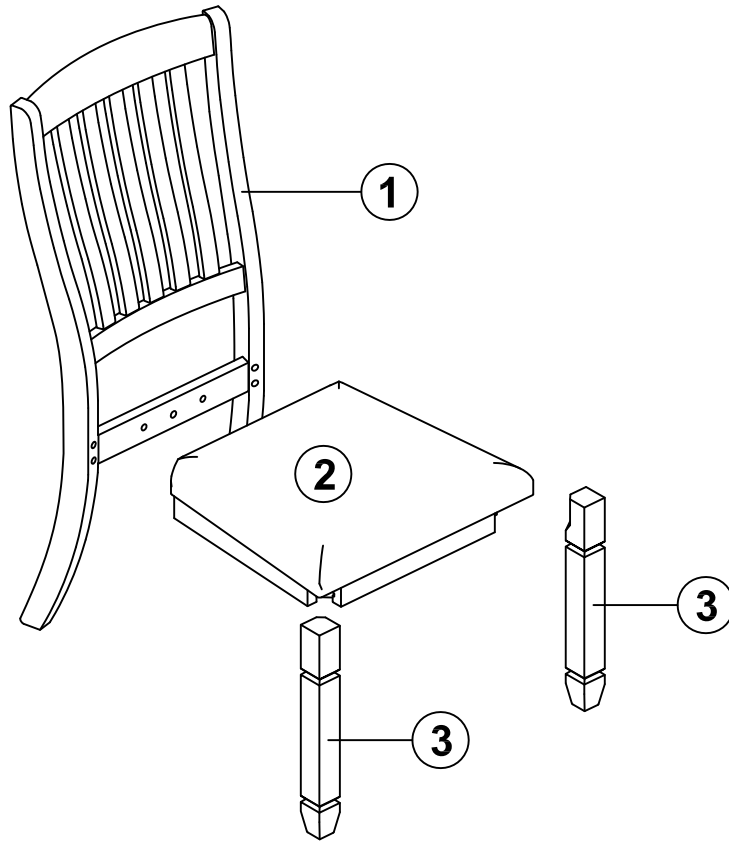
- ① PLACE ALL PARTS ON A CLEAN AND SMOOTH SURFACE SUCH AS A RUG OR CARPET TO AVOID THE PARTS FROM BEING SCRATCHED.
- ② BEFORE YOU BEGIN, KINDLY FOLLOW THE ASSEMBLY INSTRUCTIONS STEP BY STEP.
- ③ DO NOT TIGHTEN ALL SCREWS AND BOLTS UNTIL THE CHAIR IS FULLY SET-UP.




Hardware List For One Chair



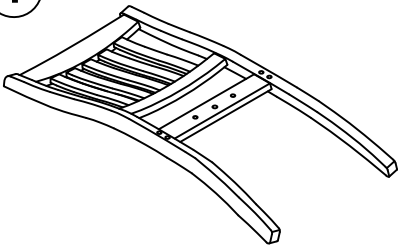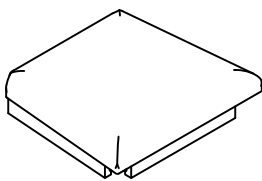

<p>A</p>  <p>Ø1/4"x 85mm</p>	<p>D</p>  <p>Ø1/4"x 11mm</p>
<p>BOLT (4pcs)</p>	<p>LOCK WASHER (10pcs)</p>
<p>B</p>  <p>Ø1/4"x 60mm</p>	<p>E</p>  <p>Ø1/4"x 19mm</p>
<p>BOLT (4pcs)</p>	<p>FLAT WASHER (10pcs)</p>
<p>C</p>  <p>Ø1/4"x 38mm</p>	<p>F</p>  <p>4mm</p>
<p>BOLT (2pcs)</p>	<p>ALLEN KEY (1pc)</p>

Part List For One Chair

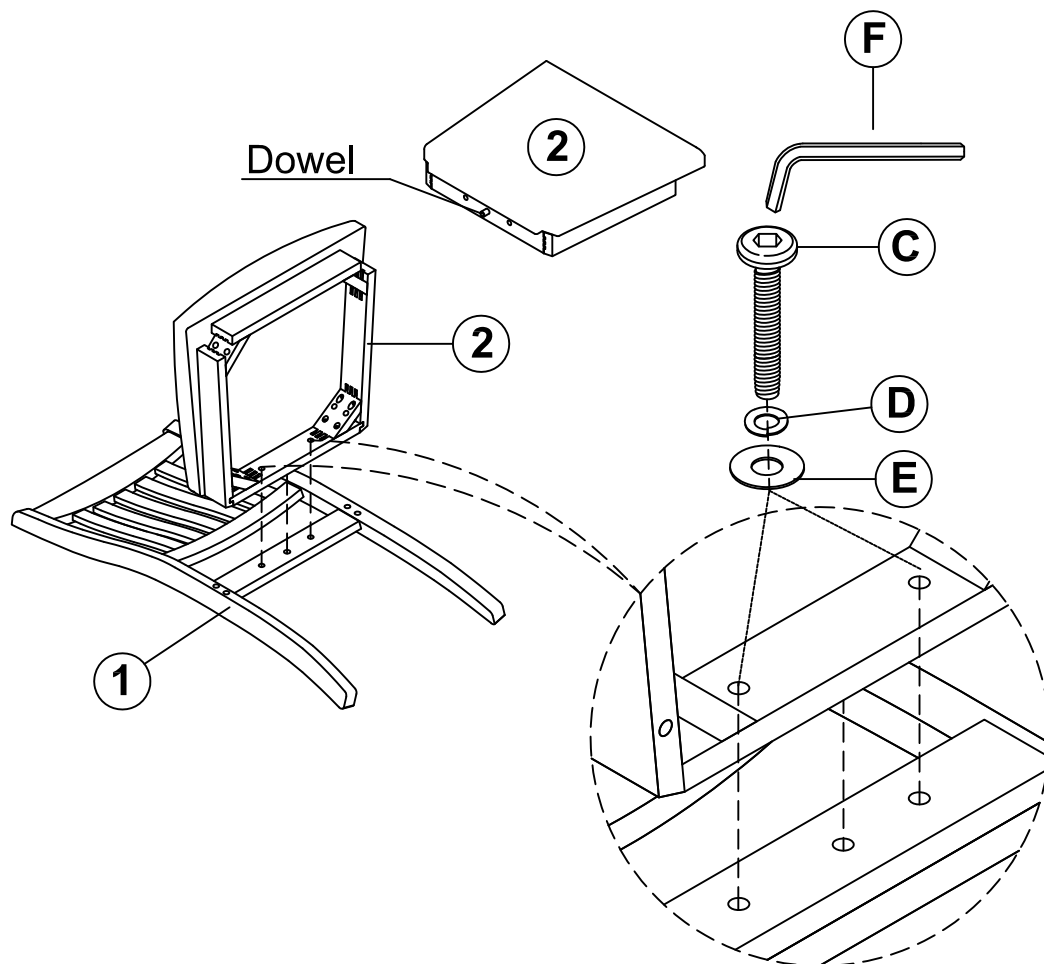
1 	2 	3 
BACK FRAME (1pc)	SEAT FRAME (1pc)	FRONT LEG (2pcs)





Step 1

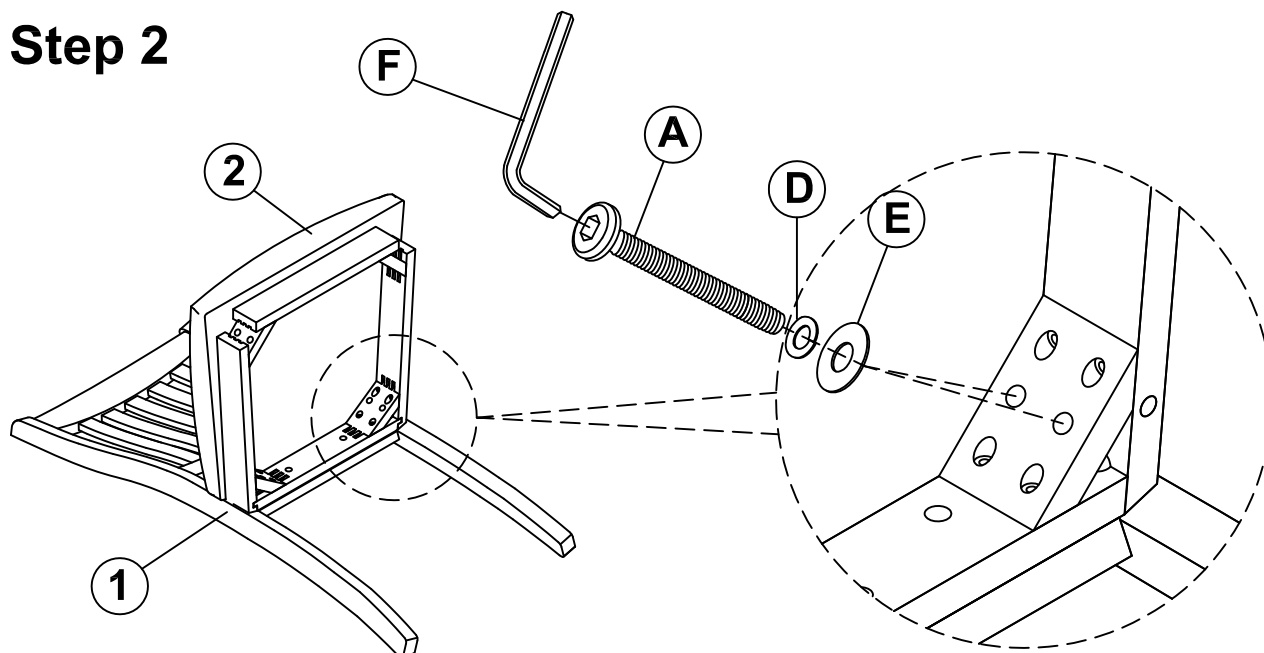


C	Ø1/4"x 38mm		2pcs	E	Ø1/4"x19mm		2pcs
D	Ø1/4"x11mm		2pcs	F	4mm		1pc





Step 2

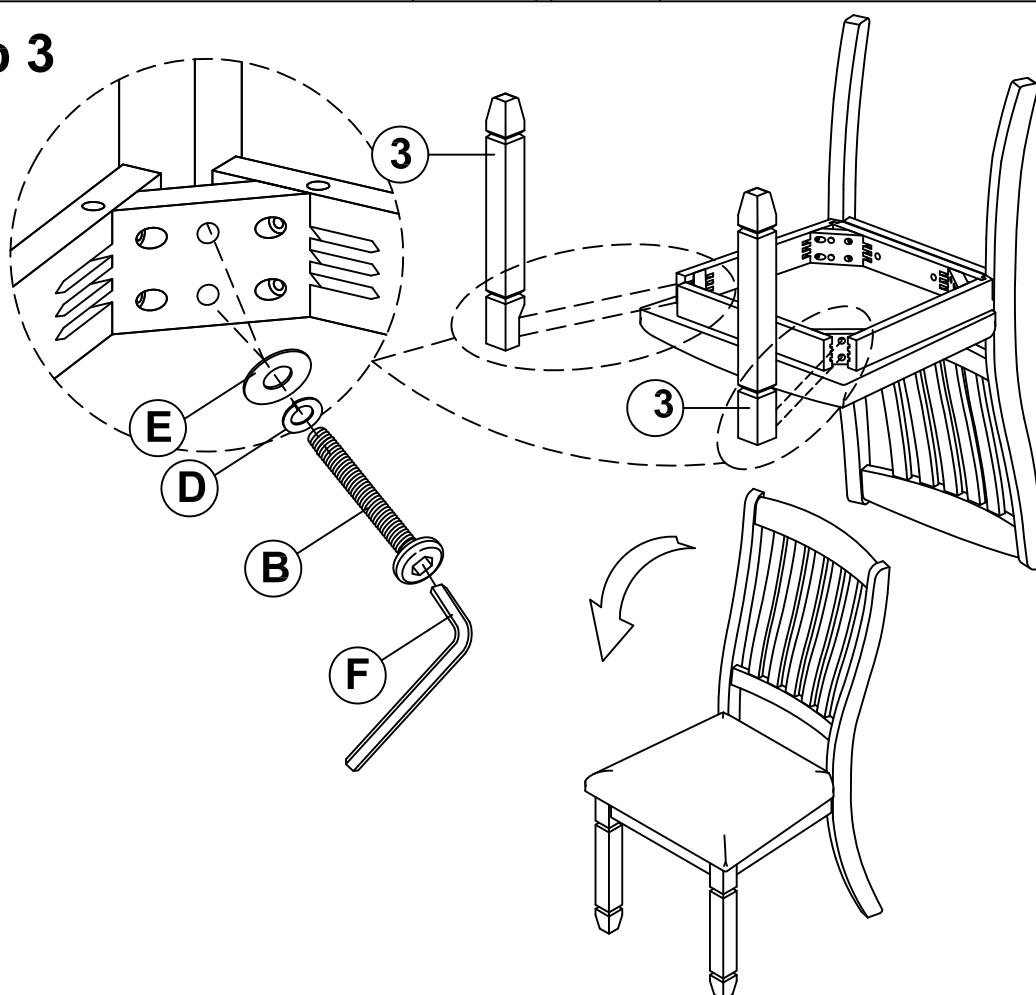

A	Ø1/4"x 85mm		4pcs	E	Ø1/4"x19mm		4pcs
D	Ø1/4"x11mm		4pcs	F	4mm		1pc

Step 3



B	Ø1/4"x 60mm		4pcs	E	Ø1/4"x19mm		4pcs
D	Ø1/4"x11mm		4pcs	F	4mm		1pc