

## What to expect during Serene Steam use



Serene Steam will occupy your entire shower enclosure with hot water vapor (steam), and aromatherapy during use. It is designed to project the heat from your water heater continuously into your shower enclosure and gain momentum while operational. We refer to this as **zone 1**. (your entire shower enclosure).

### Where Serene Steam really shines is within zone 2

(Both zone 1 and zone 2 are produced simultaneously as the system is operational). **Zone 2** is the environmental area within your shower enclosure where the maximum heat output from the system can be felt. To experience the maximum heat that the system is capable of producing, you should be seated on a spa bench (permanent or mobile) as the system will project the heat directly on to your body, we also refer to this as the "Intense heat zone", and this can only be experienced while seated and facing the system for its intended use. Within this zone, you should be experiencing temperatures within the range of approximately 95-105 degrees F, and capable of higher, depending on the size of your shower.