

Cleaning & Care Instruction

Hardware may loosen overtime. Periodically check that all connections are tight. Wipe with a soft, dry the use of chemicals and household cleaners. All hot serving dishes should be placed on a pad.