

ASSEMBLY INSTRUCTION

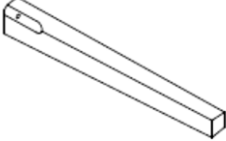
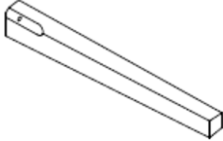
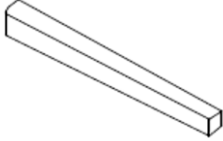
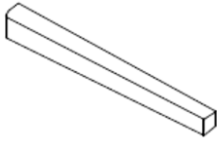
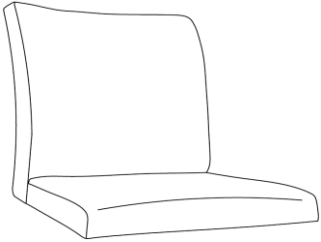




Item No : **103398**

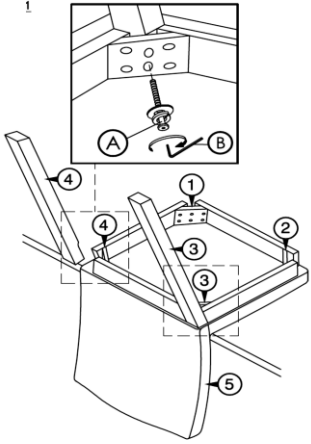
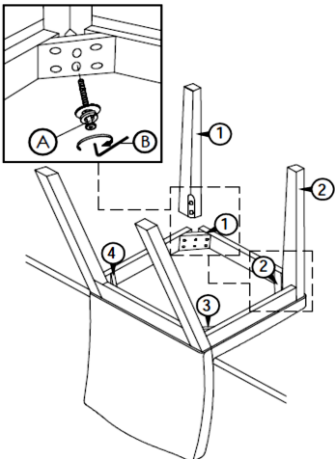

Product Name: **BRANSON DINING CHAIR- DARK GREY**

PARTS LIST

Before you begin, please layout all parts and ensure you have the correct count.

NO.	DESCRIPTION	QUANTITY	ILLUSTRATION
1	Front Leg (Right)	1	
2	Front Leg (Left)	1	
3	Back Leg (Right)	1	
4	Back Leg (Left)	1	
5	Seat	1	
A	JCBC M6 x 60mm + S/W M6 + F/W M6 x 19mm	8	
B	Allen Key M4	1	

ASSEMBLY INSTRUCTIONS

STEP	DESCRIPTION	ILLUSTRATION
1	Place the Seat (5) upside down on a clean Table Top and fix the Back Leg (4&3) into the corner block as shown. Then, fix the JCBC Bolt (A) into Back Leg (4&3) and tighten it by using Allen Key (B).	
2	Repeat Step 1 for Front Leg (Right) (1) and Front Leg (Left) (2) on the corner block as shown. Fix the Front Leg (1&2) with JCBC Bolt (A) by using Allen Key (B). Fully tighten the bolt now.	
3	Assembly completed.	

ASSEMBLY TIPS:

Please check parts and hardware before assembling. Follow each instruction step by step.
Place a protective pad or piece of cardboard on the floor while assembling your item on top of it.
Remove all parts from the carton and separate them into part numbers/groups as indicated on the part list.
Please follow instructions in the sequence as numbered to assure fast/easy assembly.

WARNING:

Don't attempt to repair or modify parts that are broken or defective - if you find a broken part please contact us for replacement.
Keep all hardware parts out of the reach of children.

FURNITURE CARE:

Following these few basic steps will help to ensure that you enjoy your furniture for a long time:
Do not expose your furniture to direct sunlight, dampness or any heat, like a hot cup of coffee or tea. Always use a coaster.
Excessive exposure to sunlight may cause fading.
Excessive temperature and humidity or cold may cause cracking or splitting.
Dust with a clean, damp, lint free cloth.
Use a damp cloth with water or mild detergent to clean all surfaces - do not use chemicals or paint thinner which will fade the surface.
Place a piece of felt or a pad under the legs of your furniture to avoid scratching the floor.