MODEL : BBT 8051.11 A1 - SF

STEP 1

ASSEMBLY INSTRUCTIONS

Read this instruction carefully. See hardware and furniture part list for guidance. Be sure all parts are complete, before you assemble. Place all wooden furniture parts on a clean and flat soft surface to prevent from being scratched. Follow the figure to start assembling.

CAUTIONS : 1. Do not FULLY - TIGHTEN the nut or nut bolt until all nut or bolt is ready assembed. 2. Do not OVER - TIGHTEN the nut or bolt to avoid causing damages to the thread. 3. Keep all hardware parts out of reach of children.

NOTE : THE LIST AND QUANTITY SHOWN ARE FOR 1 UNIT ASSEMBLY. Tool needed : Screwdriver & Rubber Mallet (not provider).









MODEL : BBT 8051.11 A1 - SF

Read this instruction carefully. See hardware and furniture part list for guidance.

ASSEMBLY INSTRUCTIONS

QTY

4pcs

8pcs

8pcs

4pcs

8pcs

10PCS

()_____()

A______

 \odot

A_mmm

HARDWARE LIST

DESCRIPTION

JCBC Bolt M6 x 50mm

JCBB Bolt M8 x 45mm

M6 SPRING WASHER

M8 SPRING WASHER

WOOD SCREW M4 x 38mm

M8 FLAT WASHER

PART LIST Be sure all parts are complete, before you assemble. Place all wooden furniture ITEM DESCRIPTION QTY parts on a clean and flat soft surface to prevent from being scratched. CUSHION BACK 1 PC А Follow the figure to start assembling. B CUSHION SEAT 1 PC CAUTIONS : 1. Do not FULLY - TIGHTEN the nut or nut bolt until all nut or bolt is ready assembed. С LEG SUPPORT FRONT 1 PC 2. Do not OVER - TIGHTEN the nut or bolt to avoid causing damages to the thread. D LEG SUPPORT BACK 1 PC 3. Keep all hardware parts out of reach of children. Е LEG LEFT 1 PC F LEG RIGHT 1 PC NOTE : THE LIST AND QUANTITY SHOWN ARE FOR 1 UNIT ASSEMBLY. G ARM 1 PC Tool needed : Screwdriver & Rubber Mallet (not provider). STEP 1 STEP 2 R FRONT FRONT BACK BACK FRONT



ITEM

1

2

3

4

5

6





3 OF 3