


WALKER EDISON
TM

Chantelle Glass Bookcase

SKU# WECHA410S3

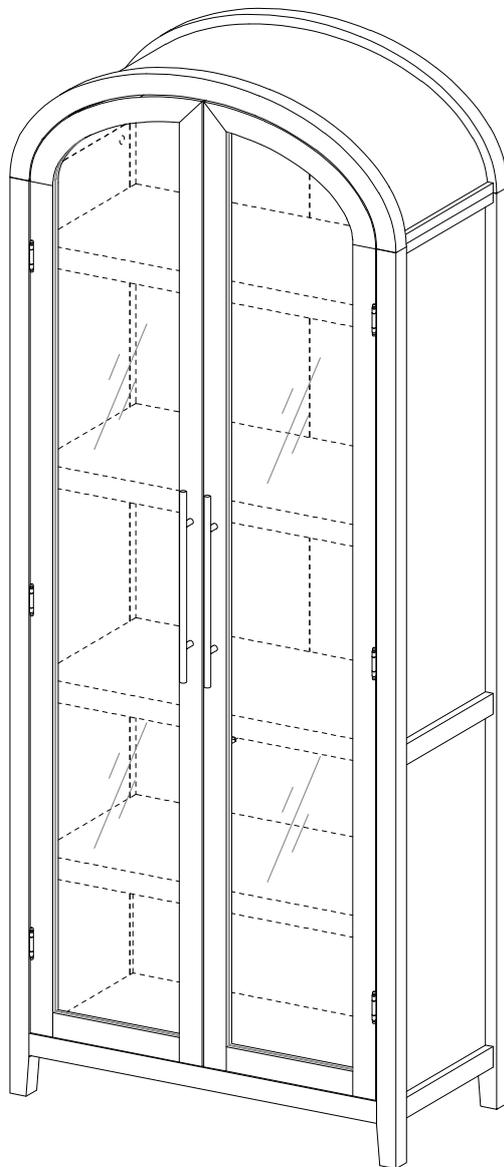

For Residential Use Only

Please visit our website for the most current instructions, assembly tips, report damage, or request parts. www.walker-edison.com



Time to get started


Set up a clean and soft workplace to get started and avoid damage during the assembly. It also helps to double-check you've got all the pieces and parts before diving in to assembly.

Estimated time for assembly



People recommended for assembly

Make it a team effort! Grab a friend for quicker, easier assembly.

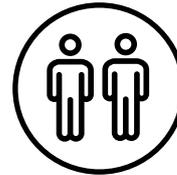

2 People Build


Tools Needed

Grab a Phillips head screwdriver to conquer this assembly




Use power tools with caution

You can cause cracking or damage to the material and easily strip the hardware. If you choose to use a power tool, your product will no longer be covered under Walker Edison's warranty.

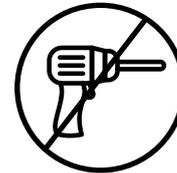

Glue is provided to secure wood dowels in place


When inserting dowels, locate the appropriate hole, place a small amount of glue in the hole, and then insert the dowel. Wipe away excess glue immediately.

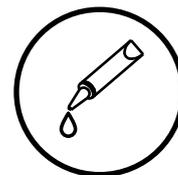





Scan to get assembly tips and help!

WE Parts List


Part Number	Description	Quantity
1	Left Panel	1
2	Right Panel	1
3	Top Arched Panel	1
4	Bottom Panel	1
5	Fixed Upper Shelf	2
6	Fixed Lower Shelf	1
7	Upper Back Panel	1
8	Middle Back Panel	1
9	Bottom Back Panel	1
10	Left Glass Door	1
11	Right Glass Door	1
12	Fixed Middle Shelf	1

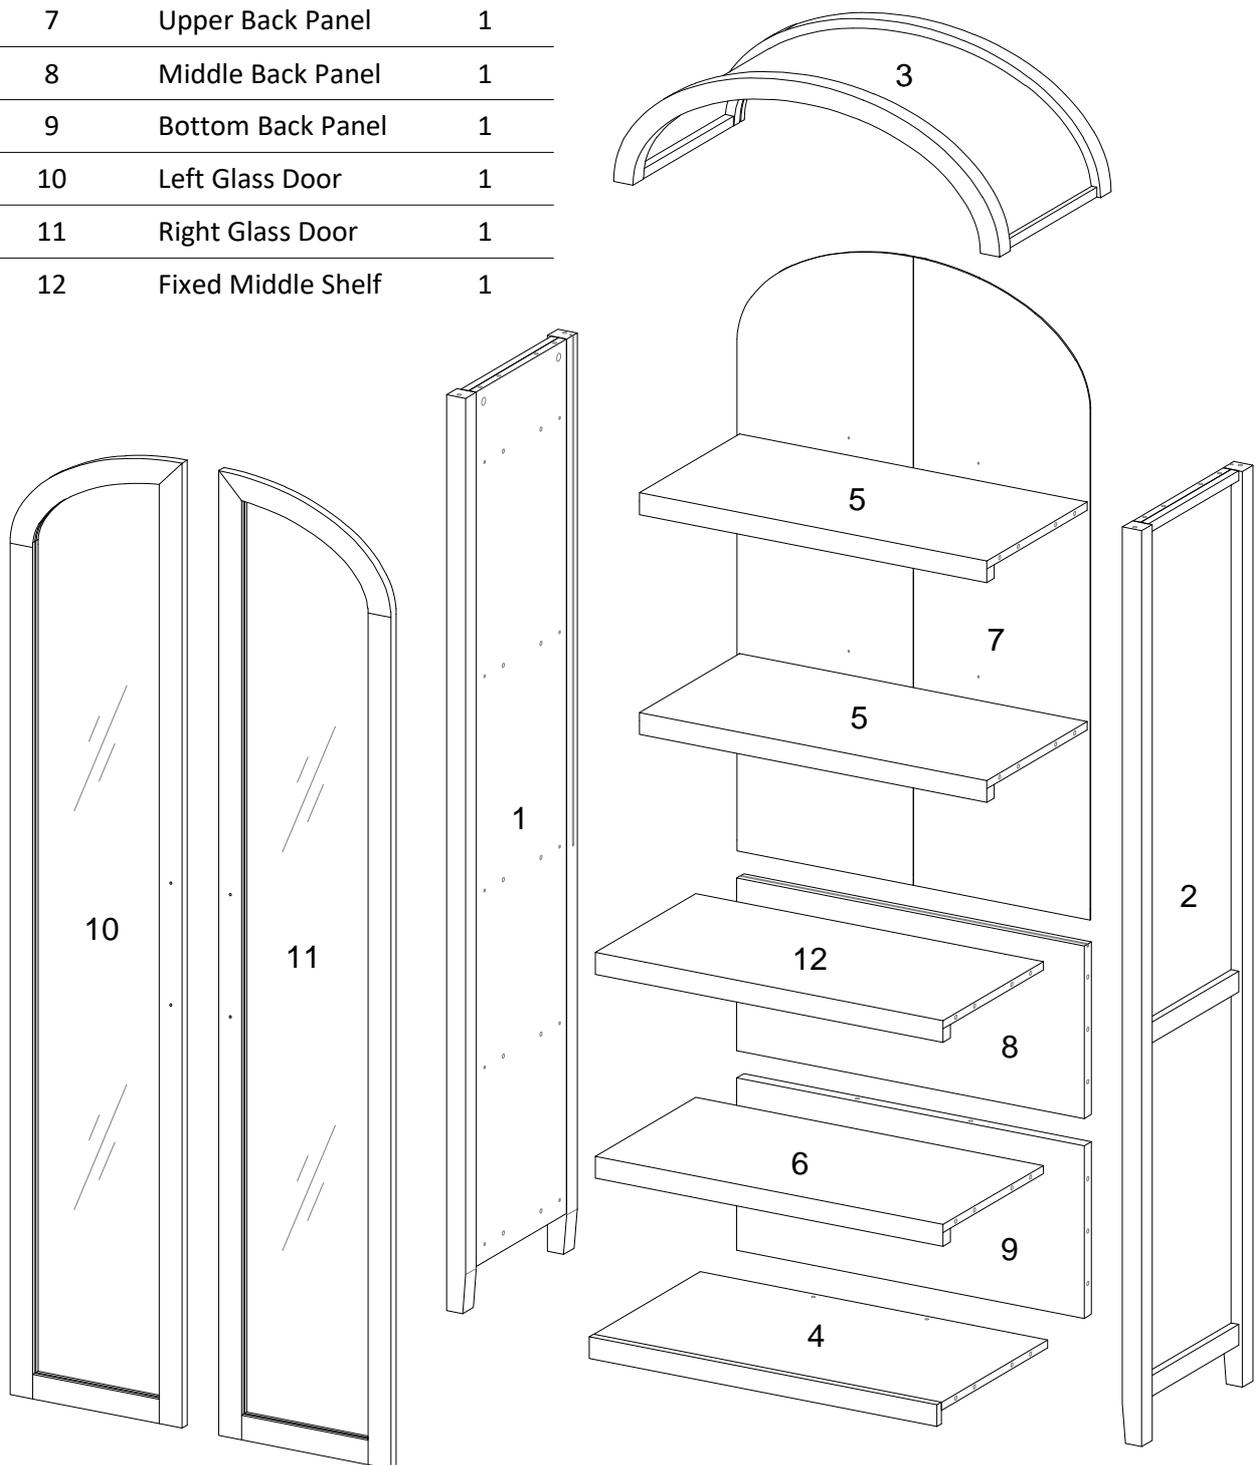

WE Hardware List

    Part	Size	Name	Quantity
A	 8x30mm	Wooden dowel	34
B	 6x35mm	Cam Bolt	32
C	 15x11mm	Cam Lock	32
D		Plastic Wedge	8
E	 3x17mm	Screw	8
F	 3.5x15mm	Screw	4
G		Handle	2
H	 5/32"x20mm	Bolt	4
J		Hinge	6
K	 3.5x15mm	Screw	36
L		Door stopper	4
M		Metal piece	4
N	 3x12mm	Screw	4

 
WE Hardware List

Part	Size	Name	Quantity
P	 4x25mm	Screw	1
Q	 4x15mm	Screw	1
R	 Wall Anchor	Wall Anchor	1
S	 Plastic strap	Plastic strap	1
T	 30mm	Sticker	34
U	 Glue tube	Glue tube	2
V	 3x15mm	Screw	8
W	 6x50mm	Bolt	2
X	 M4x57mm	Hex Key	1

The hardware quantities listed above are required for proper assembly.
Extra hardware pieces may be included.


Step 1

Let's get started, shall we? Start by screwing Cam Bolts (B) into the Left Panel (1) and Right Panel (2). Place Wooden Dowels (A) into the dowel holes at the top of both panels.

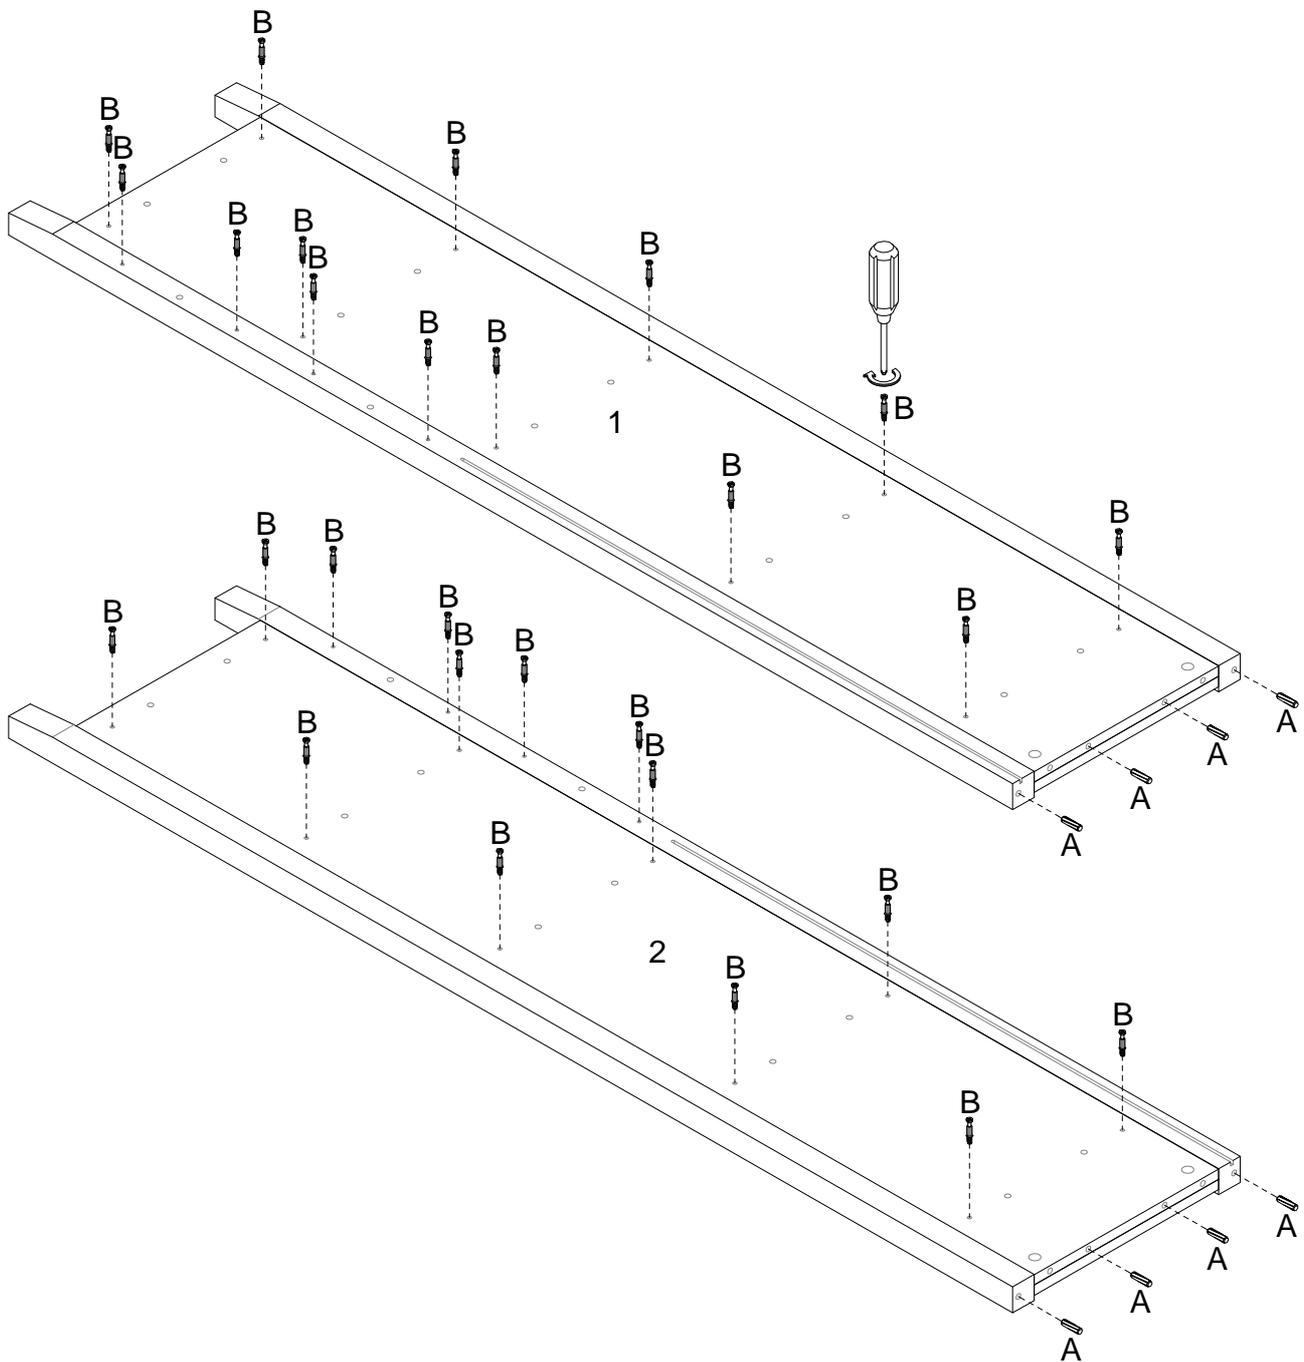


Step 2

Using a screwdriver, screw Cam Bolts (B) into the Top Arched Panel (3). Then, attach the Door Stoppers (L) using 15mm Screws (V).

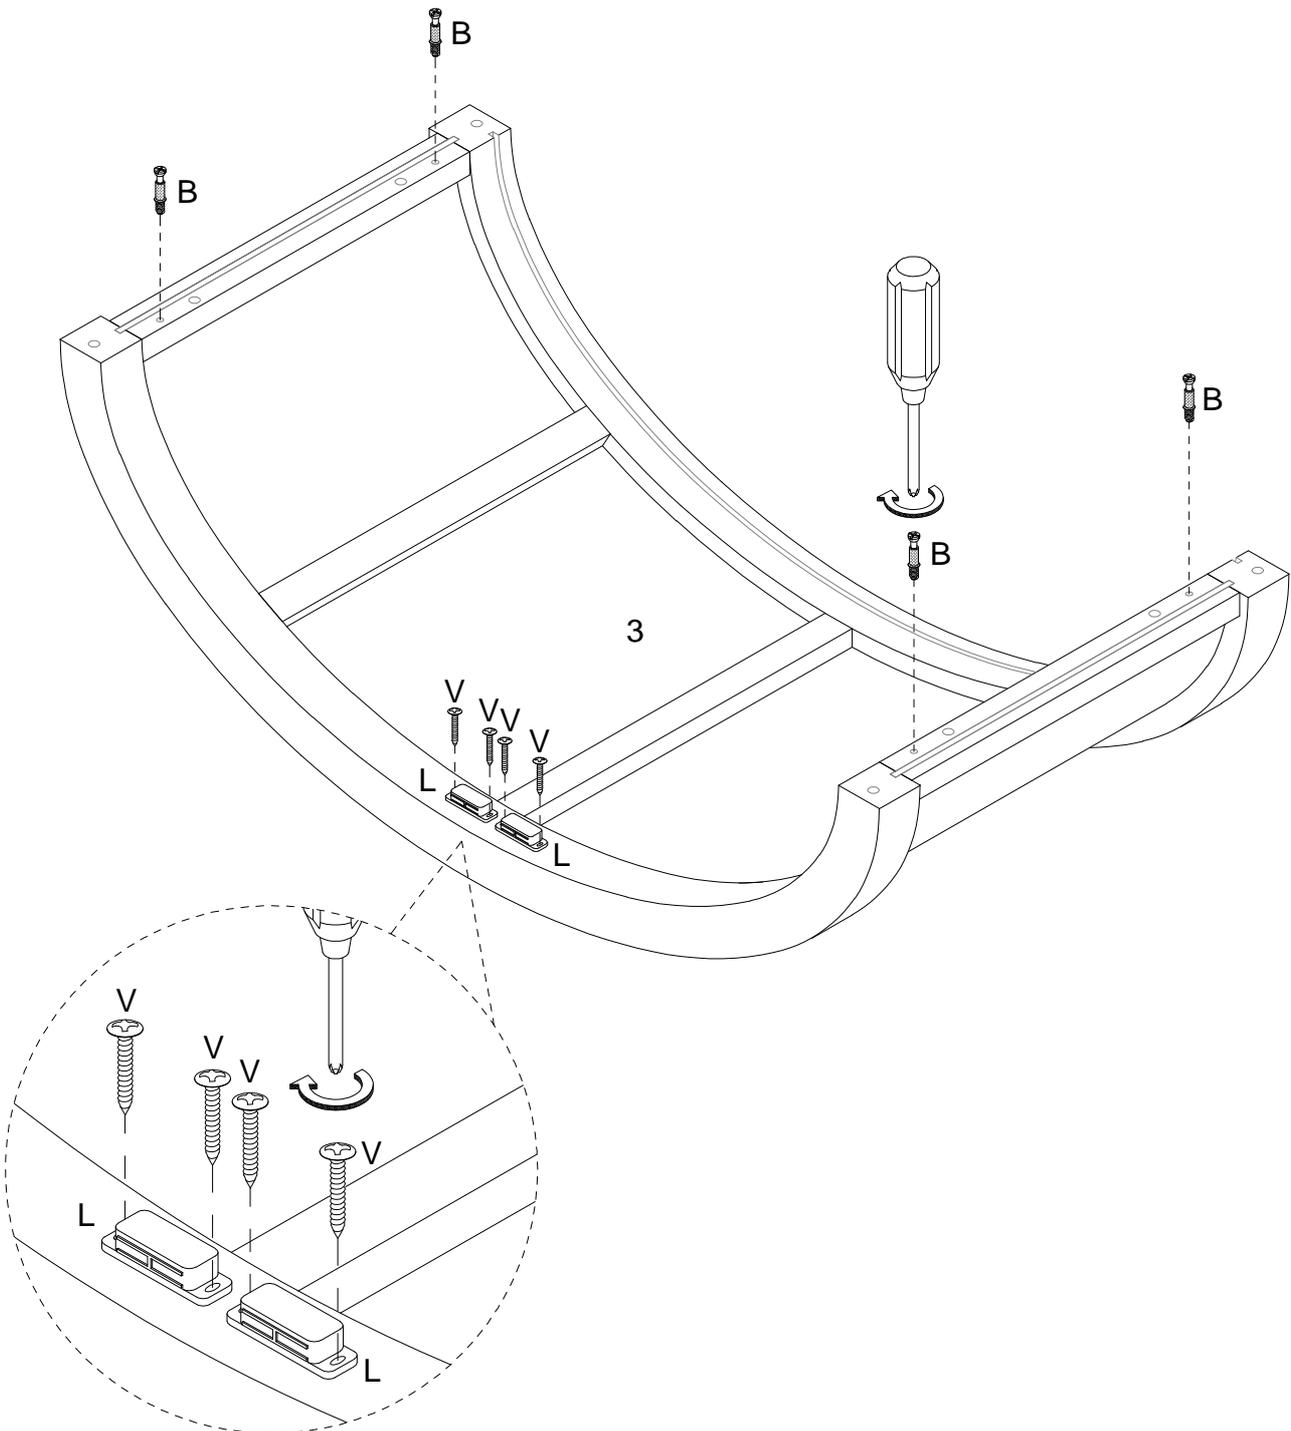


Step 3

Now you will insert the Wooden Dowels (A) into the dowel holes on the two Fixed Upper Shelves x2 (5) and the Fixed Middle Shelf (12). Next, attach the Door Stoppers (L) using 15mm Screws (V).

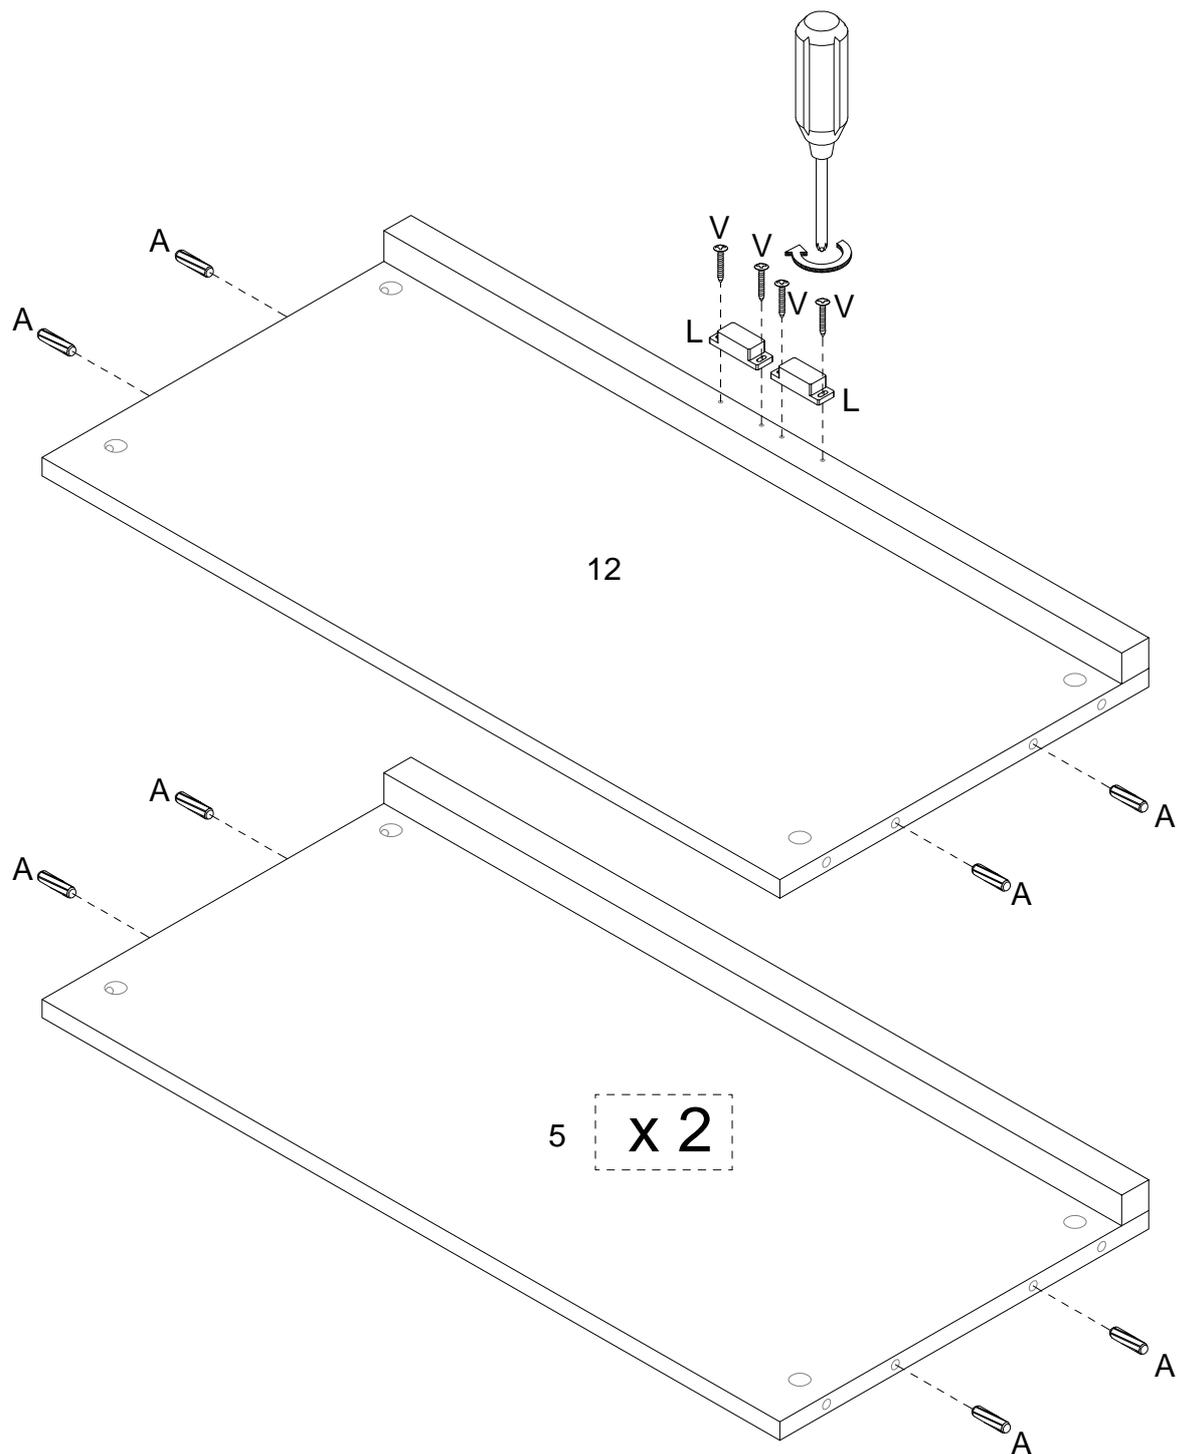


Step 4

Next, place the Wooden Dowels (A) into the Fixed Lower Shelf (6) and Bottom Panel (4).

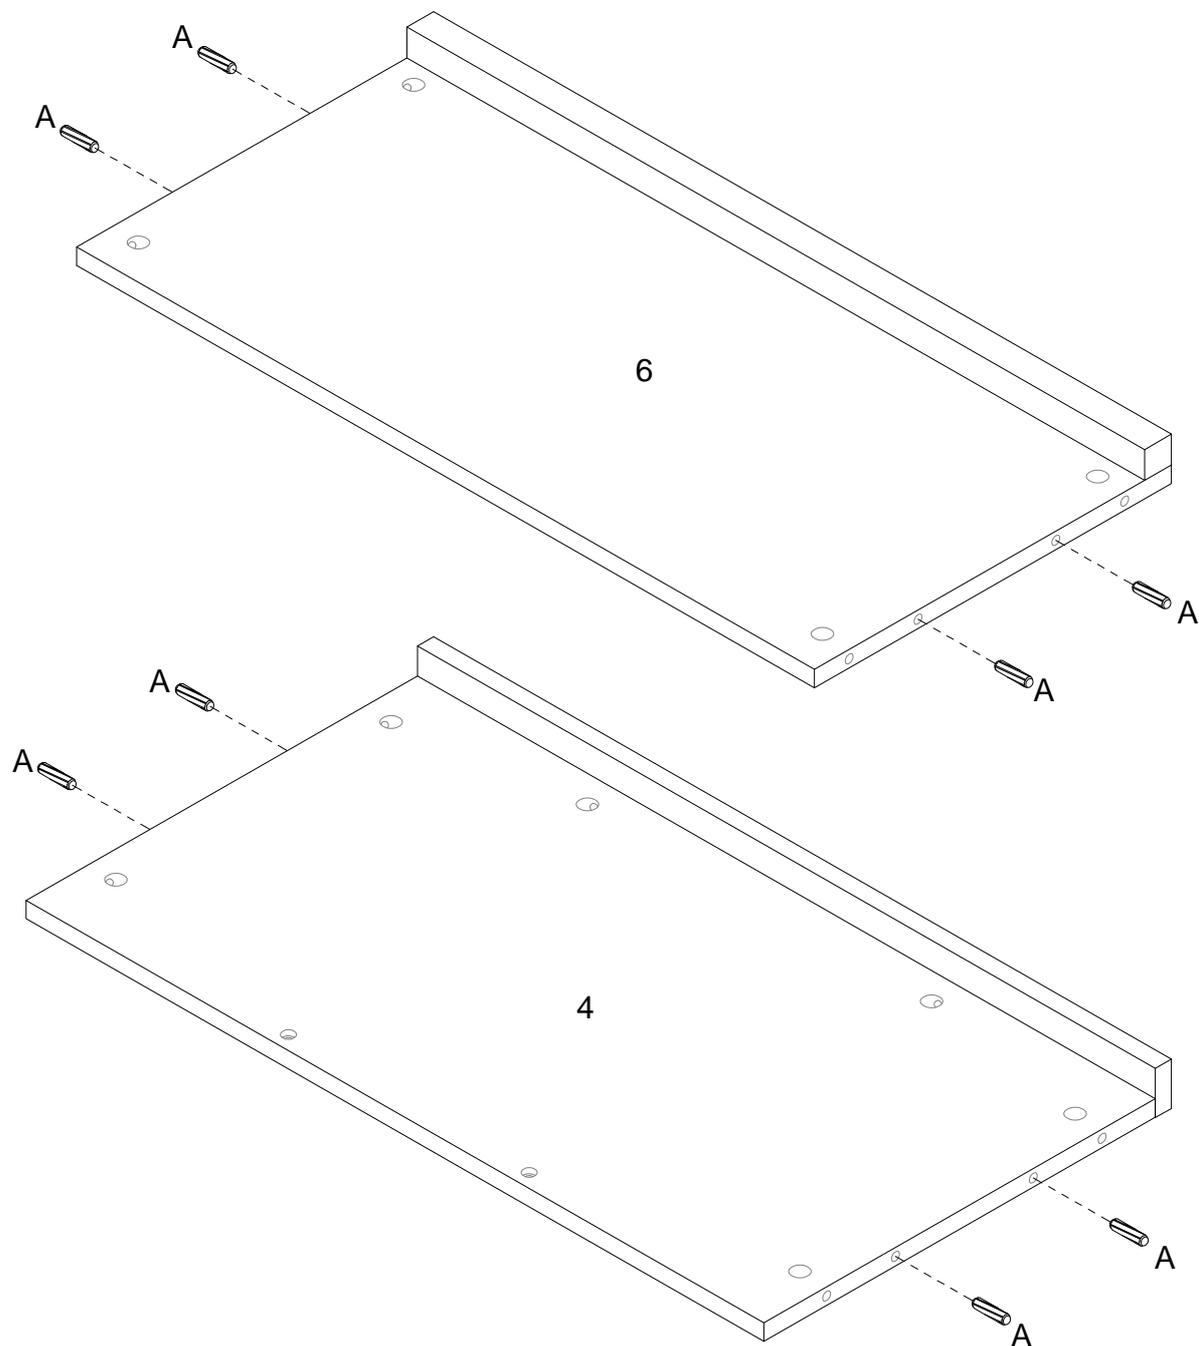


Step 5

Insert Wooden Dowels (A) into the Middle Back Panel (8) and Bottom Back Panel (9).

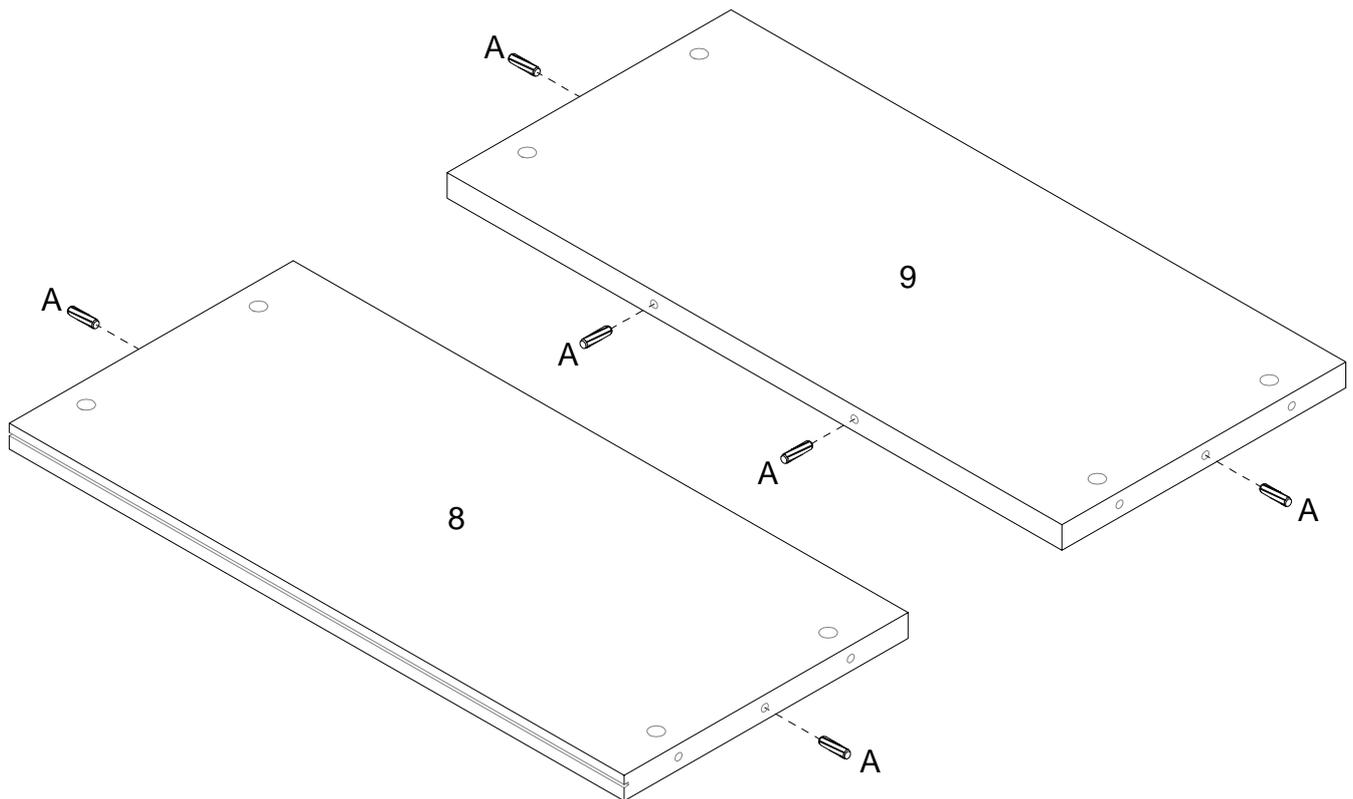



Step 6

Place both Middle Back Panel (8) and Bottom Back Panel (9) together.

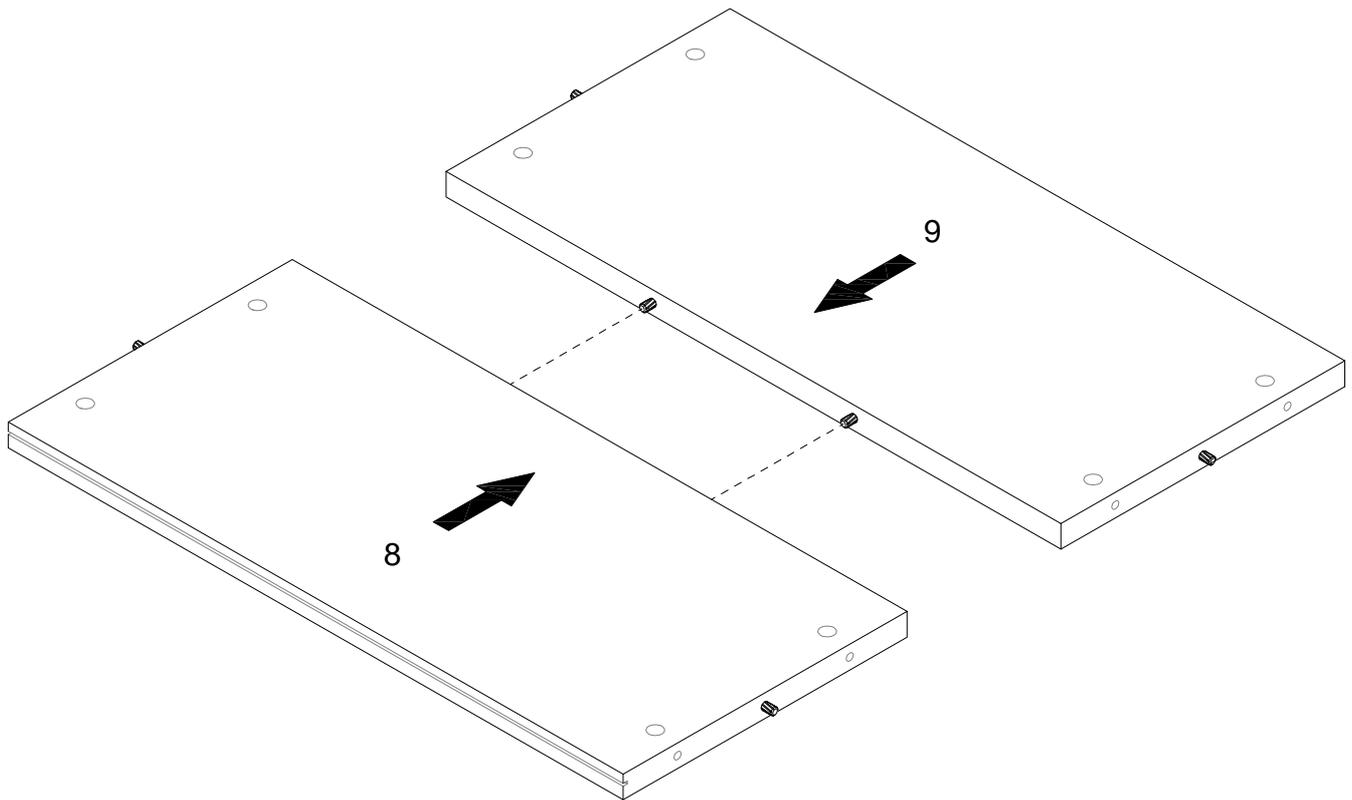

Step 7


Insert Shelf Panels (5), (6), (12) & (4) into the Right Panel (2). Ensure that Shelves are in the correct order and that the Front Shelf Trim is facing forward. Secure Shelves to Panel using Cam Locks (C) and secure with a screwdriver.

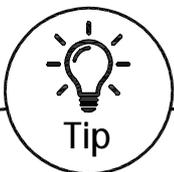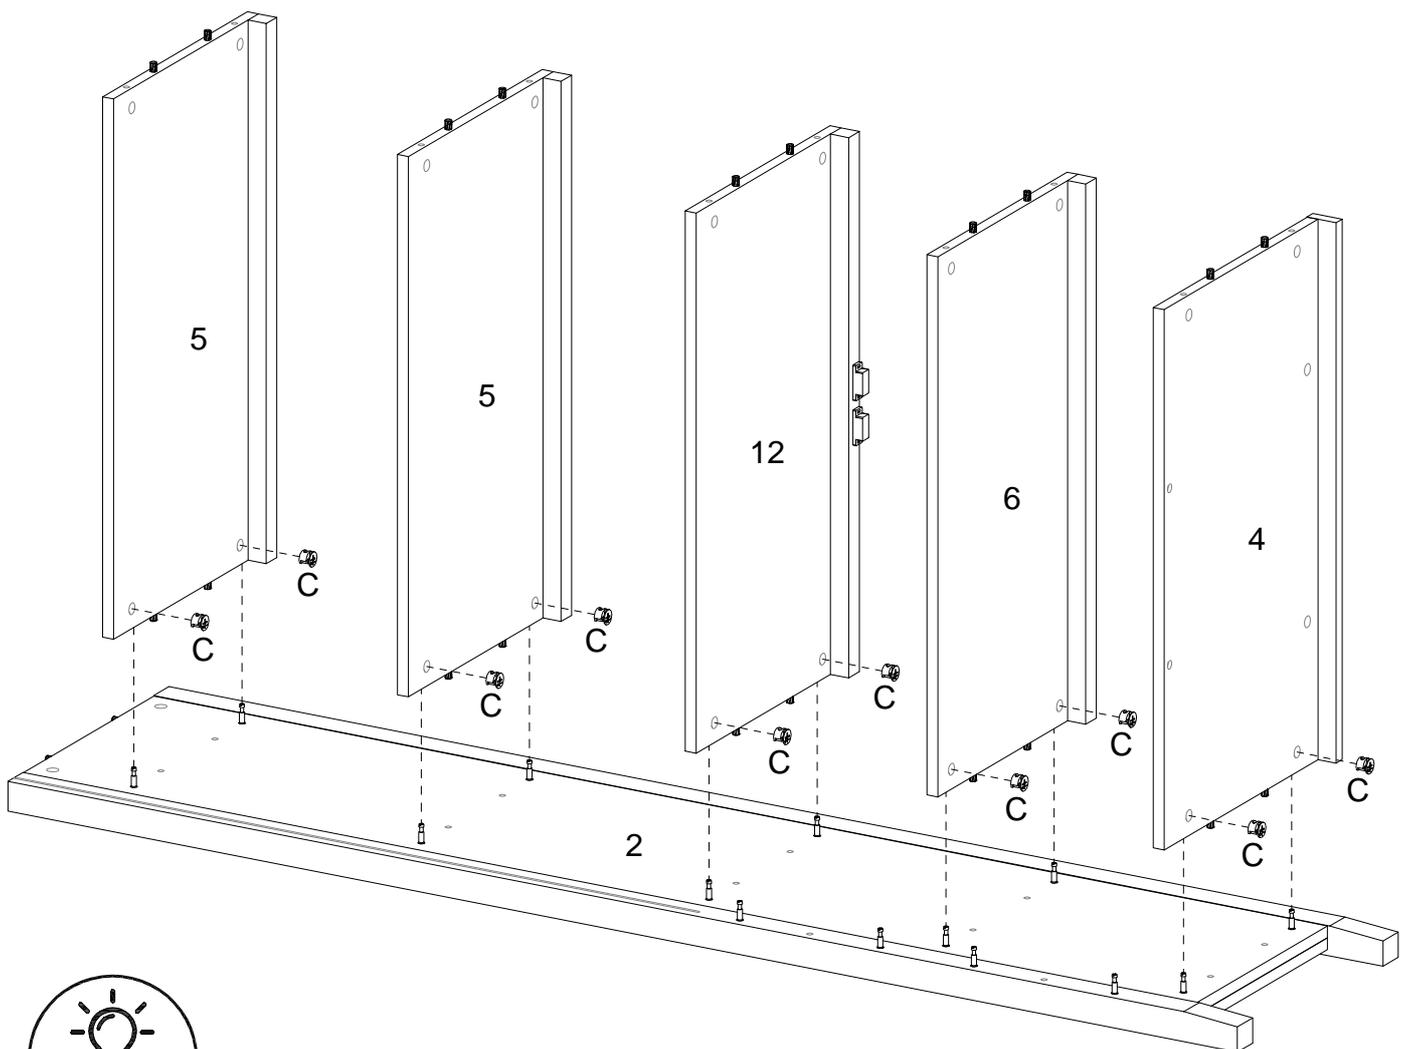


Tip

Cam Locks


Cam Locks help securely join two pieces together.
Follow these easy steps.

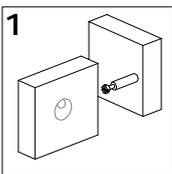

1: Insert Cam Bolt into bolt holes on the flat side. Don't over tighten!

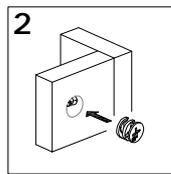


2: Fit the proper holes on the edge of the other part over the Cam Bolts. You should be able to see the cam bolts through the larger hole on the side.

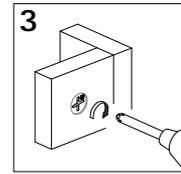

3: On the back of the Cam Lock will be a "C" shape. Insert the Cam Lock so the opening of the "C" fits over the Cam Bolt. Tighten with the screwdriver.


Step 8

Secure Middle Back Panel (8) and Bottom Back Panel (9) to the Right Panel (2) using Cam Locks (C). Secure with screwdriver.

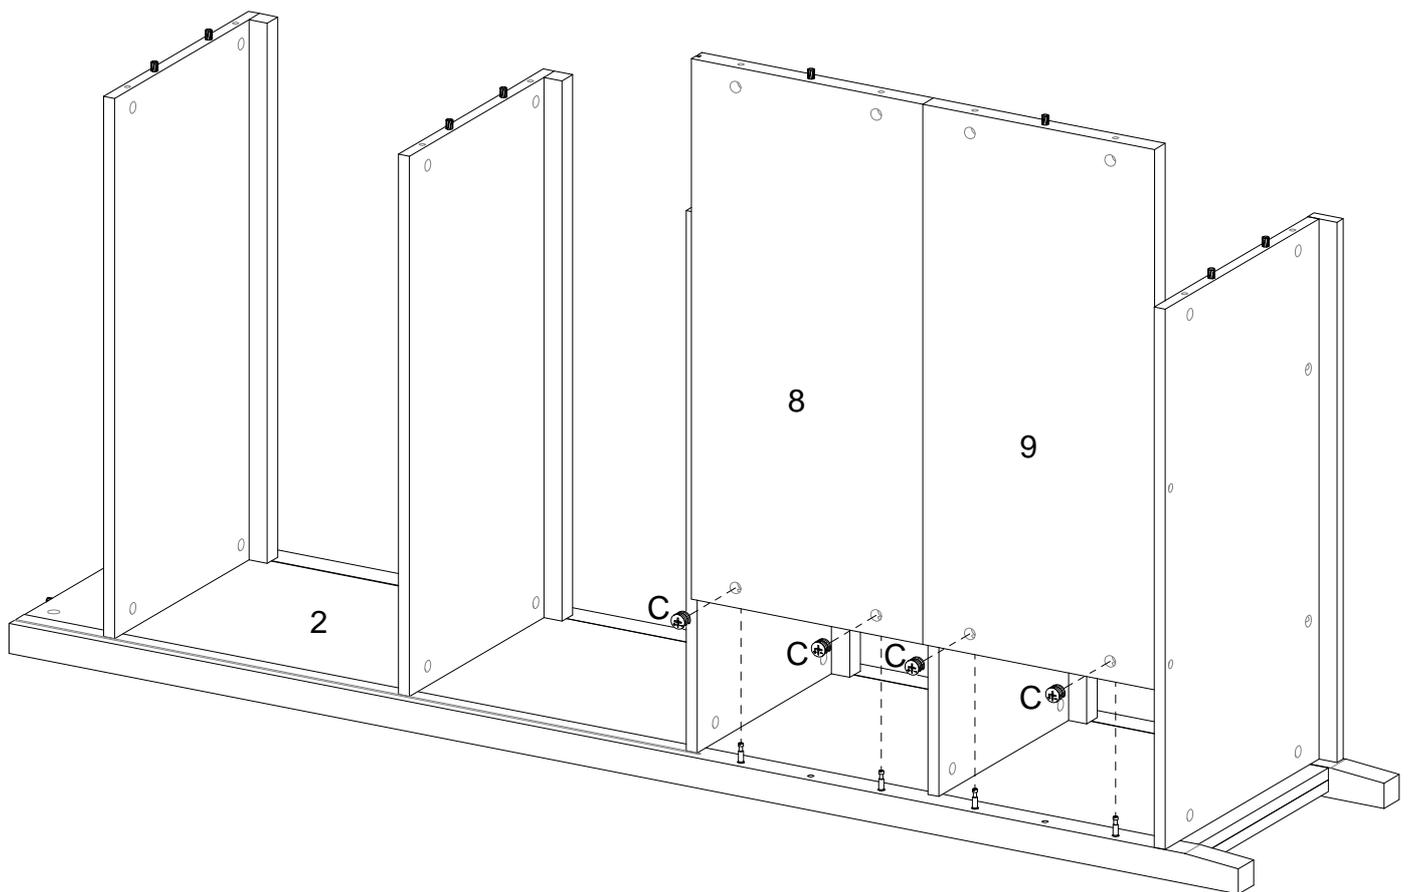


Step 9

Place the Left Panel (2) onto the Shelves. Secure with Cam Locks (C) and a screwdriver.

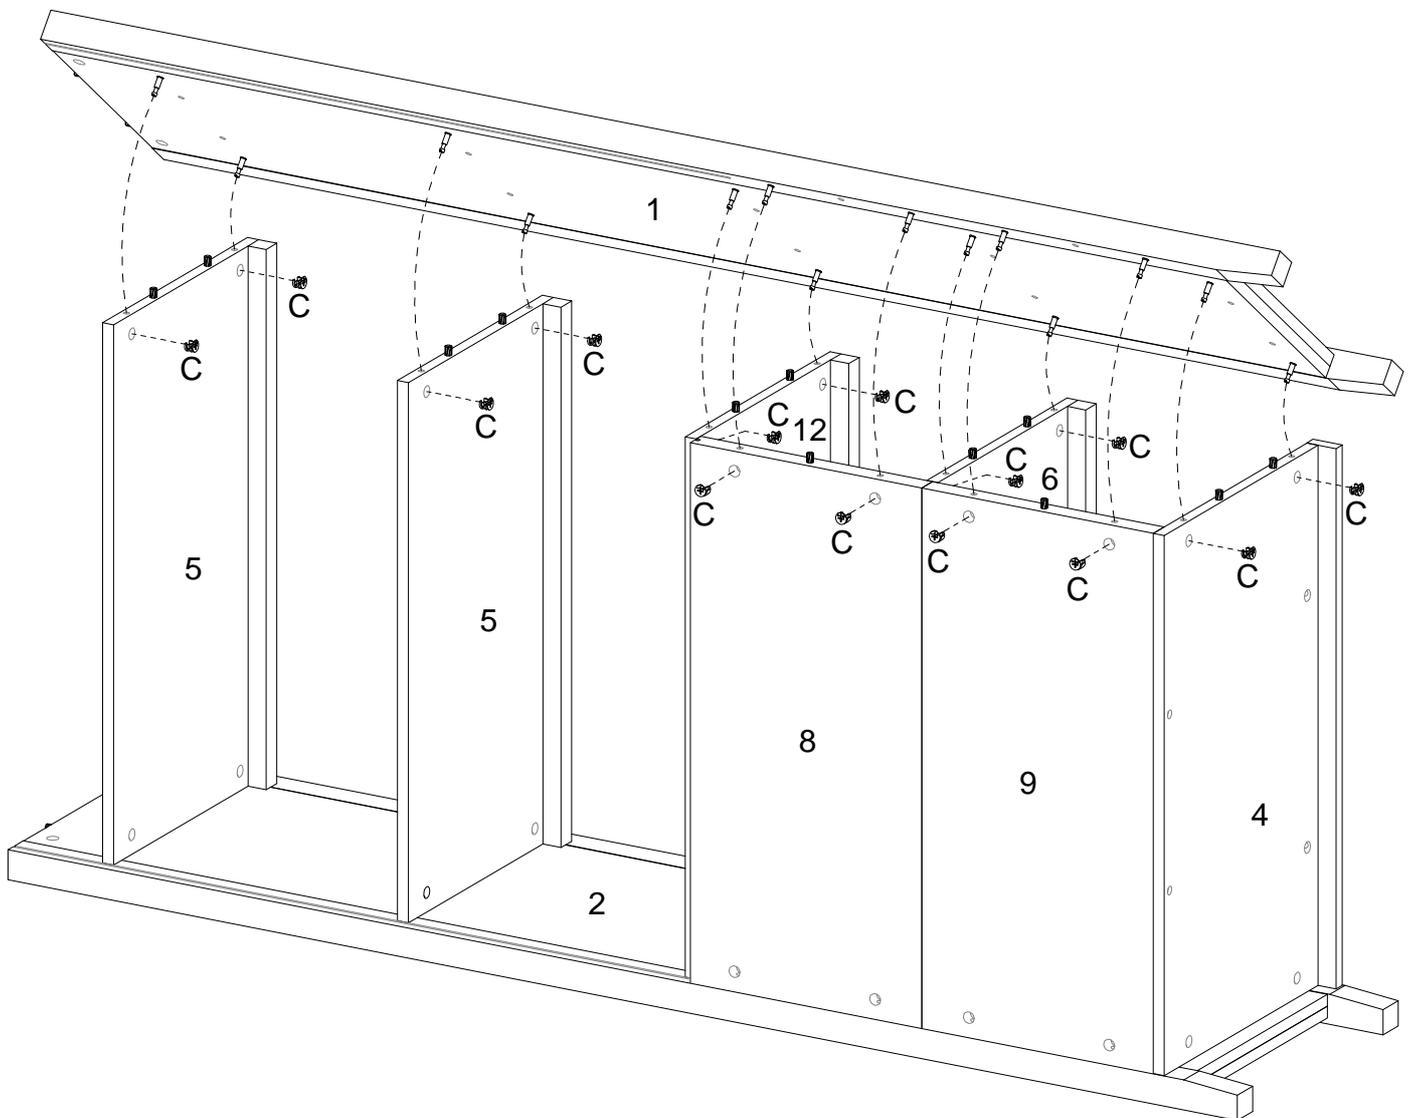


Step 10

Next, you will secure the bottom panel. Screw the 50mm Bolts (W) into the Bottom Panel (4).

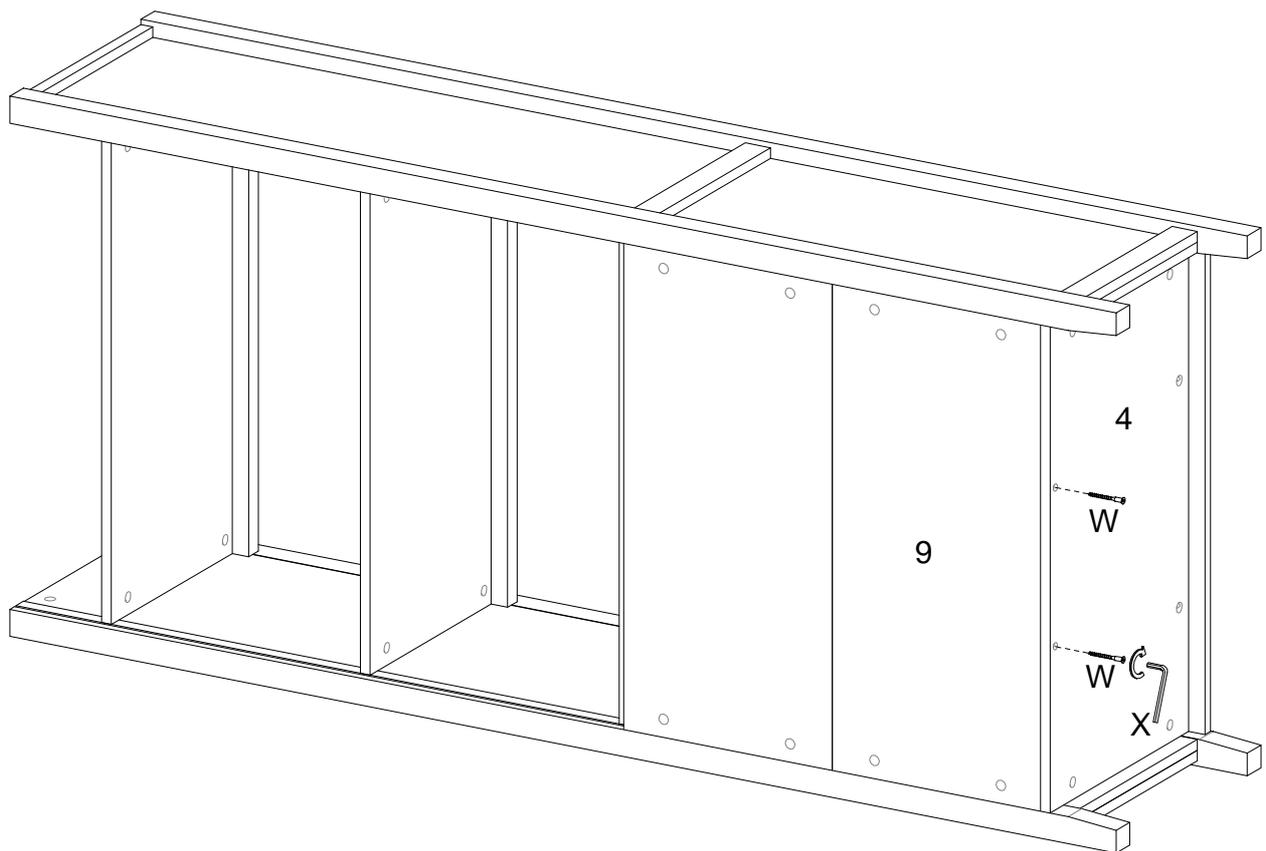


Step 11

Unfold the Upper Back Panel (7). Using the grooves, slide the panel into place. Secure the Back Panel by screwing 14mm Screws (F) into the pre-drilled holes.

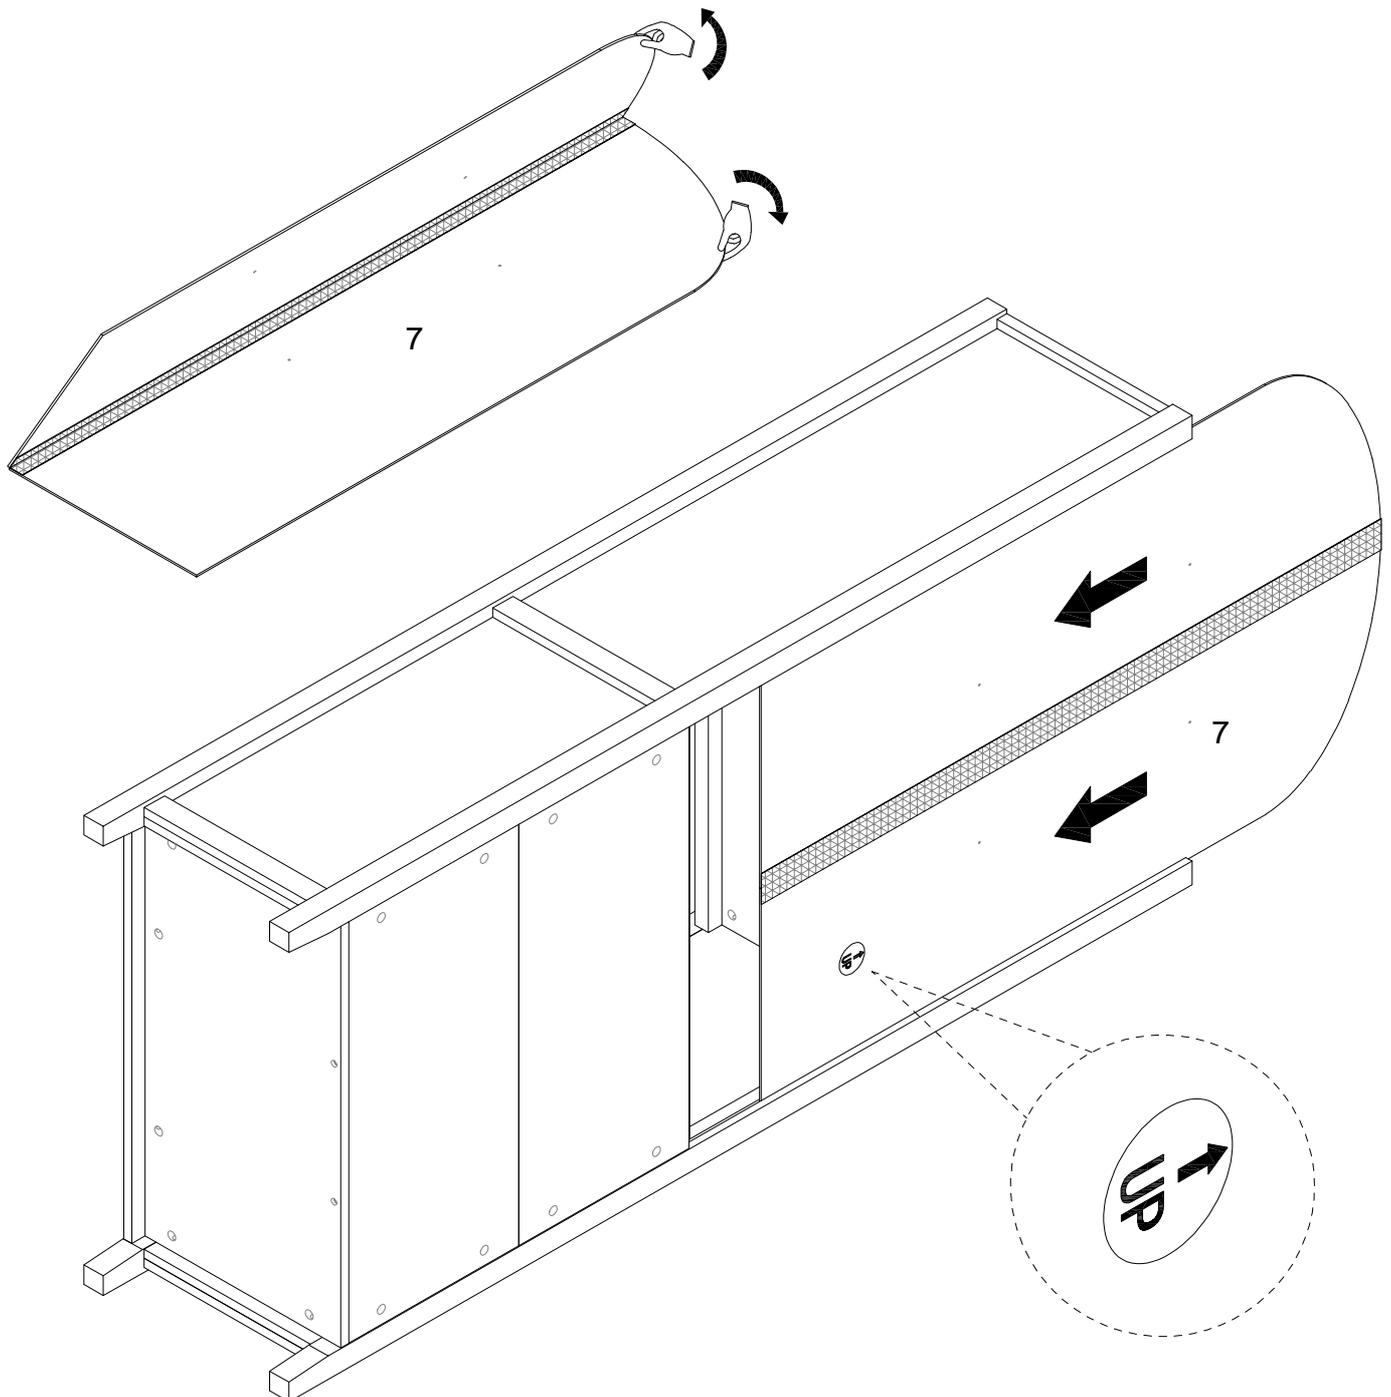


Step 12

Next, locate the pre-drilled holes in the Back Panel (7).
With a screwdriver, guide the 15mm Screws (F) through
the pre-drilled holes.

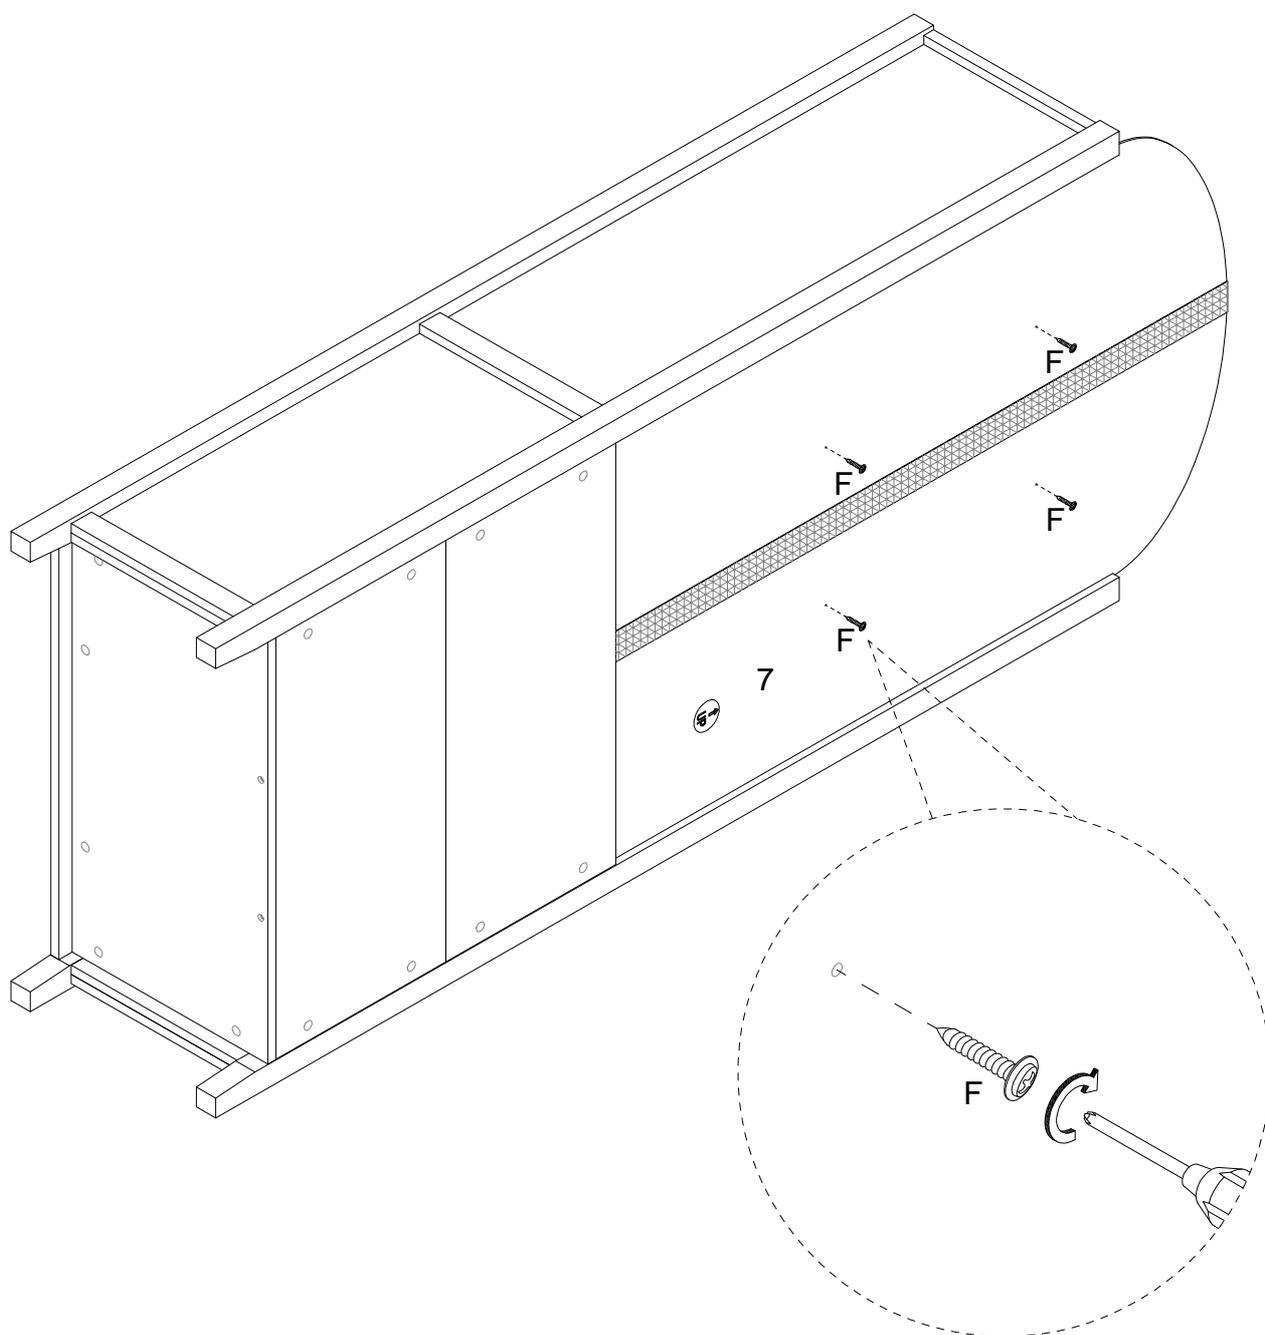


Step 13

With the help of a friend, flip the bookcase upright. Place the Top Arched Panel (3) on top and secure with Cam Locks (C).

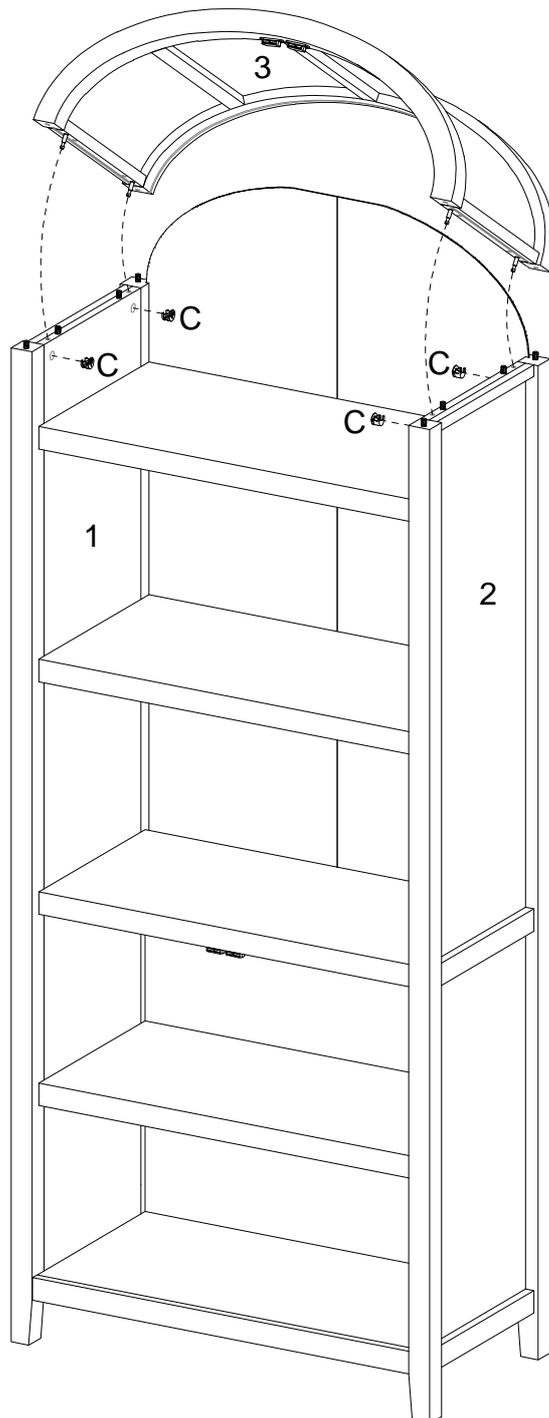


Step 14

Next, locate your pre-drilled holes in the Upper Back Panel (7). Using a screwdriver, guide the 14mm Screws (E) through the pre-drilled holes.

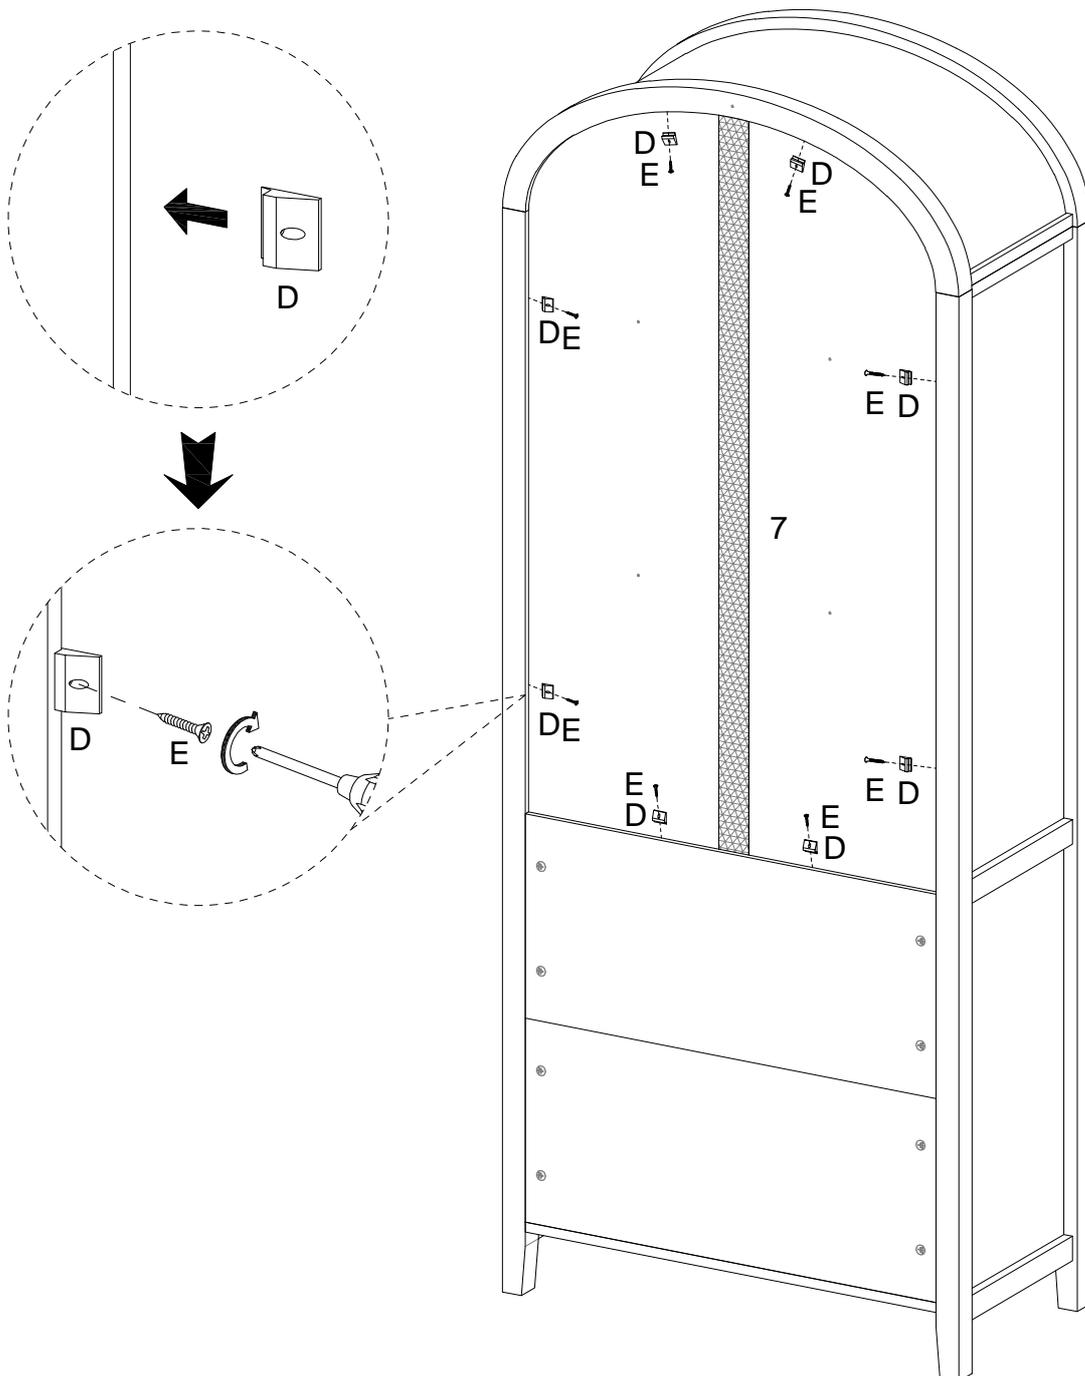


Step 15

Attach Stickers (T) over the Cam Locks (C) throughout the bookcase.

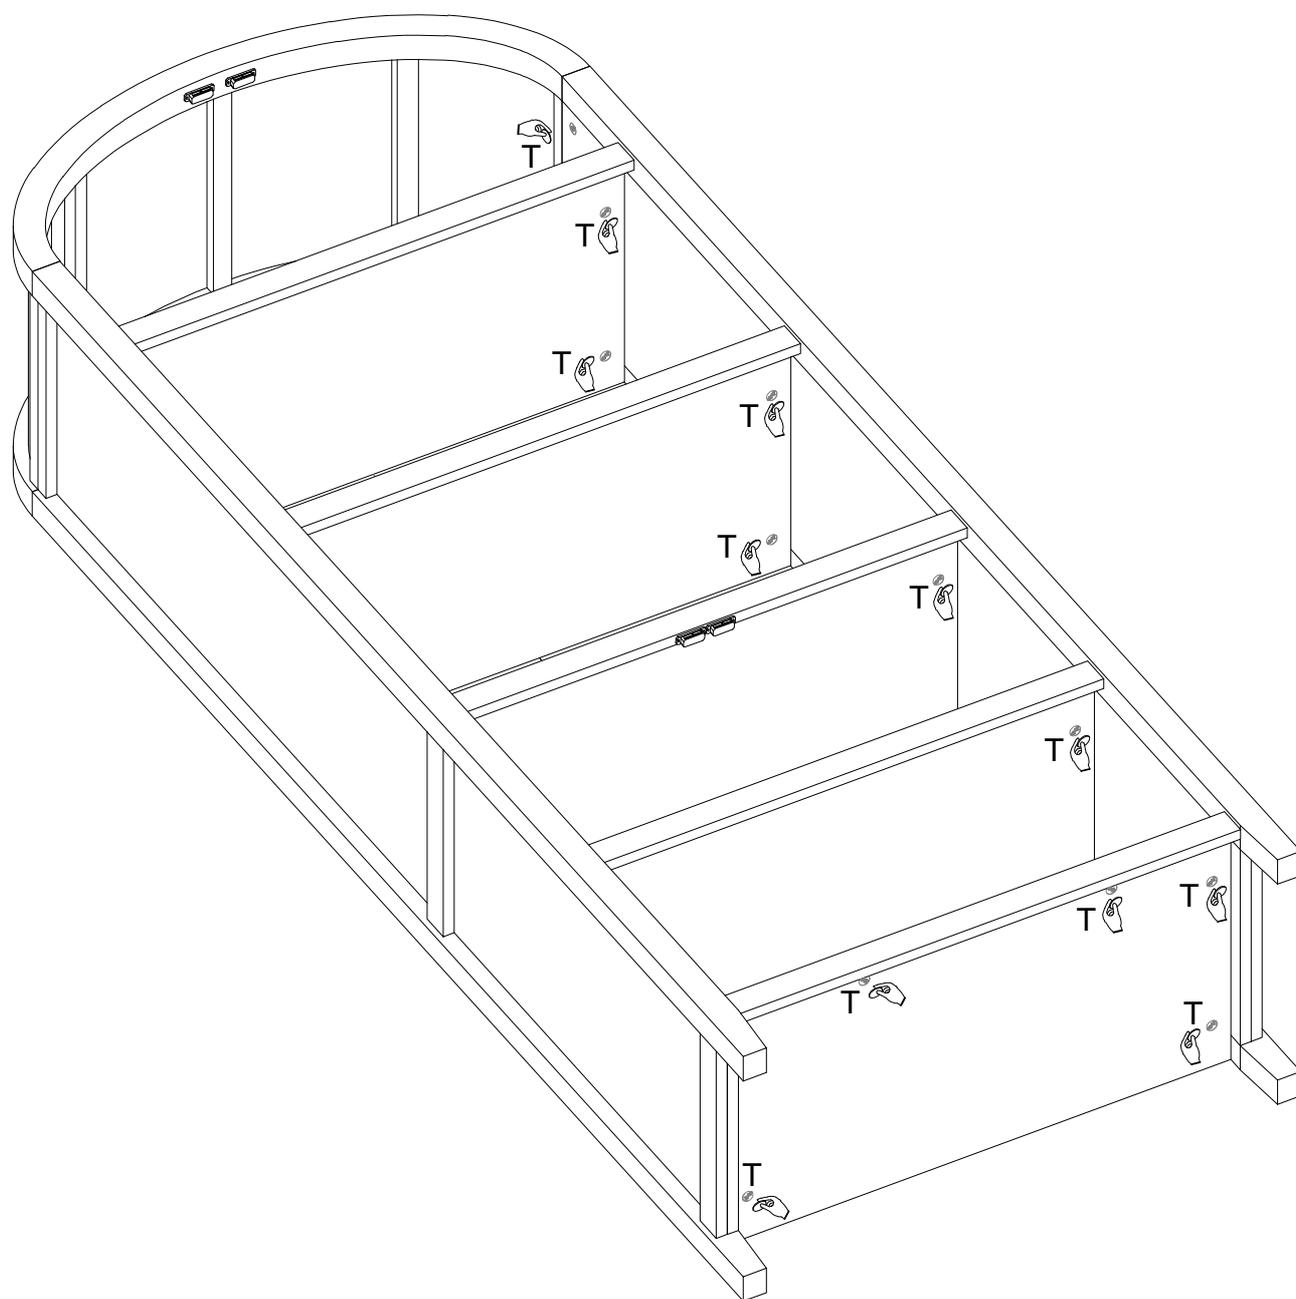


Step 16

Attach Hinges (J) to the Glass Doors (10) and (11) using 15mm Screws (K). On the other side of the doors, secure the Metal Pieces (4) with 12mm Screws (4)

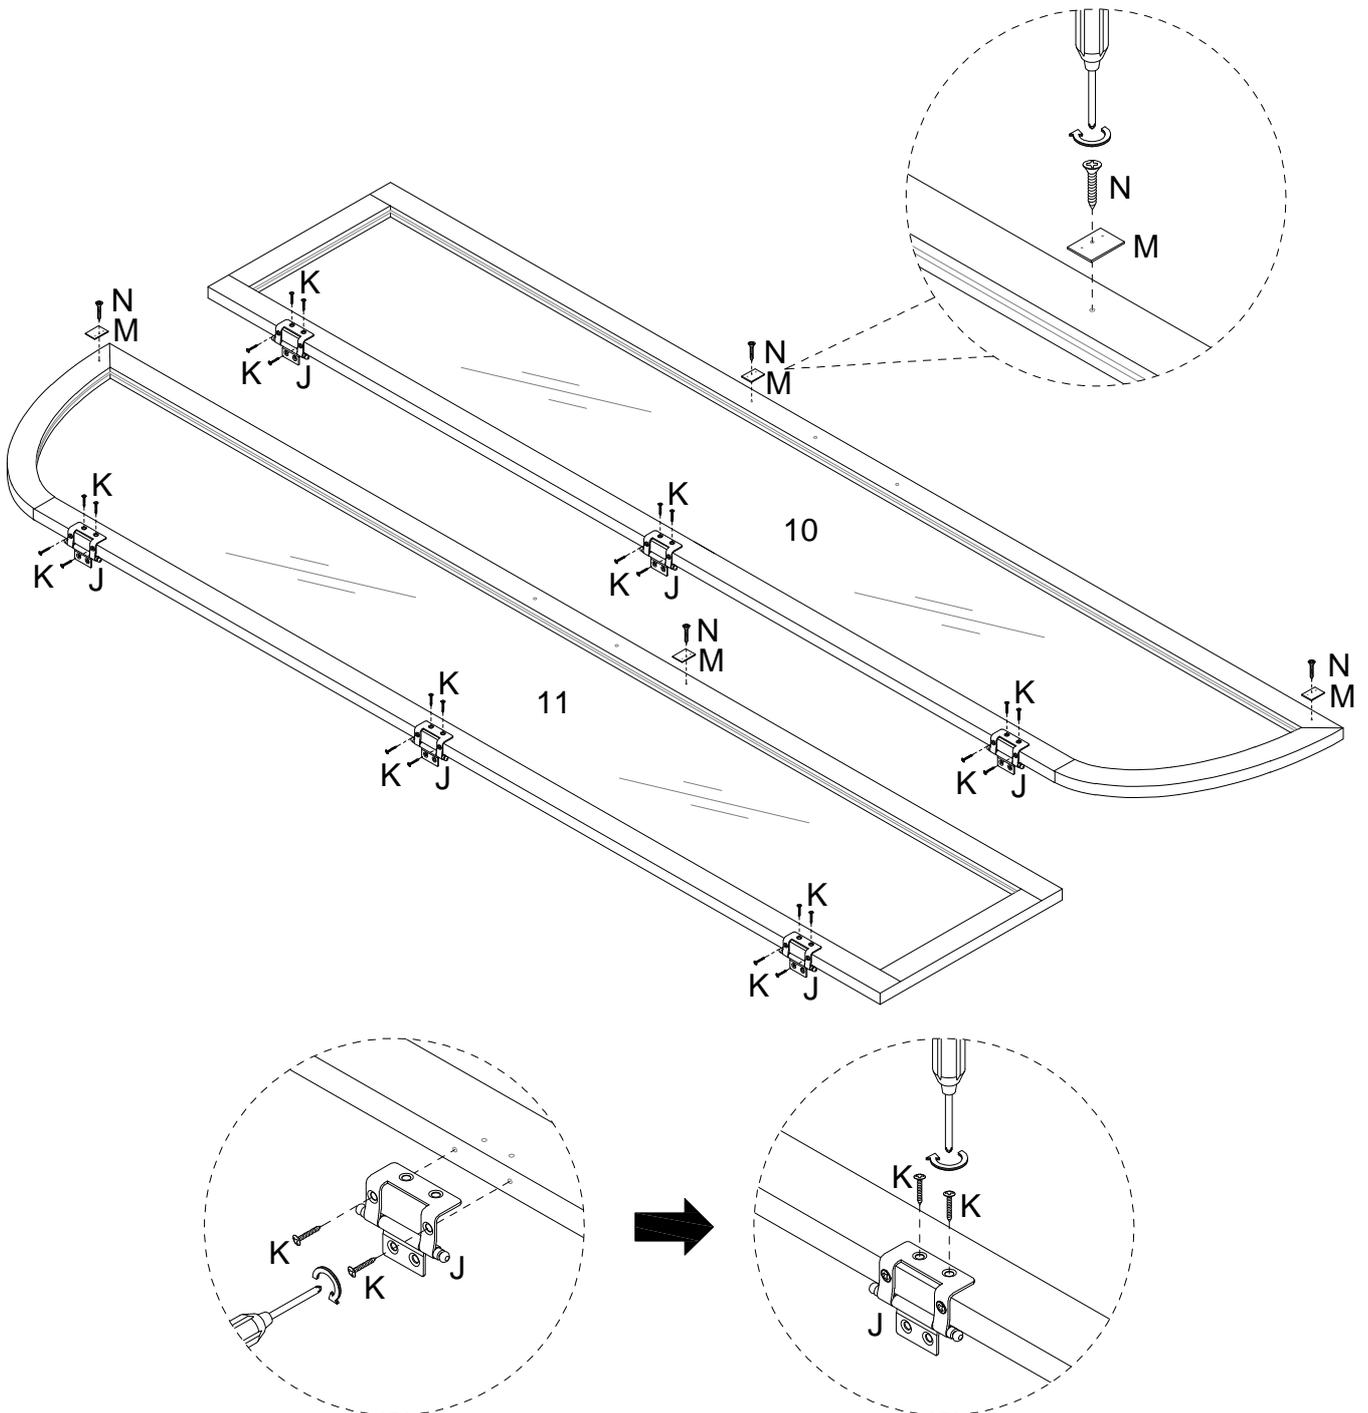


Step 17

Attach the Hinges (J) on the Left Glass Door (10) to the Left Panel (1) using 14mm Screws (K). Then, attach the Door Handle (G) using two Bolts (H).

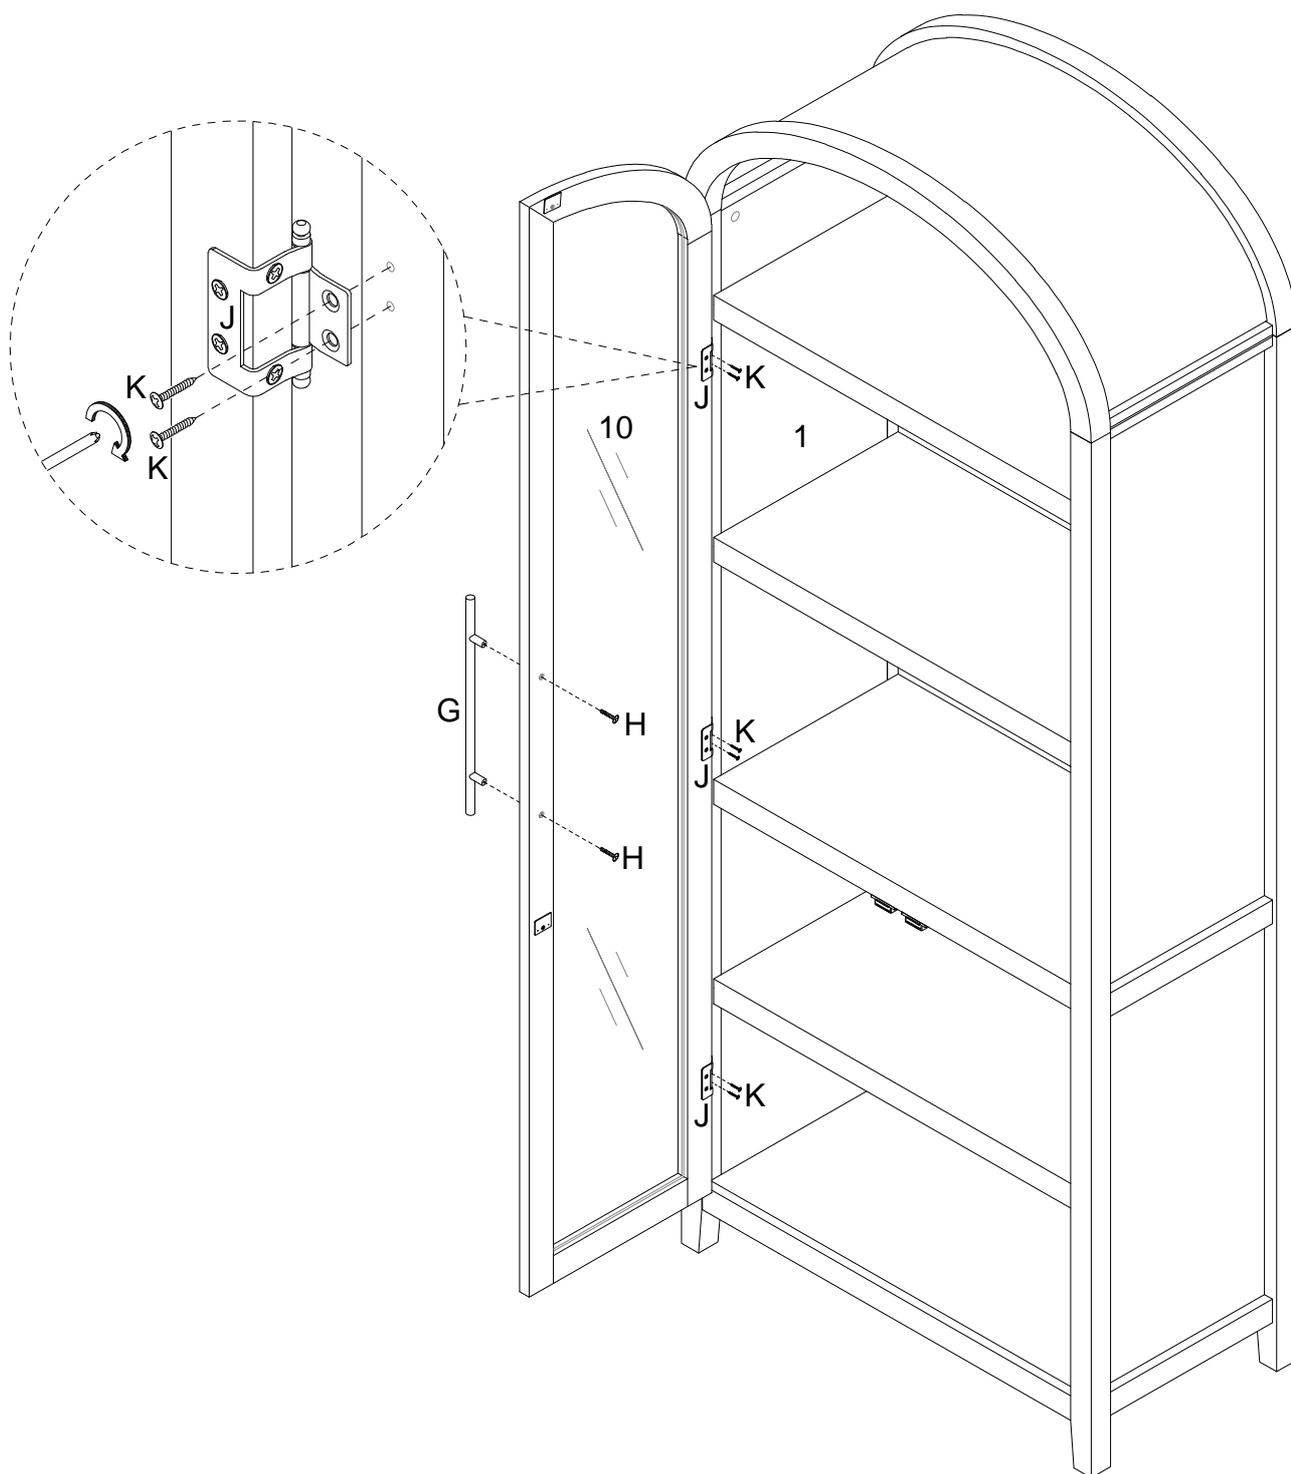


Step 18

Now repeat the same steps for the right side. Attach the Hinges (J) on the Right Glass Door (11) to the Right Panel (2) using 14mm Screws (K). Then, attach the Door Handle (G) using two Bolts (H).

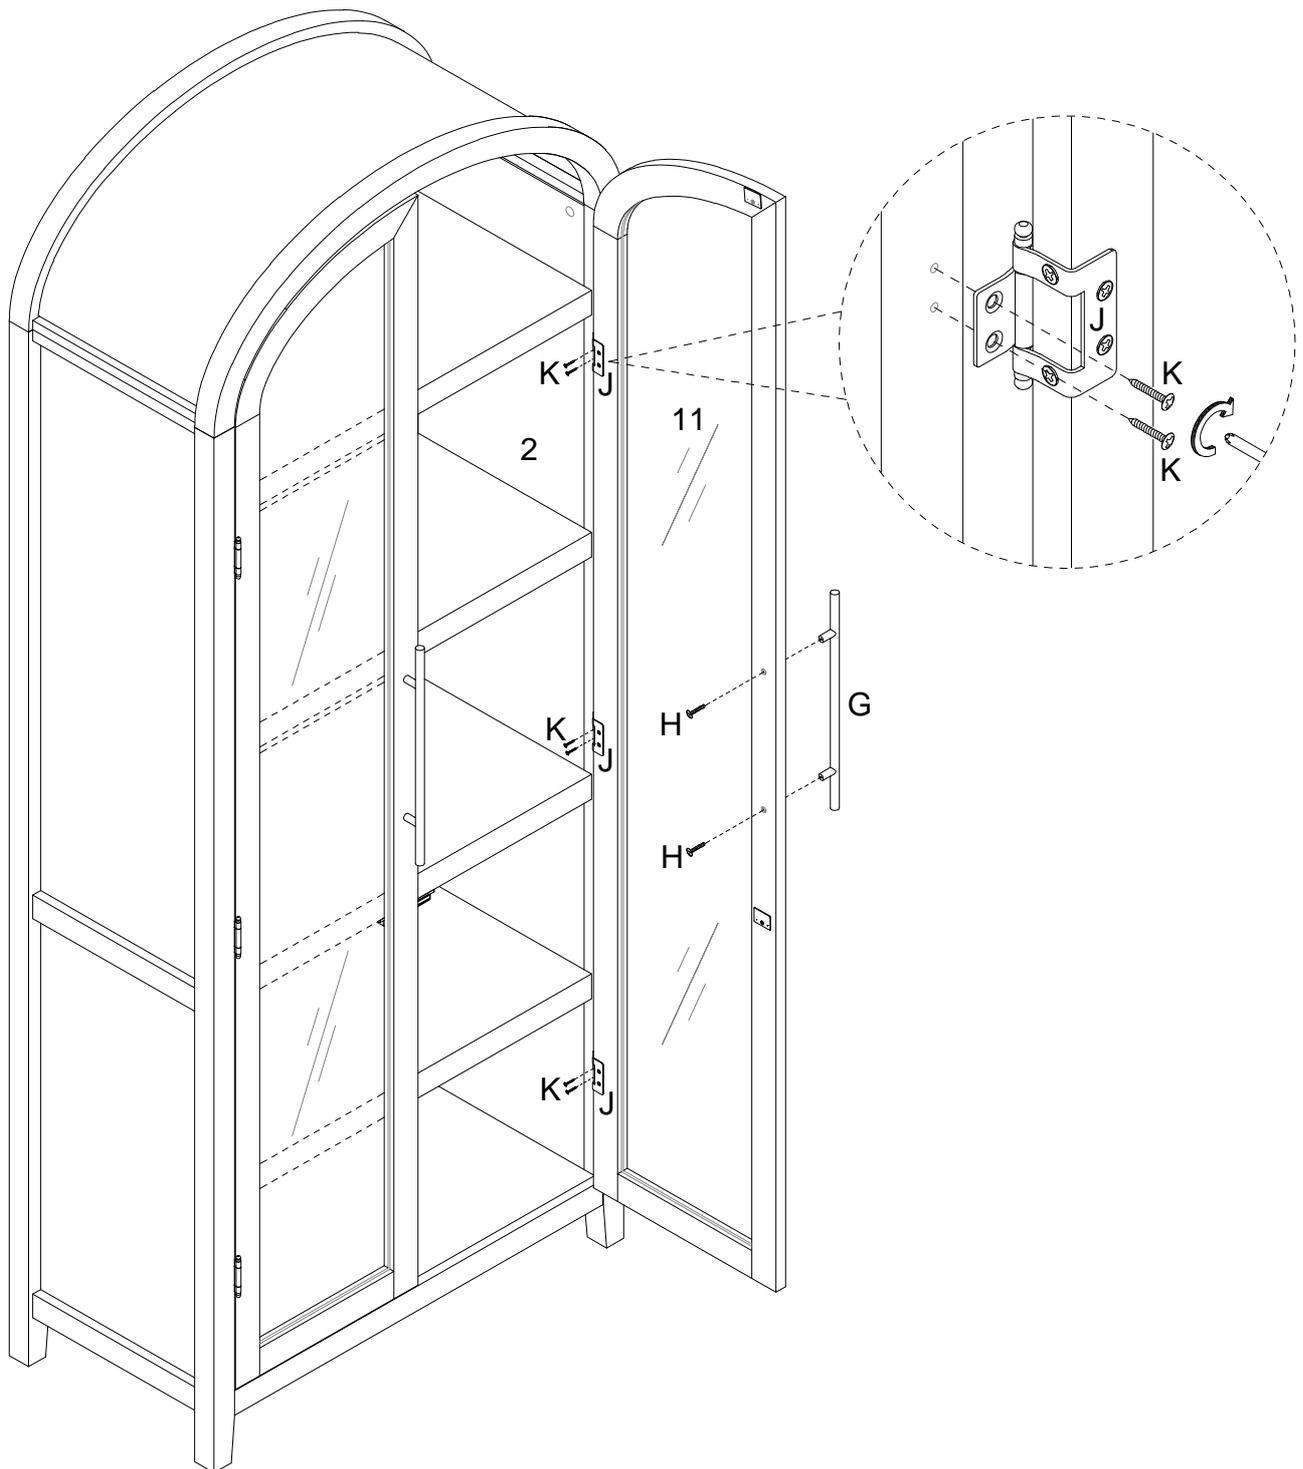



Step 19

Great work, you're in the home stretch. Let's secure your bookcase to the wall. Attach the Plastic Strip (S) to your bookcase using the 12mm Screw (Q).

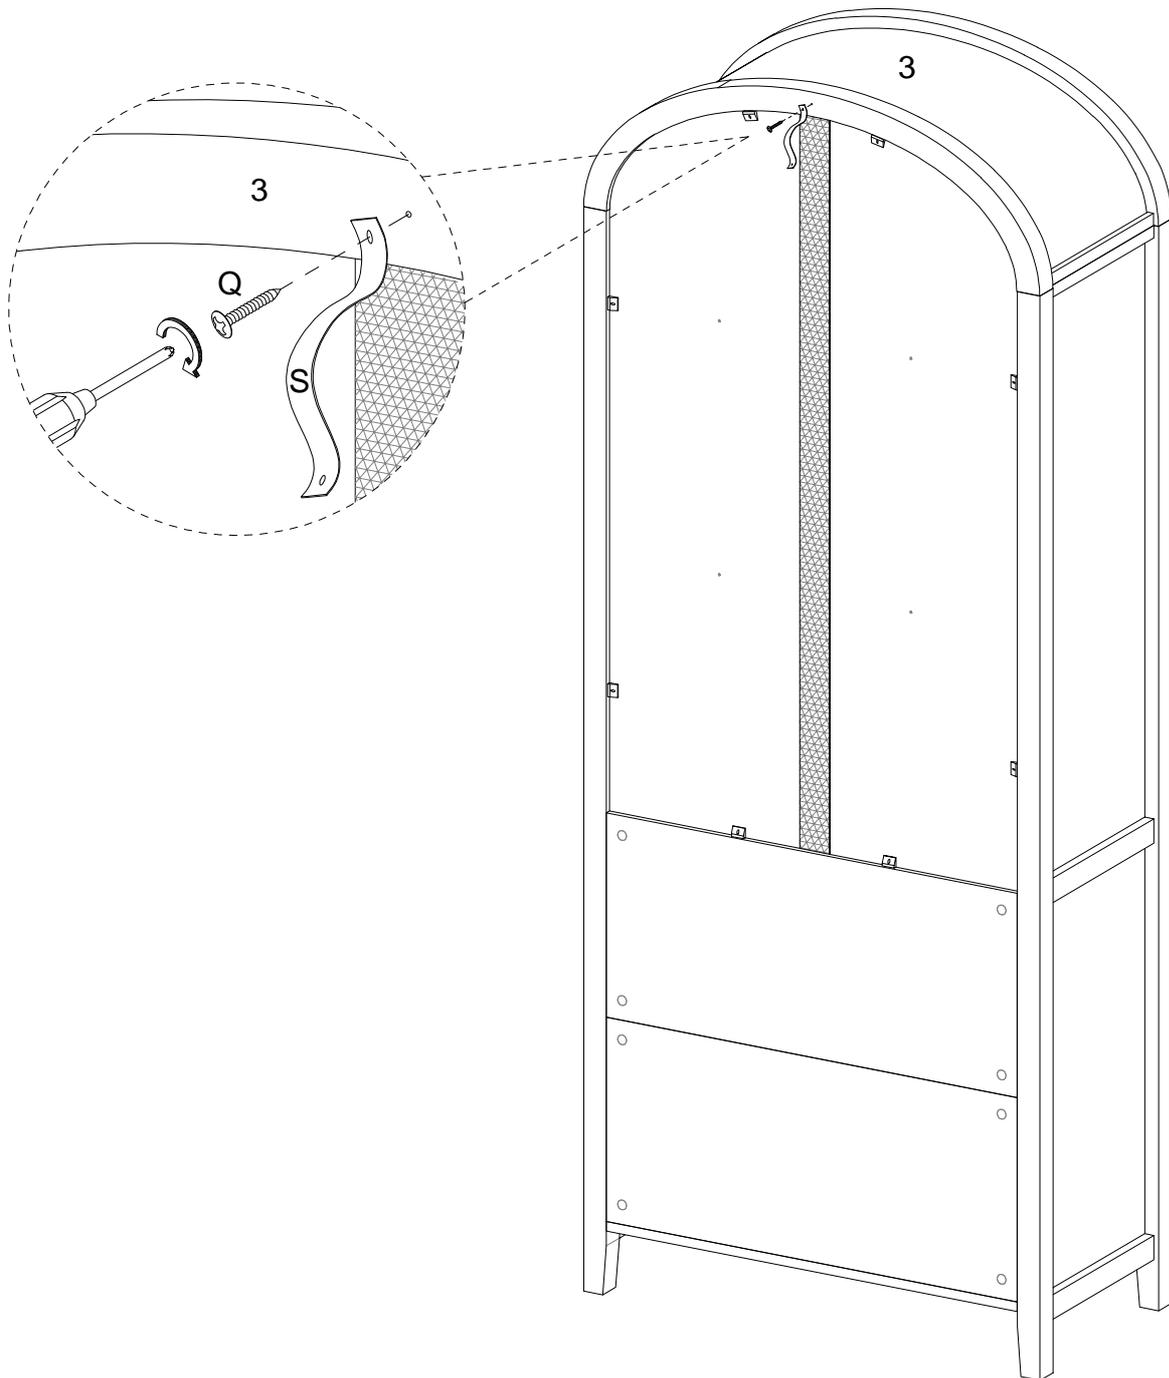

Step 20


Insert the Wall Anchor (R) into the wall. Next, secure the Plastic Strip (S) to the wall using the 25mm Screw (P). Great job! Your work here is done!

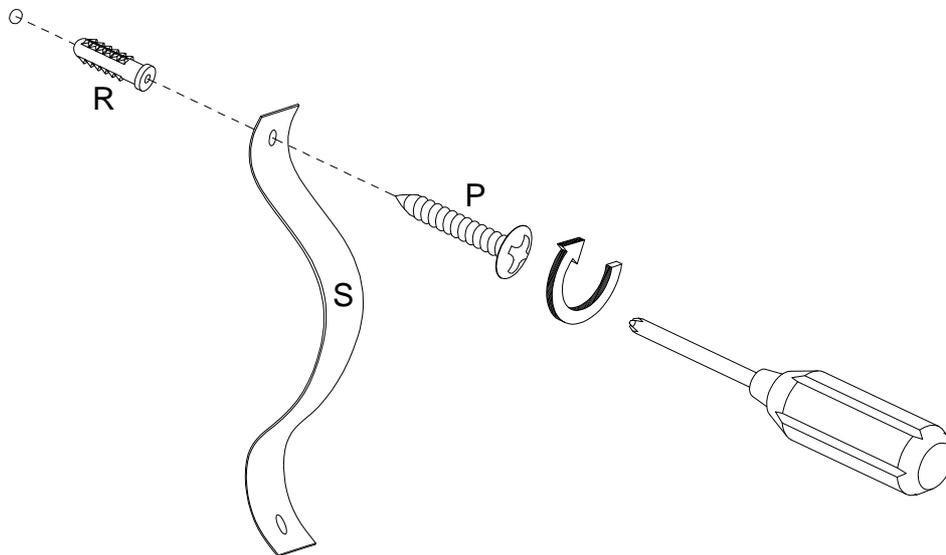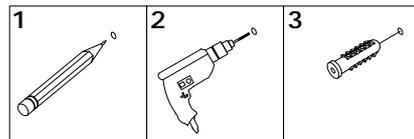

Warning

Serious or fatal injuries can occur from furniture tipping over. To prevent the furniture from tipping over we recommend that it is permanently fixed to the wall. Wall anchor and hardware are included with this product. Please make sure hardware is suitable for your walls before installing, as different wall materials may require different types of anchors.

Final Assembly

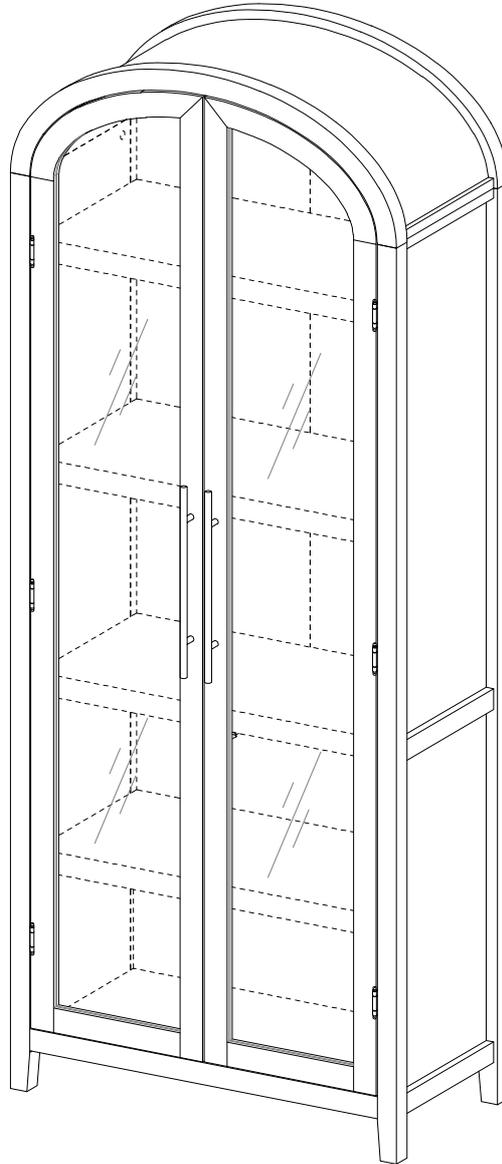

Congratulations on your new piece of furniture!
We would love to hear about it and see it.
Please leave us a review or post a picture with
[#mywalkerredisonhome](#)

Assembling furniture can be tricky sometimes.

Our customer service team, located in Utah, is here for product information, help assembling a product, or for any other customer support issue

Call us at **801-433-3008**

Email us at service@walkeredison.com

Visit our Customer Service website at walkeredison.com/pages/customer-service

We are available to help Monday -Thursday 8am-5pm, Friday 8am-3pm MST

For details on Assembly Videos, Assembly Instructions, Replacement Parts, and Customer service,

SCAN HERE

