 
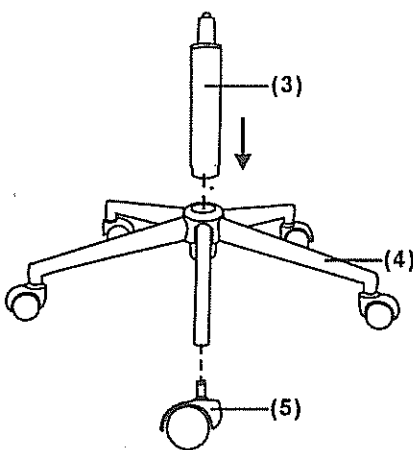
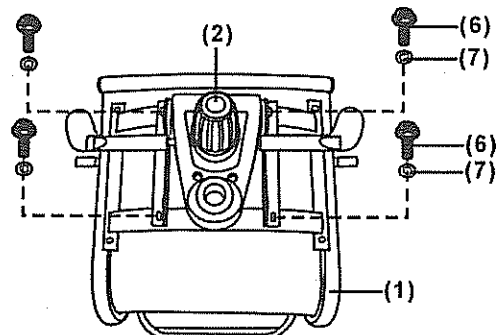
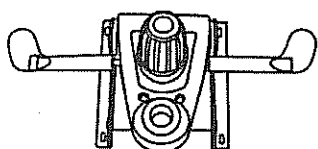
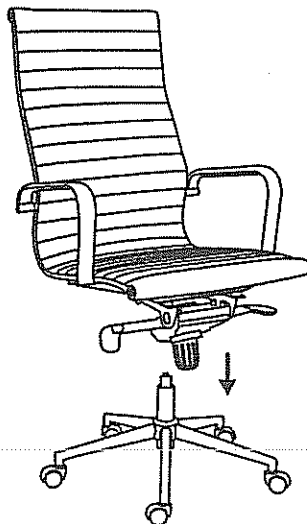
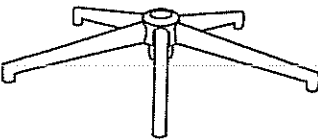


BT-9826H PARTS

ASSEMBLY INSTRUCTION

(1)X1 	(5)X5 	① 	② 
(2)X1 	(6)X4 		
(3)X1 	(7)X4 	③ 	④ 
(4)X1 	(8)X1 		