

ASSEMBLY INSTRUCTIONS

Description: Nola Dining chair




Important safety instructions:

- Please read carefully all instructions before assembly.
- For your safety and ease, assembly by two or more adults is recommended.
- Keep instructions for future use.





Pre-assembly:



- Do not discard any content until assembly is complete to avoid accidentally discarding small parts or hardware.
- Take out all parts and hardware from box.

Parts List

Item	Description	QTY
P1	Chair Top 	1
P2	Front Legs  (P2)	2
P3	Back Legs  (P3)	2

Hardware List

Item	Description	QTY
H1	Bolts Ø5/16"x2-1/4"L 	8
H2	Lock Washers 5/16" 	8
H3	Flat Washers 5/16" 	8
H4	Allen Wrench 5/16" 	1

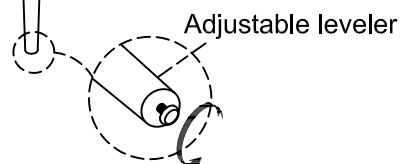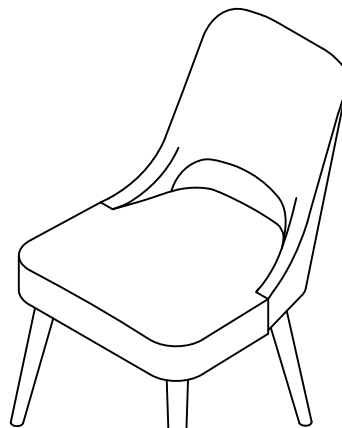

DISCLAIMER:


WHEN PROPERLY ASSEMBLED, THIS ITEM IS SAFE FOR INTENDED USE. SELLER IS NOT LIABLE FOR ANY DAMAGES RESULTING FROM ITEM BEING IMPROPERLY ASSEMBLED AFTER PURCHASE.

Assembly Procedures:

Step 1. Assemble the chair on a flat, soft surface such as a carpet or cloth to prevent scratching the finish.

- 1) Loosely attach the front legs (P2) and the back legs (P3) to the chair top (P1) as shown below.
- 2) Turn the assembled chair to an upright position. Make sure the chair is level and securely tighten all bolts with Allen wrench (H4).
- 3) **Leveler adjustment:** Levelers are pre-installed on the front legs and adjust as needed to make sure the chair is leveled. Assembly is complete. **Failure to follow these instructions may cause the bolts to misalign during assembly.**

- (H1)x8 Bolts Ø5/16"x2-1/4"
- (H2)x8 Lock Washers 5/16"
- (H3)x8 Flat Washers 5/16"
- (H4)x1 Allen Wrench 5/16"

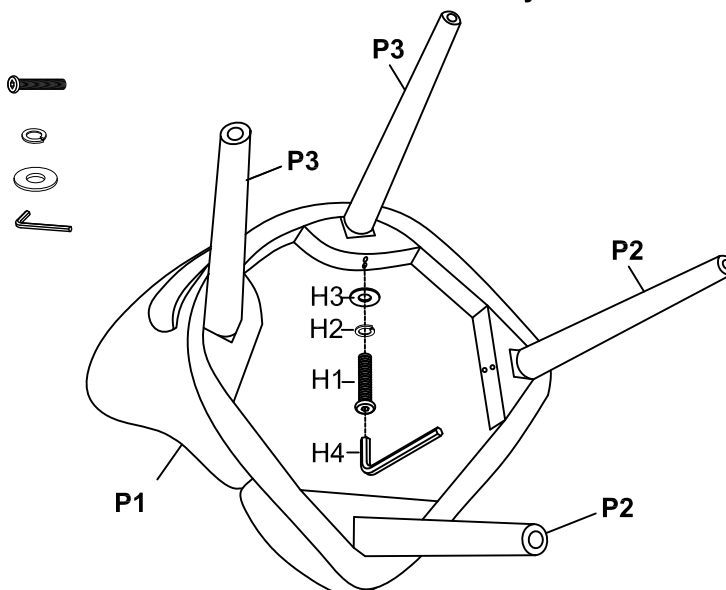

ADDITIONAL NOTE ABOUT SAFETY:

BOLTS MAY LOOSEN DURING NORMAL EVERYDAY USE.

THEY SHOULD BE INSPECTED AT LEAST EVERY 3 MONTHS AND RE-TIGHTENED AS NEEDED TO PREVENT DAMAGE OR INJURY, AND ENSURE STABILITY.

Thank you for your purchase