

Any problems or questions call Regency Office Furniture at 1-866-816-9822



RCGENCY MADET2540 Power Desk Manual



Zero-set:

Please follow these steps for proper initialization.

- 1. Ensure that all cables are securely fastened away from moving parts.
- 2. Activate the zero-setting mode, press and hold the DOWN ARROW button for five seconds. Once initiated, continue holding the DOWN ARROW button until both legs are in the lowest position (motor stops).
- 3. Now the Table is "zero-set" and ready to use.

Preset height instructions:

The Power Desk allows four (1-4) height presets.

Begin by using the UP/DOWN ARROW buttons to raise and lower the table to a desired height.

- 1. Once satisfied, press the "S" button.
- 2. Now press a desired number (1-4) preset. The height is now set.

Codes:

rSt - Reset

Requires the table to be "zero-set" using the steps mentioned above.

ER1 or ER2 - Error

When displayed, please follow the steps below:

- 1. Please check that all cables are connected properly. Consult the Assembly instructions (separate) for proper connectivity.
- 2. Unplug the table from its power source to reset the memory.
- 3. Now "zero-set" the table using the steps mentioned above.

Remarks:

Continuous operation must not exceed two minutes to avoid motor from overheating or "timing-out". If the motor does time-out, please unplug and let motor cool for a minimum of two minutes.

If you have any other questions or concerns about your Power Desk, please contact Regency Customer Service at 866-816-9822. Thank you for your purchase!