


## NOTE TO CUSTOMERS:

- For ease and speed of assembly we recommend that before you commence each step of the assembly that you identify all the parts required to complete that step.
- We recommend that where possible you allow sufficient space to assemble the item as close as possible to the place where it will be once assembled.
- For the protection of your furniture we recommend that the product is placed on protected surfaces during assembly to prevent any damage.
- During assembly do not over tighten, as this may damage the product.
- Please ensure you retain all the product packaging until the item completely assembled.
- Please periodically check all fittings and re-tighten as necessary.
- Never allow any liquids to remain on your furniture as absorption can cause the wood to warp or the finish to de-laminate.
- It is recommended that this item should be assembled by two adults.

Page 1 of 8

## To use a cam lock: (Please read below instructions before assembling)

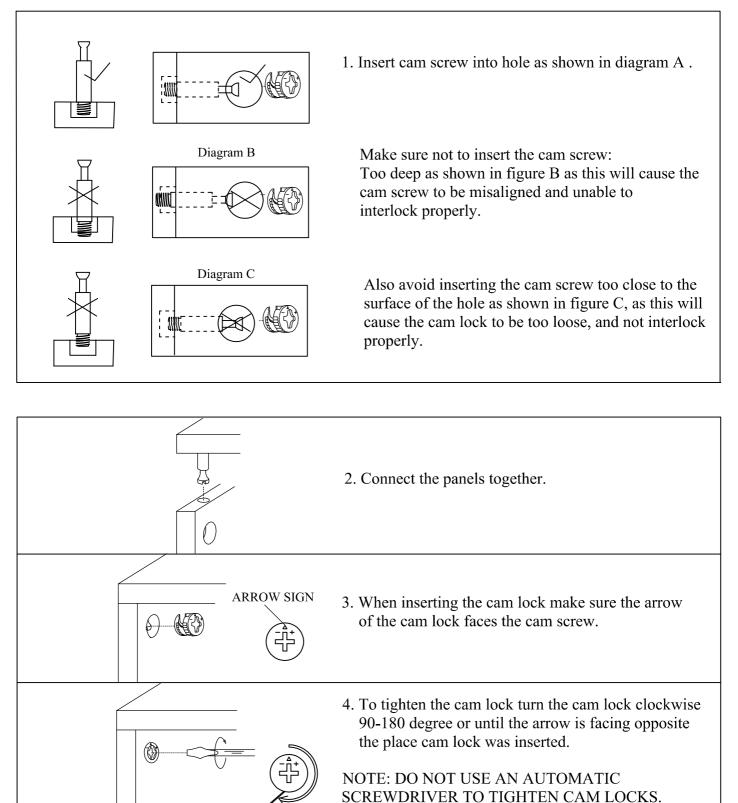

## Note:

- Read these instructions carefully before assembling.
- Tools required : Phillips screwdriver, flat screwdriver.
- Find a clean, smooth area on which to work, such as a carpet, in order to avoid scratching the wood surfaces.
- Wait to dispose of the packing material until assembly is complete and all parts and hardware are accounted for.
- Two or more people might be required for assembly.

Page 2 of 8

Part List							
PART	FIGURE	DESCRIPTION	QTY	PART	FIGURE	DESCRIPTION	QTY
(1)		Top Panel	1PC	(7)		Leg	4PCS
(2)		Left Side Panel	1PC	(8)		Door	1PC
(3)		Right Side Panel	1PC	(9)		Adjustable Shelf	1PC
(4)		Bottom Panel	1PC	(10)		Back Panel	1PC
(5)		Divider	1PC				
(6)		Shelf	2PCS				
Page 3 of 8							

