

# FABRIC MAINTENANCE

Symbols of maintenance

NORMAL  
PROCESS



DO NOT  
TUMBLE  
DRY



WASH  
BY  
HAND



IRON AT MAXIMUM  
SOLE PLATE  
TEMPERATURE 110°C



DO NOT  
WASH



DO NOT  
IRON



DO NOT  
BLEACH



PROFESSIONAL DRY  
CLEANING NORMAL PROCESS



Oak wood is special and unique and creates a warm and cosy natural atmosphere.

Make sure to notice and appreciate it!



—Woodek®  
TAMMESTA, LUONNOLLISESTI

## MAIN- TENANCE MANUAL

Thank you for choosing an authentic, natural product!

Read the maintenance manual before taking the product into use. For any additional information, please turn to our customer service.


## THE PRODUCT IS DELIVERED TO YOU

After receiving the product, always make sure that it is in order. If the packaging appears to be damaged during transportation, mark this information on the delivery note. All transport damage must be reported in the first three days after receiving the product. Later complaints are not considered. Wood is more sensitive to hot utensils and fluids after the packaging is removed and the product is taken into use. We recommend you to let the product adapt to your environment and use special coasters.

**Attention!** After you remove the packaging, always clean the wooden surface with a dry wipe. If you use a wet cloth, the wooden surface might turn rough.



## USAGE, TEMPERATURE, HUMIDITY

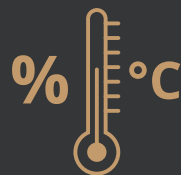

Oak wood is an authentic and natural material; each product has a unique grain and pattern. Notice and appreciate it. Products may develop cracks. We offer various maintenance kits and our specialists will gladly offer maintenance, if necessary! Oak is a strong and dense wood and products of such material will continue to live in our homes. If humidity changes, the dimensions of products made of oak might also change.

Maintain indoor humidity at 40–60%.

Temperature 14 to 26 °C

Use the products only indoors (not outdoors, on balconies, or on terraces).

Avoid direct sunlight and heat sources.

Lubricate the products 1–2 times a year or more, if necessary.

Do not place hot objects directly on the wooden surface.

Do not clean with chemical detergents. Always test if a detergent is suitable for the product

Reposition the product only by LIFTING. Do not drag the product on the floor or turn it upside down without lifting it properly.

Metal rails and door hinges of the products must be lubricated or regulated, if necessary. They might dislocate during transportation and require readjustment. For more information, please turn to our customer service.

## MAINTENANCE OF THE WOODEN SURFACE




The recommended maintenance frequency for oak wood products is 1–2 times a year, or more often, if necessary. Natural wood oils will nourish the wood and make it gradually more durable. All necessary maintenance products are available in our salons.

If the surface of the product feels rough or dry, or has developed any defects that you wish to eliminate, sand the surface slightly with sandpaper (150–200) before lubricating. Sometimes, after removing the packaging, the surface of the product might be slightly spotted or rough. In this case, sand the rough areas delicately with sandpaper and then lubricate. Sand in the direction of the grain. If a rough spot or any other defect appears on the surface of the table, sand only the defected area. Before lubricating, wipe the dust away from the surface with a dry cloth or sponge. When lubricating, pour the lubricant on a colourless fabric (not directly on the surface of the table!) and rub on the wooden surface, following the direction of the grain. Let the lubricant permeate for 20 minutes and remove excess lubricant with a clean, dry, and colourless fabric (for example, white kitchen paper). For white or dark lubricant, pour the oil directly on the wooden surface, but remove it immediately by rubbing the surface with dry kitchen paper in the direction of the grain. This way, you avoid the lubricant drying on the wooden surface and the slight shine it might cause. If the lubricated wooden surface is smudged or has changed colour, remove it with sandpaper and oil the respective area. Wooden cracks that might appear on the wooden surface are easily removable with a special wood repair stick. Clean the surface. Rub the cracked area strongly with the wood repair stick until the crack is filled up and invisible. Then sand the surface of the filled-out area smooth and lubricate the area as usual.

## CHAIRS

Chairs are used for sitting. Inappropriate usage might damage the construction of the chair. **Attention:** Do not step or stand on the chair. Do not balance the chair on two legs. Always reposition the chair by lifting. For information about fabric maintenance, turn to our customer service, because we use a variety of fabrics. Place soft felt under the legs of the chair to avoid scratching the floor.

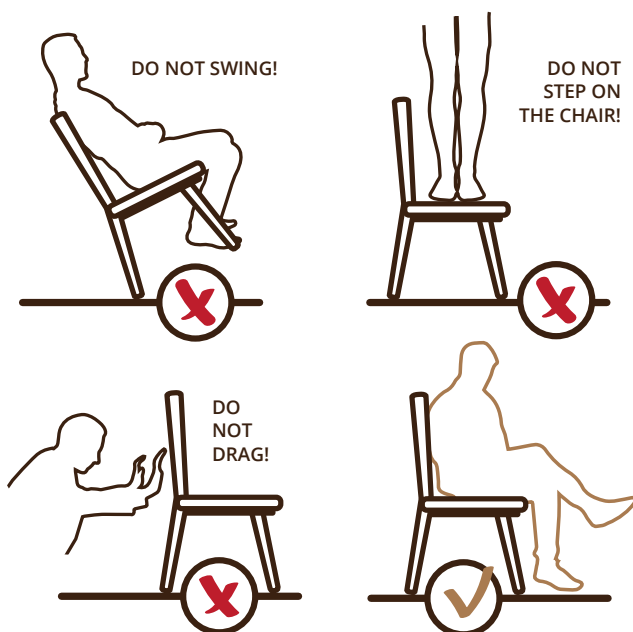

## SAFETY REQUIREMENTS

Lubricants are easily flammable. Burn or discard oily cloths and kitchen paper immediately to avoid self-ignition.

## MAINTENANCE OF PRODUCTS MADE OF NATURAL LEATHER



Clean the leather products with a clean detergent for this purpose only. Please try them before usage. In case cleaning products are not available, clean with clean water and cloth.

