



6396-4555 3-Section Laundry Sorter

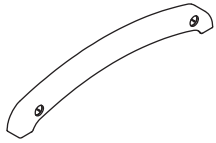

A 2 ea
Top frame

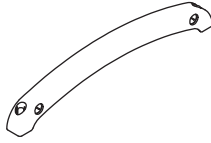

B 2 ea
Bottom frame




C 8 ea
Pole



D 2 ea
Wheel



E 2 ea
Wheel with lock

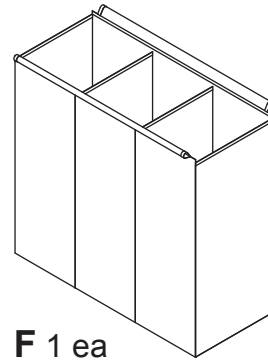


F 1 ea
Sorter bag


Part	Reference
A	F11526
B	F11527
C	F11528
D	F11529
E	F11530
F	F11531

Tools Needed:
No tools required.


STEP 1: Insert six poles (**C**) into the bottom frames (**B**). Insert the top frames (**A**) onto the top of the poles (**C**).

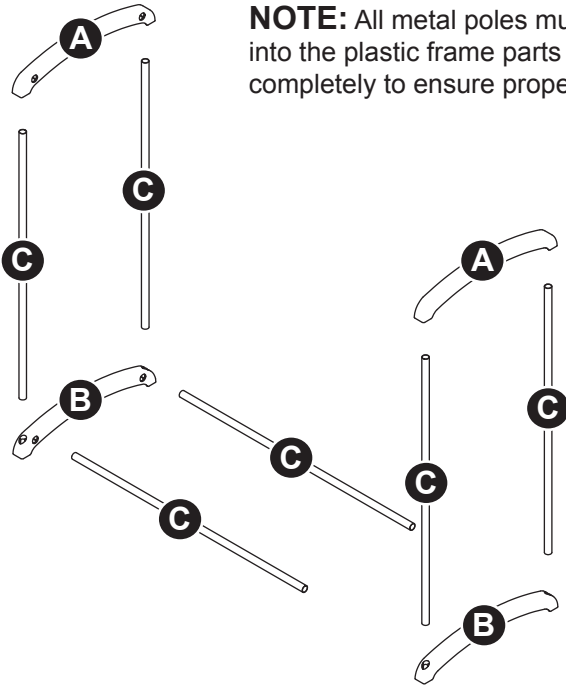

NOTE: All metal poles must be inserted into the plastic frame parts securely and completely to ensure proper assembly.

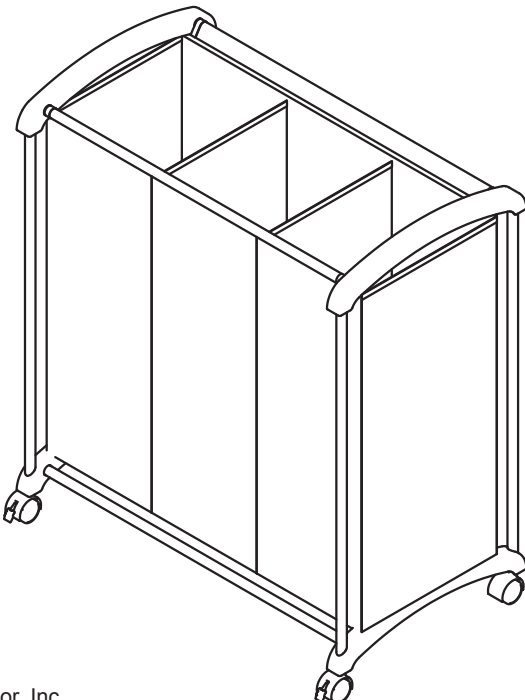

STEP 2: Insert the two remaining poles (**C**) into the top of the sorter bag (**F**). Slide the bag and poles into the assembled frame lining up the poles with the holes in the top frame (**A**). Insert the poles into the holes in the top frame. Insert the wheels (**D & E**) into the bottom frame (**B**).

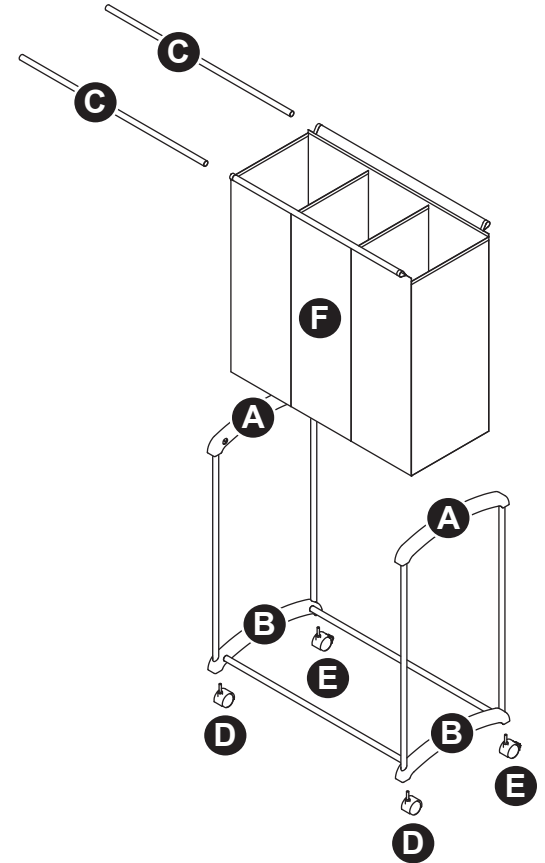

8680 Swinnea Road • Suite 103 • Southaven, MS • 38671

NEED HELP? For help with assembly, or if you are missing a part, please call Whitmor's Consumer Care Team, 1-888-944-8667 between 8 a.m. and 4:30 p.m. (Central Standard Time) Monday through Friday. Or email: help@whitmor.com. Visit us on the web at www.whitmor.com