60" DOUBLE SINK

Dimensions:	width	depth	height
inches	59"	18.5"	23.75"
mm	1499	470	603

NOTE: DIMENSIONS AND TECHNICAL DETAILS ARE SUBJECT TO CHANGE WITHOUT NOTICI



SINK





16" SINK				
----------	--	--	--	--

TO SINK	width	lengui	neight	deput
inches	16.0"	16.0"	4.0*	3.38*
mm	406.4	406.4	101.6	85.73

18" SINK	width	length	height	depth
inches	18.0*	10.25"	4.0*	3.38*
mm	457.2	257.18	101.6	85.73

24" SINK	width	length	height	depth
inches	23.63"	18.5"	4.0*	4.0*
mm	600.08	469.9	101.6	101.6

30" SINK	width	length	height	depth
inches	29.5*	18.5"	4.0*	4.0*
mm	749.3	469.9	101.6	101.6

36" SINK	width	length	height	depth
inches	35.75"	18.5"	4.0*	4.0*
mm	908.05	469.9	101.6	101.6

40" SINK	width	length	height	depth
inches	39.5"	18.5"	4.0"	4.0*
mm	1003.3	469.9	101.6	101.6

48" SINK	width	length	height	depth
inches	47.25"	18.5"	4.0*	4.0*
mm	1200.15	469.9	101.6	101.6

60" S SINK	width	length	height	depth
inches	59"	18.5"	4.0"	4.0*
mm	1498.6	469.9	101.6	101.6

60" D SINK	width	length	height	depth
inches	59"	18.5"	4.0"	3.75*
mm	1498.6	469.9	101.6	95.25

72" SINK	width	length	height	depth
inches	71.63"	18.5"	4.0*	4.0*
mm	1819.28	469.9	101.6	101.6

BO" SINK inches mm	width 79"	length 18.5"	height 4.0*	depth 4.0*

Vanity cabinet | removing+adjusting drawers

To remove the drawer/s

* Look for the release levers under the drawer, on the sliding bar * To release and remove drawer, simultaneously push the drawer release levers upwards (both sides at the same time) and slide/lift





To replace the drawer/s

* Fully extend the drawer runner on each side of the cabinet * Place the drawer onto the runners ensuring that the drawer is levelled on the tracks, and continue to hold in place (otherwise, the drawer will fall). * Keeping the drawer levelled, gently push the drawer along the runners into the cabinet until you hear a click.



To ajust the drawer/s







All rights reserved. The authors retain all copyrights in any text, graphic images and photos in this book. No part of this publication may be reproduced or transmitted in any form or by any mean electronic or mechanical, including photocopying, recording, or any information storage and retrieval system, without permission in writing from the authors.

Pop-Up / P-trap Installation Instructions INSTALLATION GUIDE

