



Choosing the correct size, before you buy -Choose - small, medium, or large - before you buy . . .

Your Fireplace Measurements:					
Front Opening Width:					
Front Opening Height:					
Model Number:					

Before you buy, get the right fit.



For masonry fireplaces only - not for prefabricated. This firescreen is designed to surface mount on the outside of the fireplace.

- 1. Measure the inside width (W) of your fireplace opening.
- Measure the inside height (H) of your fireplace opening from the floor to the inside top of opening.
- 3. Check both measurements and be sure they are accurate to the nearest 1/8".

Use for all styles of Pleasant Hearth Glass Door Fire Screens				
		Fits Opening		
Size	Width	Height (Height includes 2" riser bar)	Overall Dimensions (Height includes 2" riser bar)	
Small	30" - 37"	22 1/2" - 29 1/2"	37 1/2" W X 30" H	
Medium	30" - 37"	25 1/2" - 32 1/2"	37 1/2" W X 33" H	
Large	36" - 43"	25 1/2" - 32 1/2"	43 1/2" W X 33" H	

Note: This fire door screen is designed to surface mount on the outside of a flat surface such as brick or marble. Use the Size Chart above to determine the correct size before you buy.

 Small - Fits masonry fireplace opening with a width range of 30" to 37" and height range of 22.5" to 29.5". Overall frame width is 37.5", frame height is 30".*

*Note: Frame height includes the 2" riser bar (riser bar included but not assembled).

 Medium - Fits masonry fireplace opening with a width range of 30" to 37" and height range of 25.5" to 32.5". Overall frame width is 37.5" and frame height is 33".*

*Note: Frame height includes the 2" riser bar (riser bar included but not assembled).

 Large - Fits masonry fireplace opening with a width range of 36" to 43" and height range of 25.5" to 32.5". Overall frame width is 43.5" and frame height is 33".*

*Note: Frame height includes the 2" riser bar (riser bar included but not assembled).

- If one's fireplace front opening height and width does not fall within the size chart range here, then these glass door fire screens will not work.
- Always keep mesh panels closed and the glass doors open when fire is burning in fireplace.

Made in the U.S.A



GHP is not responsible for the purchasing of incorrect size (see sizing information, before you buy). Also, we are not responsible for incorrect usage of product.

^{*}Pending on size, style or type (see name series for model number size)