


CONVENIENCE CONCEPTS

ASHLEY LOUNGE

143357GY

143357T

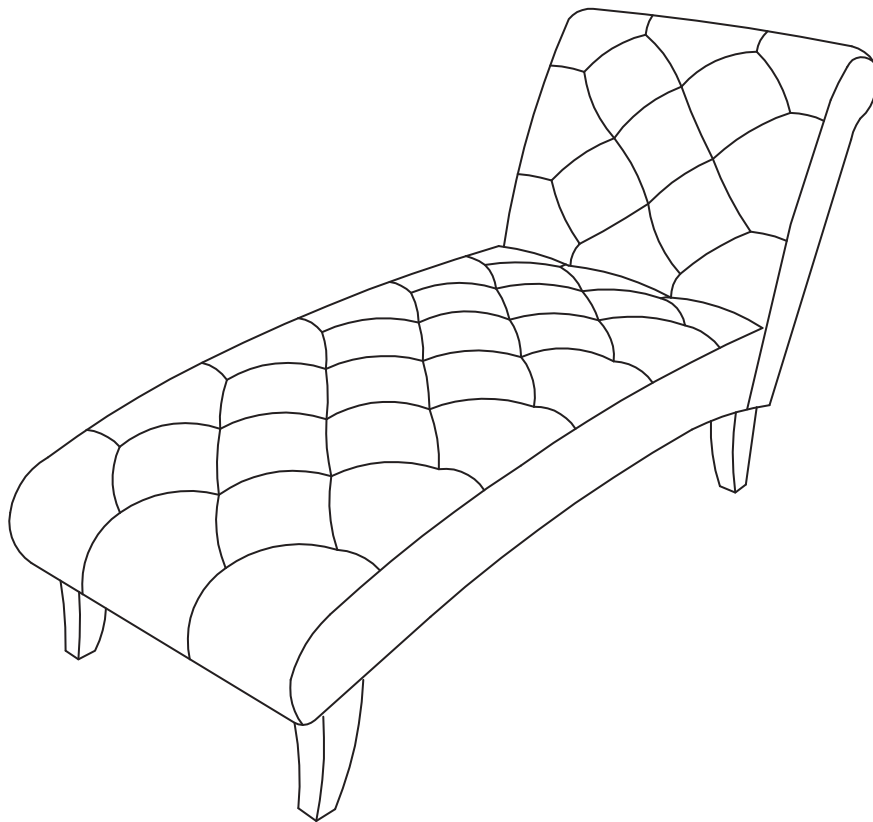

ASSEMBLY INSTRUCTIONS

We have designed our furniture with you , the customer in mind . Our clear , easy to follow , step by step instructions will guide you through the project from start to finish . Feel confident that this will be a fun and rewarding project . The final product will be a quality piece of furniture that will go together smoothly and give years of enjoyment .










Please do not return to the store

Broken or missing parts?


Need help with assembly?

If you have any questions just call 1-800-468-6447 or email us at parts@convenience-concepts.com

Hardware List


A 	B 	C 	D 
Long bolt (11pcs)	Short bolt (4pcs)	Big flat washer (11pcs)	Flat washer (4pcs)
E 	F 	G 	
Lock washer (11pcs)	Allen wrench (1pc)	Washer (2pcs)	

Panel List

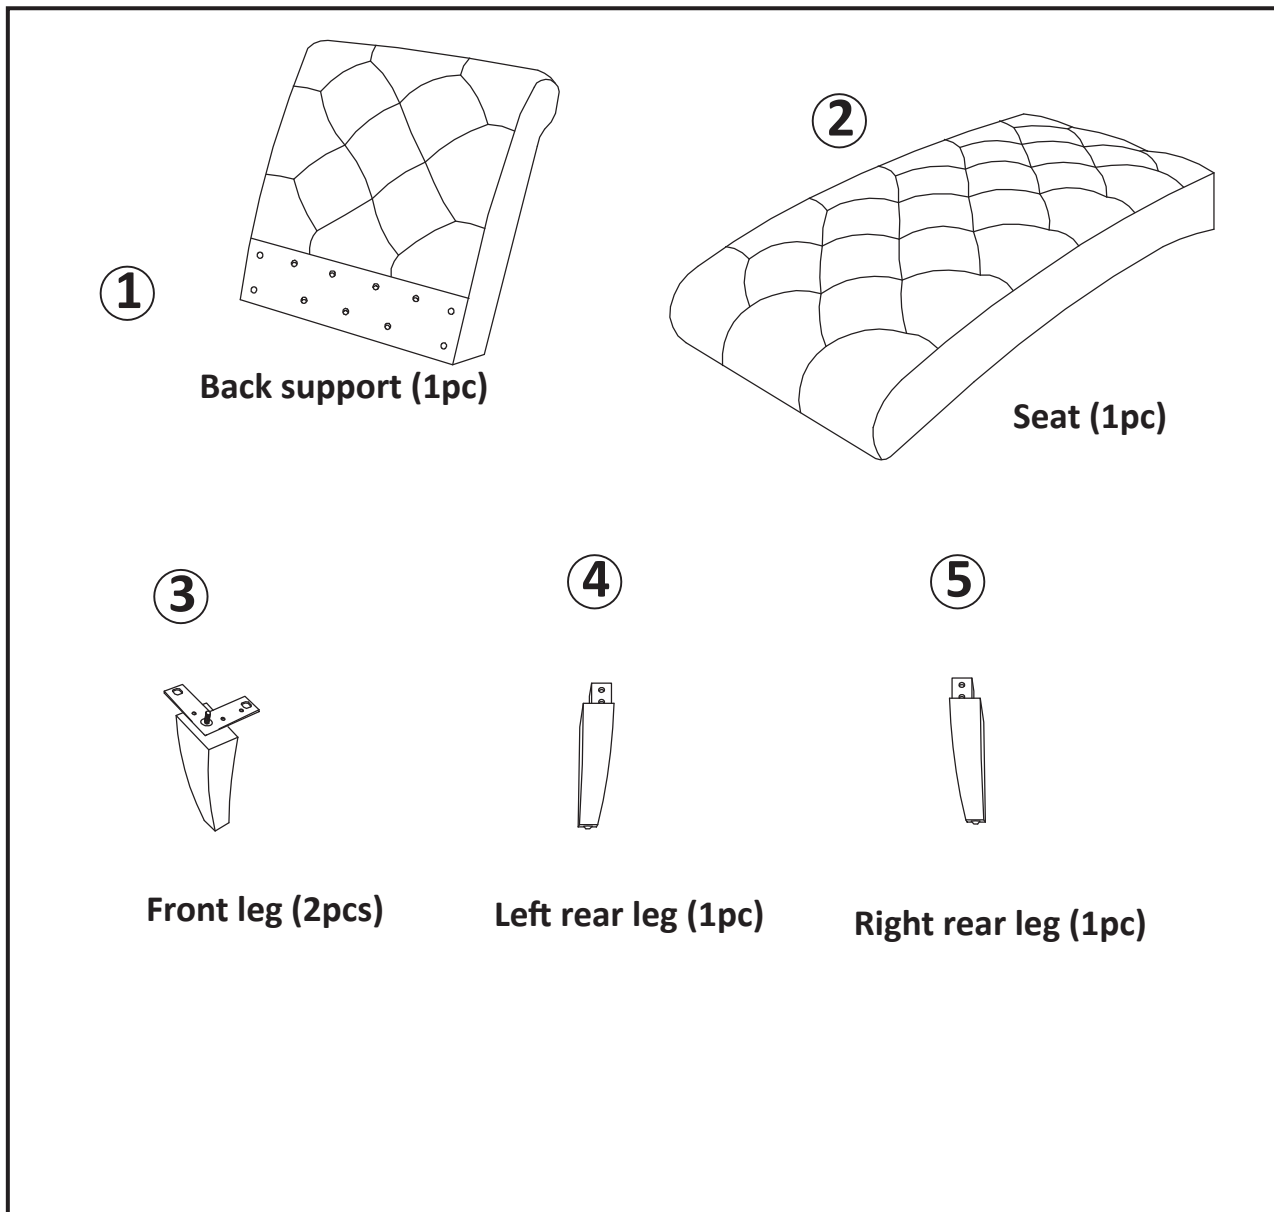


Step 1

1. Insert left rear leg ④ and right rear leg ⑤ into back support ① as shown .

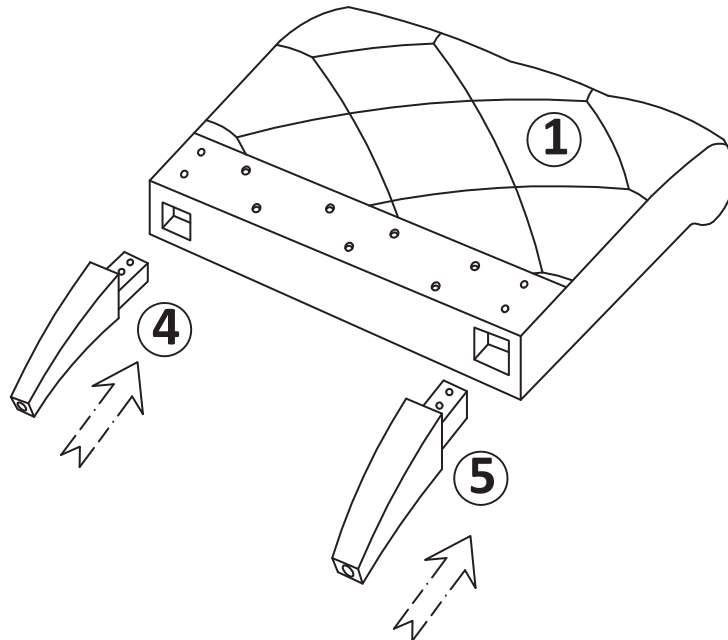


Step 2

1. Connect left back leg ④ and right back leg ⑤ to back support ① using long bolts(A) , big flat washers (C) , lock washers (E) and allen wrench (F) .

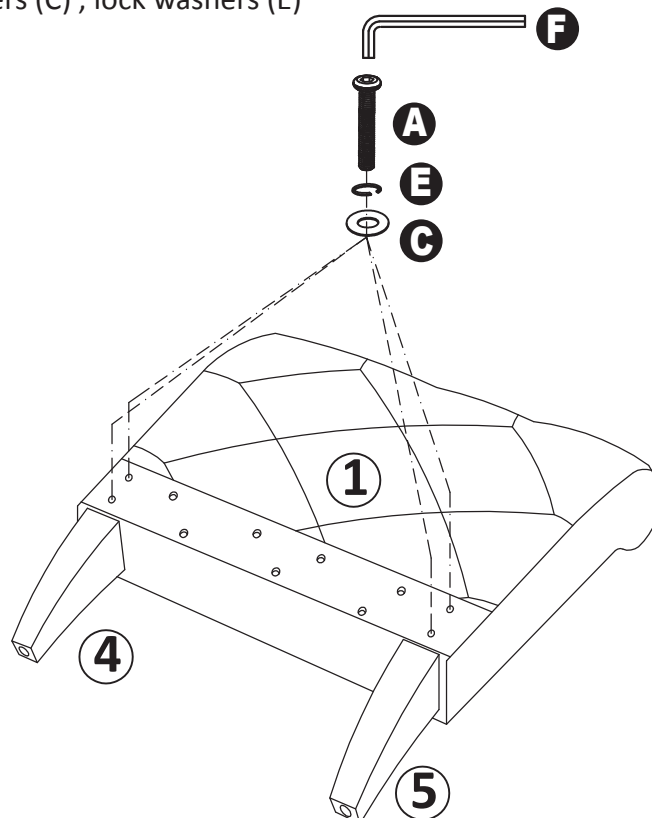

Step 3

1. Gently pull back fabric on seat (2) as shown.
2. Connect seat (2) to back support (1) as shown using long bolts (A), big flat washers (C), lock washers (E) and allen wrench (F).
3. Gently replace fabric on seat (2).

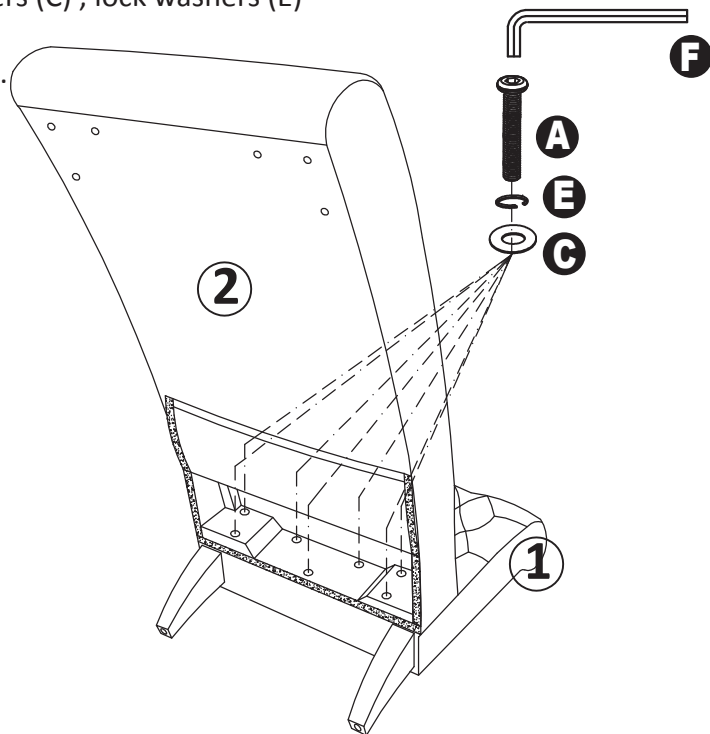

Step 4

1. Connect front legs (3) to unit as shown using washers (G), short bolts (B), flat washers (D), and allen wrench (F).
2. Enjoy .

