F3504A Installation & Operating Instructions for the Owner's Installation, Manual WARNING: SHUT POWER OFF AT FUSE OR CIRCUIT BREAKER



F3504A Installation & Operating Instructions for the Owner's Installation, Manual WARNING: SHUT POWER OFF AT FUSE OR CIRCUIT BREAKER

THANK YOU FOR YOUR PURCHASE

Thank you for purchasing this quality product. To ensure correct function and safety, please read and save all instructions before using the product



The ceiling fan must be installed in a location so that the blades are 300mm spacing from the tip of the blade to the nearest objects or walls. When hanging the Fan REMEMBER

2. For the wood ceiling, Secure the mounting bracket to the ceiling is capable of carrying a load of at least 45KGS with two long mounting screws and washers provided. Be sure at least 30mm of the screw is threaded into the support.

Light CCT.

- 3. Refer to the Fig. in right for mounting when the ceiling is angled max. 15 degree angle.

15*

Decorative

Lock pin

Set screw

Canopy cover

INSTALLING THE DOWNROD

When hanging the Fan REMEMBER to turn off the power. Follow the steps below to hang your fan properly:

1)Remove the bolt, lock pin and set screws from the top of the housing

2)Route wires exiting from the top of the fan motor through the bolt&pin , canopy and then through the ball / downrod.

3)Align the holes at the bottom of the downrod with the holes in the coupling on top of the top housing .

4)Carefully insert the Bolt through the holes in the Coupling and downrod Be careful not to jam the Bolt against the wiring inside the downrod. Insert the locking pin through the hole near the end of the Bolt until it snaps into its locked position.

Canopy

Downrod&

hanger ball

Coupling cover

Coupling

Bolt-

5) Tighten two set screws on top of the fan housing firmly

CHANGING THE DOWNROD (OPTIONAL)

NOTE: Your fan comes with a 25cm downrod attached to the hanger ball. In addition, a 10cm downrod has been provided to be used in case the ceiling is lower. In this case, perform the following steps for correct installation:

1. Remove the hanger ball from downrod by loosening the setscrew at the top of the downrod which holds the hanger ball to the downrod. 2. Slide the hanger ball down the downrod and remove the support pin. 3. Insert the support pin in the holes at the top of the 10cm downrod and slide the hanger ball up the 10cm downrod. Make sure the support pin is properly seated in the grooves in the top of the hanger ball. 4. Tighten the set crews firmly .

SAFETY CABLE INSTALLATION

For Canadian installation and for USA fan and light kit combinations over 35 lbs. the safety cable must be installed into the house structure beams. Make sure that when the safety cable is fully extended the lead wires are longer than the cable and no stress is placed on the lead wires. Note: If Installing The Secondary Support Safety Cable in the U.S., Do Not Remove Knockouts In The Outlet Rοx





110000

INSTALLING THE FAN TO MOUNTING BRACKET ON CEILING

WARNING: To avoid possible electrical dhock . be sure electricity is turned off at the main fuse box before wiring. 1.Install ball end of downrod into mounting bracket opening. Align (engage) slot on ball with tab on mounting bracket.

Warning: Failure to align slot on ball with tab may result in serious injury.

2.Slide the canopy up to ceiling and align the keyhole slots on the canopy with the preassembled screws on the hanger bracket. Twist clockwise untill locks. Tighten two screws securely.

3.Attach the decorative canopy cover to the bottom of the canopy by pressing it until it locks.



USING YOUR CEILING FAN

WALL CONTROL

Turn on the power and check the operation of the fan

1– Fan Shutdown

- 2- Speed Controlle
- 3– Lamp Switch



MAKE THE ELECTRIC CONNECTIONS

WARNING: To avoid possible electrical shock, be sure electricity is turned off at the main fuse box before wiring.

1. Light kit to motor wires Electrical Connections: Connect the white wires from light pan to the white N wire from the fan. Connect the blue wires from light pan to the blue LIGHT L wire from the fan. Secure the wire connections with the wire nuts provided.

2. Motor to Wall control Connections: Connect the Black wire from the FAN L to FOR FAN L wire from the Wall control.Connect the Blue wire from the LIGHT L to the FOR LIGHT L wire from the Wall control.Secure wire connections with the wire nuts provided.

3.Wall control to House supply wires Electrical Connections:Connect the white(Neutral) wire from the ceiling to the white N wire from the fan.Connect the black(Hot) wire from the ceiling to the black wire from the wall control.Secure wire connections with the wire nuts provided.

INSTALLING THE LIGHT KIT

1.Remove the 7 Light and Lampshade screws preassembled from the screws on the base plate. Connect white and blue wires from light kit and Lampshade to the white and blue wires from fan, using wire nuts provided. Attach the light fixture onto the base plate. Aligning the 3 holes on the light fixture with and the 4 holes on the the Lampshade fixture with There are 7 screw holes in the bottom plate. Reinstall the 7 Light and Lampshade sciews that were just removed. And tighten all nuts and screws securely

2. Install 3 X Max.25 watt bulbs (bulb not included)

WARNING: Over lamping the fan will result in the fan lights shutting down until the proper wattage of bulbs are installed. Replace bulbs with the correct wattage bulbs, turn the power on.

WARNING: Do not replace bulb until it cools down.

AFTER INSTRUCTION

WOBBI F

The fan blades have been adjusted in the factory to minimize any wobble NOTE:CEILING FANS TEND TO MOVE DURING OPERATION DUE TO THE FACT THAT THEY ARE MOUNTED ON A RUBBER CROMMET. IF THE FAN WAS MOUNTED RIGIDLY TO THE CEILING. IT WOULD CAUSE EXCESS VIBRATION. MOVEMENT OF A FEW CENTIMENTERS IS QUITE ACCEPTABLE AND DOES NOT SUGGEST ANY PROBLEM TO REDUCE THE FAN WOBBLE: PLEASE CHECK THAT ALL SCREWS WHICH SECURED THE MOUNTING BRACKET AND DOWNROD ARE SECURE. BALANCING A WOBBLING CEILING FAN:

For your convenience, a Balancing Kit is included; please follow this procedure when balancing the fan: 1) Install fan without light dome before balancing the fan.

2) Define the base plate into four areas(point A,B,C&D). Use one weight from the balance kit to lightly stick on the edge of the base plate(Point A), if the wobble worsens, then take off the balance kit to lightly stick on the opposite side(Point B); if the wobble is worse then go to the adjacent point C or D. if the wobble gets better, then securely stick on the weight at this

location on the base plate.

3) After balancing the fan, assemble the light dome to the light base.

NOISE

When it is quiet(especially at night) you may hear occasional small noises. Slight power fluctuations and frequency signals superimposed in the electricity for off-peak hot water control, may cause a change in fan motor noise. This is normal. Please allow a 24-hour "breaking-in" period, most noises associated with a new fan disappear during the time. The manufacturer's warranty covers actual faults that may develop and NOT minor complaints such as hearing the motor run – All electric motors are audible to some extent.

CARE AND CLEANING

- power before you clean your fan
- 2. Do not use water when cleaning your ceiling fan. It could damage the motor or the blades and create the possibility of an electrical shock. 3. Motor has permanently lubricated ball bearing. No need to oil
- NOTE: MAKE SURE THE POWER IS OFF AT THE ELECTRICAL PANEL BOX BEFORE YOU ATTEMPT ANY CLEANING OR REPA

F3504A Installation & Operating Instructions for the **Owner's Installation**, Manual WARNING: SHUT POWER OFF AT FUSE OR CIRCUIT BREAKER



1. Periodic cleaning of your ceiling fan is the only maintenance required. Use a soft brush or lint ree cloth to avoid scratching the paint finish. Please make sure to turn off electricity