



DURA HEAT®

EUH1500

Portable Workspace Forced Air Heater

Installation Instructions and Operator's Manual

WARNING! IF THE INFORMATION IN THIS MANUAL IS NOT FOLLOWED EXACTLY, A FIRE MAY RESULT CAUSING PROPERTY DAMAGE, PERSONAL INJURY OR LOSS OF LIFE.



Intertek

Made in China

COMFORT GLOW PHONE NUMBER:

(800) 776-9425

<http://www.worldmkting.com>

World Marketing of America, Inc

PO Box 192

Mill Creek, PA 16652

FOR YOUR SAFETY

**DO NOT STORE
OR USE GASOLINE OR
OTHER FLAMMABLE
VAPORS
OR LIQUIDS
IN THE VICINITY OF THIS
OR
ANY OTHER APPLIANCE**

FEATURES:

- Heavy Duty Fan Forced
- 2 wattage settings
- Safety Overheat
- Thermostat control
- Sturdy Base Positioning
- Stand and Handle



CALIFORNIA RESIDENTS ONLY-WARNING:

This product contains chemicals including di(2-ethylhexyl) phthalate (DEHP), which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to: www.P65Warnings.ca.gov

ANSI/UL 1278. MOVABLE AND WALL-OR CEILING HUNG ELECTRIC ROOM HEATERS

**DO NOT DISCARD THIS MANUAL - LEAVE FOR HOME OWNER
CUSTOMER: PLEASE RETAIN THIS MANUAL FOR FUTURE USE**

IMPORTANT INSTRUCTIONS

INTENDED USE This product is intended ONLY for indoor household or office use.

It is NOT intended for industrial or commercial use. Do not use the product outdoors.

When using electrical appliances, basic precautions should always be followed to reduce the risk of fire, electric shock, injury to persons, and hyperthermia, including the following:

- 1) Read all instructions before using this heater.
- 2) This heater is hot when in use. To avoid burns, **DO NOT** let bare skin touch hot surfaces. If provided, use handles when moving this heater. Keep combustible materials, such as furniture, pillows, bedding, paper, clothes, and curtains at least 3 feet (0.9m) from the front of the heater and keep them away from the sides and rear.
- 3) Extreme caution is necessary when any heater is used by or near children or invalids and whenever the heater is left operating and unattended.
- 4) **ALWAYS** unplug the heater when not in use. (This item may be omitted if the heater is provided with a clock-operated switch).
- 5) **DO NOT** operate any heater with a damaged cord or plug or after the heater malfunctions, has been dropped or damaged in any manner. Discard heater or return to authorized service facility for examination and/or repair.
- 6) **DO NOT** use outdoors.
- 7) This heater is not intended for use in bathrooms, laundry areas and similar indoor locations. **NEVER** locate heater where it may fall into a bathtub or other water container.
- 8) **DO NOT** run cord under carpeting. **DO NOT** cover cord with throw rugs, runners, or similar coverings. **DO NOT** route cord under furniture or appliances. Arrange cord away from traffic area and where it will not be tripped over.
- 9) To disconnect heater, turn controls to off, then remove plug from outlet.
- 10) Connect to properly grounded outlets only. (This item may be omitted if the heater is not provided with a grounding type attachment plug.)
- 11) **DO NOT** insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock or fire or damage the heater.
- 12) To prevent a possible fire, **DO NOT** block air intakes or exhaust in any manner. **DO NOT** use on soft surfaces, like a bed, where openings may become blocked.
- 13) A heater has hot and arcing or sparking parts inside. **DO NOT** use it in areas where gasoline, paint, or flammable liquids are used or stored.
- 14) Use this heater only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or injury to persons.
- 15) Always plug heaters directly into a wall outlet/receptacle. **NEVER** use with an extension cord or relocatable power tap (outlet/power strip).
- 16) This heater may include an audible (a visual) alarm to warn that parts of the heater are getting excessively hot. If the alarm sounds (flashes), immediately turn the heater off and inspect for any objects on or adjacent to the heater that may cause high temperatures. **DO NOT OPERATE THE HEATER WITH THE ALARM SOUNDING (FLASHING).**
- 17) Any repairs to this appliance should be carried out by a qualified service person.
- 18) Under no circumstances should this appliance be modified. Parts having to be removed for servicing must be replaced prior to operating this appliance again.
- 19) **DO NOT** use this heater in elevated locations, such as on shelves, raised platforms, etc.
- 20) This appliance, when installed, must be electrically grounded in accordance with local codes, with the current CSA C22.0 Canadian Electrical codes or for USA installations, follow local codes and the National Electric code ANSI/NFPA No. 70.
- 21) Hyperthermia can result in death. Symptoms of hyperthermia include high body temperature, headache, nausea, vomiting, tiredness, dizziness, fainting, and rapid pulse. If you begin to experience symptoms related to hyperthermia, turn off the heater and seek medical attention.
- 22) To avoid excessive room temperatures which can cause hyperthermia: **DO NOT** leave product running unattended in a confined space around infants, or individuals with reduced physical, sensory, or mental capabilities.

"SAVE THESE INSTRUCTIONS"

ALWAYS OBSERVE THESE SAFETY PRECAUTIONS WHEN OPERATING YOUR ELECTRIC HEATER

- ALWAYS** Read all instructions before operating.
- ALWAYS** Locate your electric heater away from furniture or loose hanging drapes.
- ALWAYS** Keep the rear grill away from walls or drapes so as not to block the air intake. (If applicable)
- ALWAYS** Unplug electric heater when not in use.
- ALWAYS** Use electric heater on a flat dry surface.
- ALWAYS** Use on 110–120-volt 60Hz AC power supply.
- ALWAYS** Route the cord so it will not be walked on tripped over or pinched by furniture.
- ALWAYS** Keep electrical cords, drapes and other furnishings away from your electric heater.
- ALWAYS** Keep your electric heater clean and the filter free of dust. (If applicable)
- ALWAYS** Use indoors only.

NEVER Place drapes, clothing or towels over electric heater to dry.

NEVER Use in the presence of explosive or flammable vapors such as gas or paint.

NEVER Plug another electrical appliance into the same circuit. Blown fuses, tripped circuits and fire hazards may result.

NEVER Use water or liquids to clean your electric heater.

NEVER Let bare skin touch hot surfaces as this may cause burns.

NEVER Leave electric heater unattended.

NEVER Leave electric heater when children or pets are present.

NEVER Locate electric heater where it may fall into a bathtub or other water containers.

NEVER Operate electric heater with a damaged cord, plug or after the heater malfunctions, or has been dropped or damaged in any manner.

NEVER Run cord under carpeting or cover with throw rugs or runners.

NEVER Insert or allow foreign objects to enter any ventilation or exhaust openings, as this may cause an electrical shock, fire or damage.

“SAVE THESE INSTRUCTIONS”






IMPORTANT: Read all instructions and warnings carefully before installation and use. Failure to follow these instructions may result in a possible electric shock, injury to persons, fire hazard and will void the warranty.



OPERATING INSTRUCTIONS

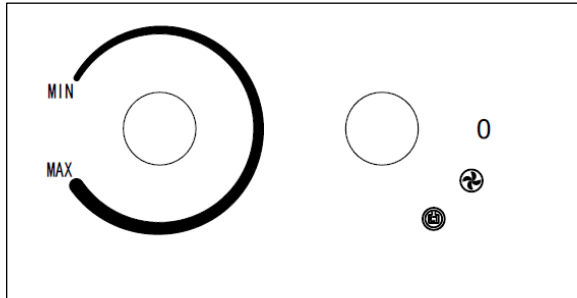Note: When using the heater for the first time, you may notice a slight emission of smoke. This is normal and will stop after a short time. The heating element is made of steel and was coated with a layer of protective oil during production.



Setting	Function
0	Unit is off
	Fan Runs – No Heat
	Fan Runs – Full Power Heat

1. Position the fan heater so that it stands on a firm level surface (When used as portable) and at a safe distance from wet locations and flammable objects.
2. Connect the fan heater to the proper electrical power. See grounding instructions.
3. Set the power settings knob to fan or heating Position.
4. Set the thermostat dial to the maximum temperature by turning the thermostat dial to maximum.
5. Once the room reaches the desired temperature, turn the thermostat dial back until the heating element turns off. The heater will cycle automatically around the set temperature. To increase temperature, turn the thermostat knob clockwise. To lower the temperature, turn the thermostat counterclockwise.



Electrical outlet wiring must comply with local building codes and other applicable regulations to reduce the risk of fire, electrical shock and injury to persons.

 


Do not use this appliance if any part of it has been underwater. Immediately call a qualified service technician to inspect the appliance and replace any part of the electrical system which has been under water.



Grounding Instructions:

Make sure the heater is switched OFF before plugging the heater into the outlet. Connect to properly grounded outlets. only. **Note:** The power cord has a polarized plug (with one blade wider than the other) that will only fit in a polarized outlet. one way. If it does not insert easily try reversing the plug. If it still does not fit contact your electrician to replace your outlet. DO NOT defeat the safety purpose of the polarized plug.



OVERHEAT PROTECTION:

This heater is equipped with an internal heat limiting thermostat and overheat protection circuit. When a potential overheat temperature is reached, the system will automatically shut the heater off. Unplug heater allow to cool down for 10 minutes, and then restart.



CAUTION:
RISK OF ELECTRIC SHOCK
DO NOT OPEN
NO SERVICEABLE PARTS INSIDE



CLEANING AND MAINTENANCE

Any electrical repairs or rewiring of this unit should be carried out by a licensed electrician and accordance with national and local codes.

- Before cleaning the appliance, disconnect it from the power outlet and let it cool down.
- To protect the inside, **DO NOT** splash water onto the heater, and **NEVER** use a solvent like gasoline, isoamyl acetate, toluene, etc. to clean the heater. **DO NOT** open the heater or attempt to clean the inside of this appliance.

SPECIFICATIONS

Model	EUH1500 (All specifications +5% / -10% tolerance)
BTU's per/Hour	5120
Voltage	120V
Watts	1500
Amps	15
Heating Area (m ²)	15

TROUBLE SHOOTING:

If your heater fails to operate, please do the following:

- Review these instructions to ensure you understand the basic operations and features of your heater. (Example: Overheat Protection)
- Check your circuit breaker or fuse for proper operation.
- Check for obstructions. Unplug the heater for 30 minutes, clear any obstructions and restart the heater.

ELECTRIC HEATER WARRANTY

LIMITED WARRANTY:

A limited warranty is extended to the original purchaser of this heater and warrants against malfunction due to manufacturing defects for a period of (1) one year from the date of retail purchase. Please read and follow all details noted below. **To register your product please visit www.worldmkting.com**

CLAIMS HANDLED AS FOLLOWS:

WITHIN 30 DAYS OF PURCHASE:

Return to the place of purchase.

AFTER 30 DAYS AND WITHIN THE 1 YEAR WARRANTY PERIOD:

Contact our Customer Service Department at 1-800-776-9425. You must have the: model number, serial number and date of purchase.

They will provide you with further instructions, which will include repair or replacement at our option. **To register your product please visit www.worldmkting.com**

CALL 1-800-776-9425 FOR SERVICE (9AM-5PM MON. - FRI.) or EMAIL US AT info@worldmkting.com

DUTIES OF THE OWNER:

This heating appliance must be operated in accordance with the written instructions furnished with this heater. This warranty shall not excuse the owner from properly maintaining this heater in accordance with the written instructions furnished with this heater. A bill of sale canceled check or payment record must be kept to verify purchase date and establish warranty period. Original carton should be kept in case of warranty return of unit.

WHAT IS NOT COVERED:

1. Damage caused by misuse or use contrary to the owner's manual and safety guidelines.
2. Damage caused by a lack of normal maintenance.
3. Repair by an unauthorized person.
4. Damage caused by connection to an improper voltage.
5. Damage caused by use outdoors.

LIMITATIONS:

This warranty does not imply or assume any responsibility for consequential damage that may result from the use, misuse, or the lack of routine maintenance of this heating appliance. A cleaning fee and the cost of parts may be charged for appliance failures resulting from lack of maintenance. This warranty does not cover claims which do not involve defective workmanship or materials. FAILURE TO PERFORM GENERAL MAINTENANCE (INCLUDING CLEANING) WILL VOID THIS WARRANTY.

THIS LIMITED WARRANTY IS GIVEN TO THE PURCHASER IN LIEU OF ALL OTHER WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE WARRANTIES OF MERCHANTABILITY OF FITNESS FOR A PARTICULAR PURPOSE. THE REMEDY PROVIDED IN THIS WARRANTY IS EXCLUSIVE AND IS GRANTED IN LIEU OF ALL OTHER REMEDIES. IN NO EVENT WILL WORLD MARKETING OF AMERICA BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES.

Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you. Some states do not allow the exclusion or limitation of incidental or consequential damages so the above limitation or exclusion may not apply to you.

