


 








Thank you for purchasing this quality product from A.R.T. Furniture. Be sure to check all packing material for parts which may have come loose inside the carton during shipment. Identify and count all parts and compare with the parts list below.



Note: Some furniture is heavy, it is recommended that **FOUR** people assembly this item to avoid injury or damage.

PART	DESCRIPTION	PICTURE	QUANTITY
A	TABLE TOP		1
B	SUPPORT BAR		1
C	BASE		1
D	M8 X 40 BOLT		8
E	LOCK WASHER (Ø 1/3")		8
F	FLAT WASHER (Ø 1/3")		8
G	5mm ALLEN WRENCH		1
H	TOUCH-UP PEN		1

STEP 1:


1) Remove all protective material carefully. Avoid cutting the surface of the furniture while removing the packaging material.

2) Place X Cross Bar (B) on the Table Base (C) and align with the hole placements. Loosely attach with Bolts (D) through Lock Washer (E) and Flat Washer (F). Secure all bolts after adjustment made. See Diagram 1:

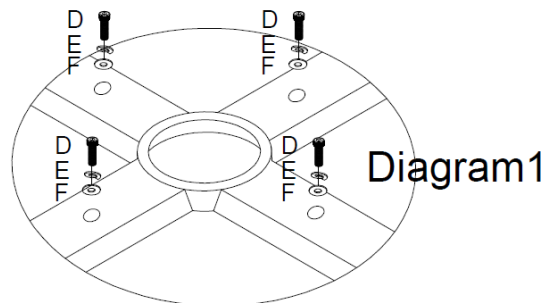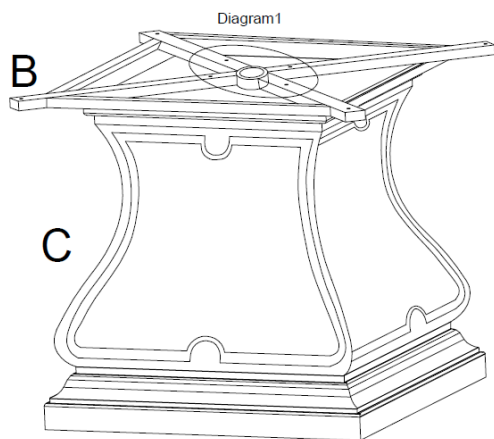


STEP 2:

1) Place Table Top (A) upside down on soft surface. Align Table Base (C) with the hole placements on Table Top (A). Loosely attach Bolts (D) through Lock Washer (E), Flat Washer (F), X Cross Bar (B) with Table Top (A). Secure all bolts after adjustment made. See Diagram 2.

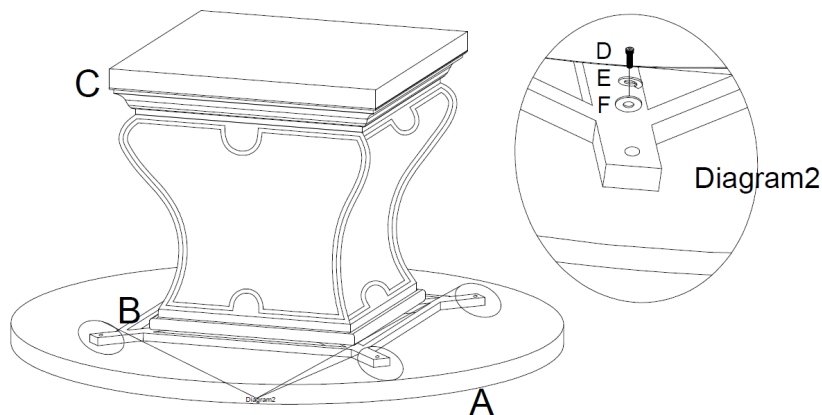

STEP 3:

- 1) Turn the table to up-right position with help from at least four person due to the heaviness of the table.
- 2) Use Touch-up pen provided to repair any indentation marks occurs during assembly.
- 3) The table is ready for your enjoyment.

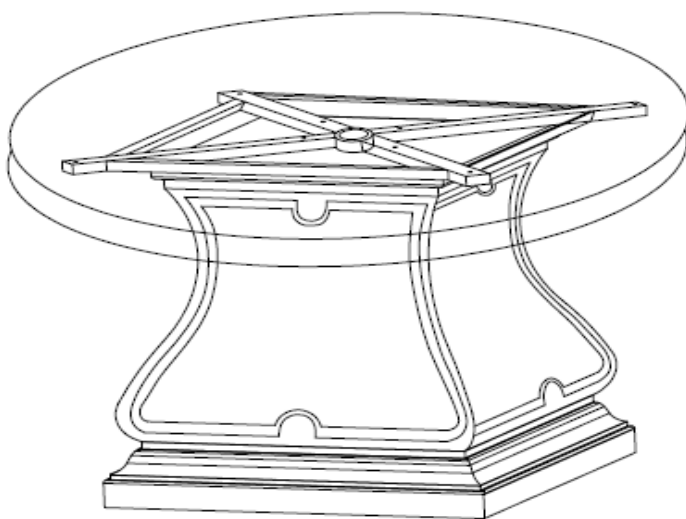



Your new product includes a touch-up pen for any minor scratches that may occur. Please follow the directions below for the proper use in adequate ventilation.

Important Safety Information:**WARNING!  KEEP OUT OF REACH OF CHILDREN!**

- *Harmful or fatal if swallowed. If induce vomiting call a physician immediately.*
- *Be sure to replace the cap after use.*
- *Avoid contact with clothing and fabrics as it may leave a stain.*
- *Avoid contact with skin and eyes. If contact with skin, wash thoroughly. If contact with eyes, flush eyes with plenty of water and seek medical attention.*
- *Do not use the pen for any other than touching up finish.*
- *Avoid storage in extreme heat or cold to preserve the life of the pen and to prevent from drying out.*

Application Instruction:

1. Completely clean and dry the area requiring repair. Make sure any loose material has been removed including any loose parts of the original paint layer and any dirt on the surface.
2. Shake pen vigorously for 1-2 minutes. Then remove the cap and make the pen point upwards. Press the pen point with finger two times to release the air within the pen.
3. Stroke in direction of grain on the desired area. Too much touch-up paint at one time will create a darker color than desired. Start with a small amount and increase the amount as needed. It may require multiple applications to achieve the desired color match.
4. After applying the touch-up pen, wait 5 seconds and wipe the paint with pressure in an even motion using a clean, dry, lint-free, 100% cotton or white cloth. Rub over the part to be repaired and the immediate area surrounding it to achieve the best results.
5. If you apply too much touch up on the surface you should quickly use the white cotton cloth to absorb the excess paint.
6. To achieve the desired depth of color, the above procedure can be repeated as necessary.

Important Notes:

- One touch-up pen can be used many times. Make sure to replace the cap tightly to the bottle after every use.
- When using the touch up pen provided, do not put any other liquid on the surface of the area being repaired.

NOTICE!

During normal use everyday, screws, bolts, nuts and wooden plugs may loosen up. They should be periodically inspected and re-tightened to prevent damage to the furniture and (or) personal property or cause injury. Always check to be sure all hardware is attached to the furniture properly and kept tightened at all times.

PRECAUTIONS A PRENDRE

Le vis, la tige filetée, l'écrou et le bouchon en bois peuvent être déplacés lors de l'utilisation quotidienne. Il faut les contrôler périodiquement et les serrer si c'est nécessaire afin d'éviter d'abîmer le meuble et l'utilisateur. Priez de vérifier fréquemment si les composants sont correctement assemblés et bien serrés sur le meuble.

NOTAS

Uso cotidiano, los tornillos, tornillos, tuercas y Muse pequeños pueden estar sueltas. Por favor, compruebe periódicamente estos componentes y sujeción ellos, utilizados para evitar los daños de mobiliario y daños a personas. Por favor, compruebe siempre si correcto montaje, de fijación en los muebles.