
INSTRUCTIONS FOR MODELS

S-1574 CDS1574

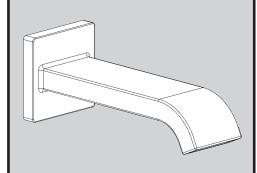

NEED HELP?

For additional assistance or service please contact:

SPEAKMAN® Company 400 Anchor Mill Road New Castle, DE 19720



عُرِينَ¹ 800-537-2107



customerservice@speakman.com



www.speakman.com

92-S-1574-02

TOOLS AND SUPPLIES





IMPORTANT



- Do not over-tighten any connections or damage
- Be sure to read instructions thoroughly before beginning installation.

SAFETY TIPS

Cover your drain to prevent loss of parts. Be sure to wear eye protection while cutting pipe.

MAINTENANCE


0


Your new Speakman product is designed for years of trouble-free performance. Keep it looking new by cleaning it periodically with a soft cloth. Avoid abrasive cleaners, steel wool, and harsh chemicals as these will dull the finish and void your warranty.

WARRANTY


0


Warranty information can be found at: www.speakman.com

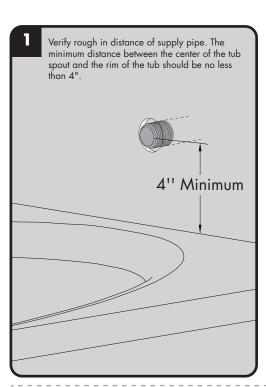

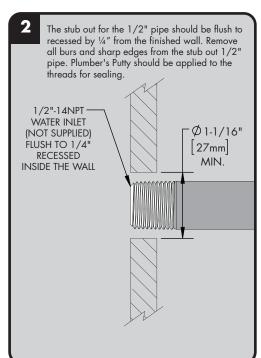

Engage the threads and rotate Spout (1) clockwise over the stub out pipe until tight and flush to wall. Center the Spout on the wall. Make sure to firmly tighten. Outlet port should be pointing downward when complete.

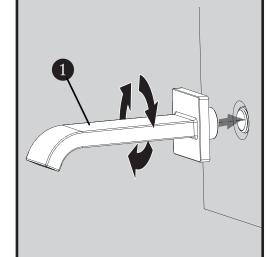

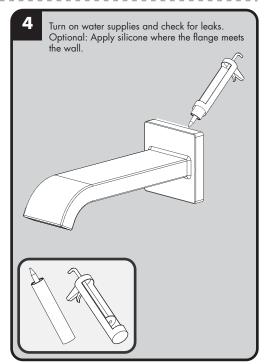

NOTES:

COMPLIANCE:


ASME A112.18.1/CSA B 125.1

FLOW:


Flow Rate: Full Flow


CONNECTIONS:

Supply Connection: 1/2" NPT Male Threaded Connection

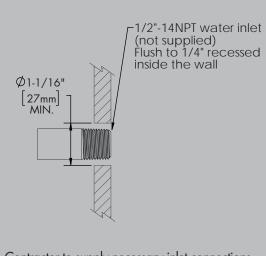

Contractor to supply necessary inlet connections

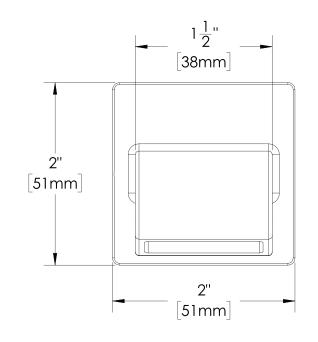

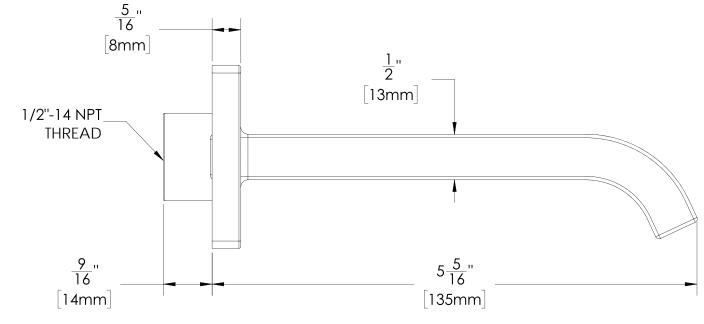

DIMENSIONS SUBJECT TO CHANGE WITHOUT NOTICE.