

Perfection is our Tradition™ 1-844-44-ANZZI or visit www.ANZZI.com

Step 4 Parts list



| NO. | PARTNAME |
|-----|--------------------|
| 1 | Index |
| 2 | Screw |
| 3 | Handle |
| 4 | Trim cap |
| 5 | O-ring |
| 6 | Cartridge lock nut |
| 7 | O-ring |
| 8 | O-ring |
| 9 | Cartridge |
| 10 | O-ring |
| 11 | Copper tube |
| 12 | Screw |
| 13 | Aerator washer |
| 14 | Aerator core |
| 15 | Aerator collar |
| 16 | Body |
| 17 | Screw |
| 18 | Base |
| 19 | O-ring |
| 20 | Rubber washer |
| 21 | Clamp |
| 22 | Lock nut |
| 23 | Screw |
| 24 | Flexible hose |



SINGLE HANDLE LAVATORY FAUCET

JPC ASME A112.18.1/CSA B125.1

The tools might be applied to the following places:



L-AZ096 INSTALLATION MANUAL



Faucet installation Step 1

Step 2 Checking and testing



1.Assemble the 2 flexible hose and screw to the faucet by hand.

2.Put the faucet into the installation hole of the basin. Make sure o-ring be on the base of faucet. Assemble rubber washer #20 and clamp #21 to screw. Then assemble lock nut #22 by basin wrench to screw to fix the faucet.



1. Remove the aerator by hand. Turn the faucet handle all the way on, turn on hot and cold water supply and flush water lines for one minute. Reinstall aerator by hand. 2.Check all connections at arrows for leaks, re-tighten it if necessary. BUT DON'T OVERTIGHTEN!



Step 3 Cleaning and care

Daily cleaning and care are required in order to keep the product shining and properly working.

1 Clean it with water and dry it with soft cloth.

2 Clean the product with gentle liquid or glass cleaner.

3 Don't use acid cleaner.

4 Don't clean with abrasive material, abrasive paper or knife.

3.Connect the flexible hose to water supply valve (not included), and tighten it with adjustable wrench. DON'T OVER TIGHTEN!

Caution: make sure connect the hot and cold flexible hoses to supply valves correctly.

Warning:

The supply valves are not included, please purchase them in plumb shop.

