
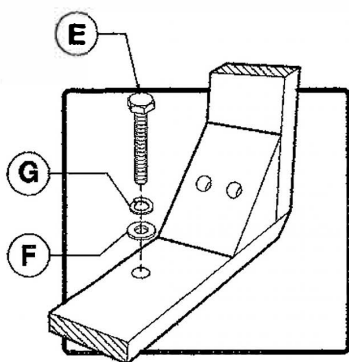



# ASSEMBLY INSTRUCTIONS

## LIST OF PARTS


NO.	Q.TY	DESCRIPTION
A	1 PC.	CHAIR BACK
B	1 PC.	WOOD SEAT
C	2 PCS.	FRONT LEG
D	4 PCS.	LONG K.D. SCREW
E	2 PCS.	SHORT K.D. SCREW
F	10 PCS.	FLAT WASHER
G	10 PCS.	LOCK WASHER
H	4 PCS.	NUT
I	1 PC.	KEY WRENCH

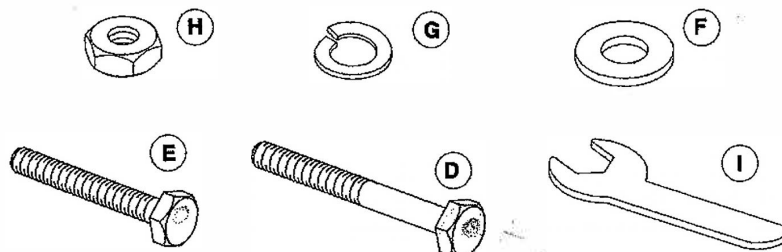

DETAIL: A

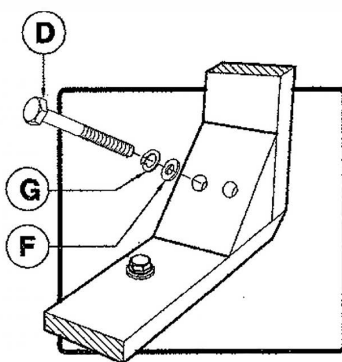


DETAIL: B

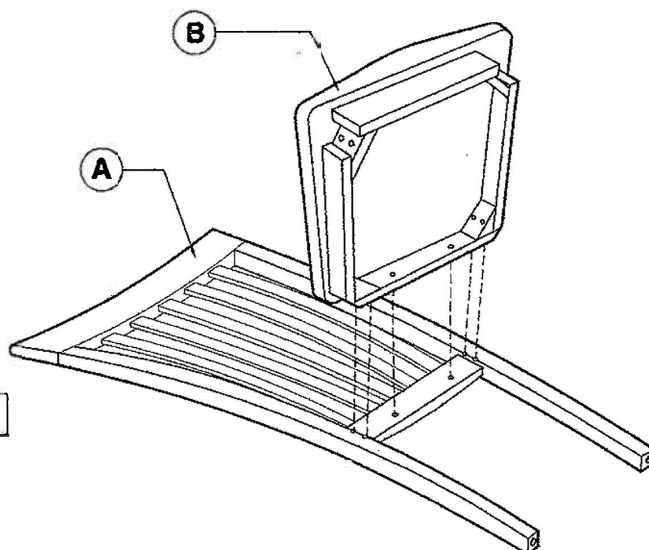


### STEP: 1

- Remove all parts from carton.
- Open carton so that it can be used as work surface for assembly.
- Place the Chair Back (A) on the carton.
- Place the Wood Seat (B) on the Chair Back (A) and insert a Flat Washer (F), Lock Washer (G) and a short K.D. Screw (E) into each of the 2 holes on back of the wood seat tighten the screw with the provided Key Wrench (I). **Do not fully tighten the screws. ( SEE DETAIL: A )**
- Insert the Flat Washer (F), Lock Washer (G) and Long K.D. Screw (D) into each of 2 holes in the seat corners. Fully tighten all screws with the provided Key Wrench (I) by turning clockwise until secure. ( SEE DETAIL: B )

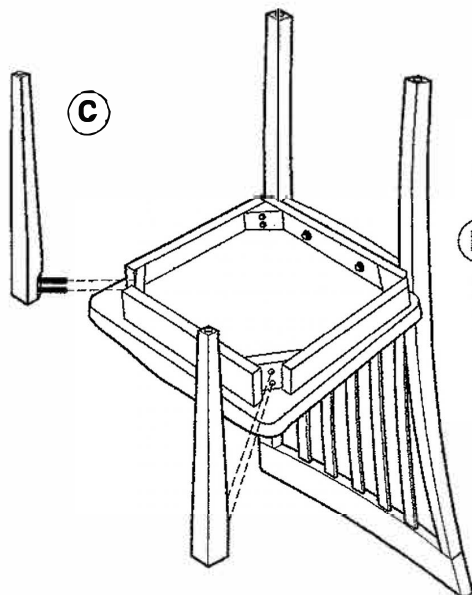

DETAIL: C

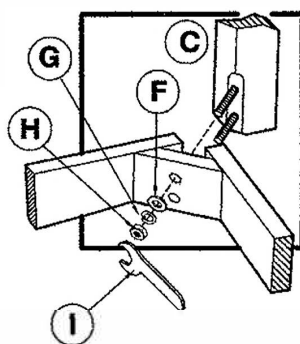

### STEP: 2

- Turn over the chair and attach the Legs (C) to the front of the corner seat frame.
- Place Flat Washer (F), Lock Washer (G) and Nut (H) on each bolt.
- Turn the Nut (H) on each leg several turns with Key Wrench (I) by turning clockwise until secure. ( SEE DETAIL: C )