



# Instruction Manual – LED572T

## Main Features:

Alpine Corporation is proud to introduce our New LED Garden Lighting. These innovative lights will add character, class and ambiance to your pond, garden and water feature.

- Super bright LED light, that offers low energy consumption, for an environmentally friendly solution to standard lighting.
- Multi Color Light with Color Changing Controller, Mega Bright White Light and On/Off switch.
- Sleek design housing constructed of High Grade Waterproof Materials.
- Waterproof Design can be used In or Out of Water.
- All-purpose adjustable stand.
- Low voltage design for safe handling and lower energy costs.

Product Name	Mega Bright Color Changing LED Light with Controller					
Model #	LED572T					
Rated Voltage	INPUT: 120V/60Hz, OUTPUT: AC12V/500mA					
Consumption Power	6 Watt					
Light head Dimension	Diameter 2.8" x Height 1.1"					
Cable length	10 m (33 feet)					

### Caution:

- If used with a different transformer than what is included please make sure it has the proper voltage rating.
- (2) The transformer can get hot! Please be sure not to cover and is in a location were it can receive sufficient air circulation.

# **Operation:**

- 1. Place the light in your pond, water feature or attach the garden stake and place in your garden in the direction you would like to illuminate.
- 2. Connect the cable to the transformer: Plug the male connector pin into the female connector on the transformer; turn the locknut clockwise until tight.
- 3. Plug the transformer into a standard 110 Volt outlet and enjoy your new light.
  - (1) Use the Power Switch on the cord to turn ON or turn OFF.
  - (2) Press the Mode Switch to select the desired color. Listed below is the order of the different modes. Not all lights will start at the same mode. For example, when first turned on, if the mode is solid red, the next more will be solid blue.

# Useful Information:

Need more lighting to add to your landscape? Please contact your local Alpine distributor.

- You can also use this product with an Alpine Photocell & Timer to automatically turn on your lighting at dusk and turn off at dawn or programmed to turn on and off at your desired time. Photocell & Timer is part number PL200 and is not included.
- Attach either 5 or 10 lights to a single transformer system with Alpine Garden Light Cable. Available in 25 foot with 5 outlet connectors or 50 foot with 10 outlet connectors. Garden Light Cables are part numbers PL325 and PL350 and are not included.
- 3. Power all your Garden and Landscaping needs with just one transformer. Alpine can meet all your needs and Alpine distributors carry transformers ranging from 60 Watt all the way up to 300 Watt for even your biggest landscape projects! Contact a local distributor today and ask for more great products from Alpine Corporation!

### If Power Switch is pressed and held for more 2 seconds, the light will automatically shut down and keep standby status.

FUNCTION	MODE	COLOR ORDER	RED	GREEN	WHITE	STATUS	
Single color	1		•			Solid constant color	
	2			•			
	3				•		
Multi-color	4		•	•			
	5			•	•		
	6		•		•		
All color	7		•	•	•		
Auto-changing color	8	1	•	٠	•	Auto-changing color cycles, 40 seconds per cycle.	
		2	•	•			
		3		٠			
		4	•	٠	•		
		5	•		•		
		6	•				
		7	•	٠	•		
		8			•		
		9	•		•		
	9	1	•				
		2		•			
		3			•	Light up each color as modes	
		4	•	•		No. 1 to No.7 step by step, 3	
		5		•	•	seconds per cycle.	
		6	•		•		
		7	•	٠	•		
	10	Flashing all above modes automatically 1 s				1 second cycle	
<ul> <li>NOTE:</li> <li>(1) <sup>*</sup>●" indicate the LED lighted up;</li> <li>(2) This list just shows the function of the controller, the exact color combo is indicated on outside packaging.</li> </ul>							



# **Limited Warranty Information**

Thank you for choosing an Alpine product! We aim to please with our wide range of products including Fountains, Birdbaths, Statuary, Pond Supplies & More. All of our products are constructed from the highest quality materials. In the event that we have not achieved our usual standard of excellence, we will repair or replace, at our discretion, within the warranty period. A valid proof of purchase, with the purchase date clearly indicated, must be provided. Photos of defective merchandise will also be required to help distinguish the actual cause of the defect. Please read below for a detailed description of warranty coverage.

### • Water Damage

Alpine products are not manufactured to withstand extreme temperatures. Improper storage that allows water to freeze within a product may cause damage and is considered negligence and will, therefore not be covered under this warranty. The use of "hard water" and/or caustic cleaners can affect the paint or other finishes. Failure to keep the unit clean, and use of such additives/cleaners, will also void the warranty. Please note: for fountains, it is normal for some splashing to occur and protecting the immediate surfaces is not the responsibility of Alpine Corporation

### • Paint & Color (Retention and/or Loss)

The use of water will cause natural erosion to the color. This area can be touched up using standard paint. The paint is designed to protect the entire finish against breakdown of color. As with any product, all finishes with time will gradually fade and discolor. The warranty will only cover against severe or complete fading within the first year from date of purchase with the above exclusion.

#### • Procedure/Service

Should a warranty/claim be needed, you should contact the retailer from whom you purchased the product. If that is not an option, you can contact Alpine Corporation at <u>www.alpine4u.com</u>. When contacting Alpine Corporation, you must be prepared to show proof of purchase, provide photographs and any other information needed to validate your claim. This may be necessary to distinguish between a partial or complete replacement of a defective product. The warranty does not cover any items with multiple parts; the warranty will ONLY cover the individual component of the unit/item that may be defective. Replacement parts can be made available to a consumer through the original selling party, or an approved parts retailer. If this is not an option, contact our customer service department. Item is covered under one year limited warranty from the date of purchase. When requesting replacement parts due to a warranty claim after 30 days of purchase, credit card information will be requested for shipping charges.

### • Not Covered Under Warranty

The limited warranty will NOT cover cases of damages due to

- 1. Damages caused in Transit
- 2. Inadequate care and/or neglect
- 3. Environmental and/or natural elements
- 4. Immersion in water, unless specified
- 5. Improper Installation/Storage and/or Maintenance

This warranty is void if the product has been damaged by accident, misuse, negligence, improper installation and/or modifications have occurred. This includes any and/or all defects arising out of freezing water damage, hard water damage, failure to keep the unit clean and free of harmful additives such as bleach, chlorine, etc.... which affects the paint and/or parts. This warranty also does not cover any additional charges or installation, removal, disposal and/or shipping costs or consequential damage associated with any warranty claim.