

Important safety instructions:

- Please read carefully all instructions before assembly.
- For your safety and ease, assembly by two or more adults is recommended.
- Keep instructions for future use.

Pre-assembly:

- Do not discard any content until assembly is complete to avoid accidentally discarding small parts or hardware.
- Take out all parts and hardware from box.

Parts List

Item	Description	QTY
P1	Front legs 	2
P2	Right Back leg 	1
P3	Left Back leg 	1
P4	Chair top 	1

Hardware List


Item	Description	QTY
H1	Bolts 5/16"x 1" 	12
H2	Lock Washers 5/16" 	12
H3	Flat Washers 5/16" 	12
H4	Allen Wrench 	1

DISCLAIMER:

WHEN PROPERLY ASSEMBLED, THIS ITEM IS SAFE FOR INTENDED USE. SELLER IS NOT LIABLE FOR ANY DAMAGES RESULTING FROM ITEM BEING IMPROPERLY ASSEMBLED AFTER PURCHASE.

Assembly Procedures:

Step 1: Assemble the chair on a flat, soft surface such as a carpet or cloth to prevent scratching the finish. To locate the hardware, please turn the chair upside down, you will find the components beneath the fabric cover that is secured by zipper underneath the seat cushion. Legs and hardware box could be located beneath the fabric cover.

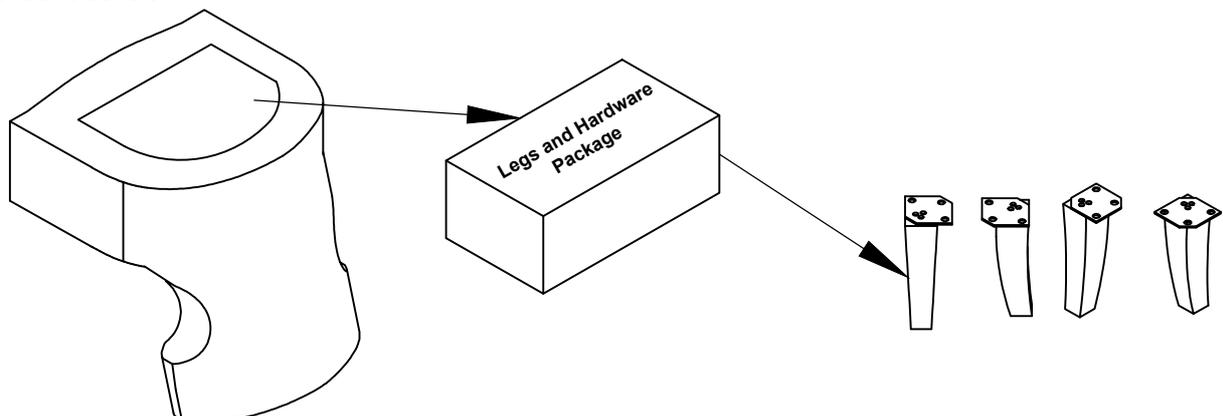


Step 2: Attach the Front Legs (P1), Right Back Leg (P2) & Left Back Leg (P3) to the Chair (P4) as shown below. Tighten all the bolts and close the black fabric.

(H1)x12 Bolts 5/16"x 1"


(H2)x12 Lock Washers 5/16"

(H3)x12 Flat Washers 5/16"

(H4)x1 Allen Wrench

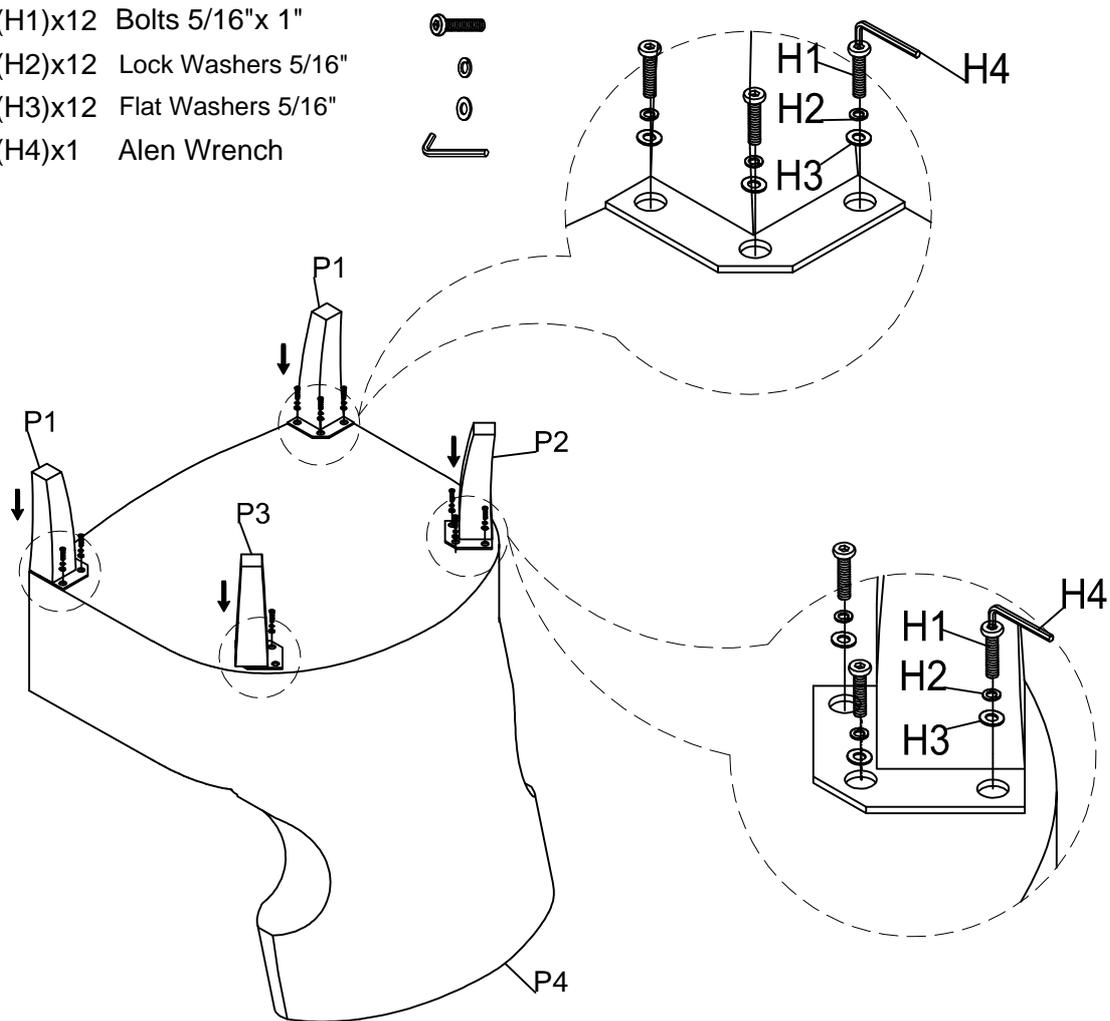

Step 3: Turn the assembled chair to an upright position. Assembly is complete.

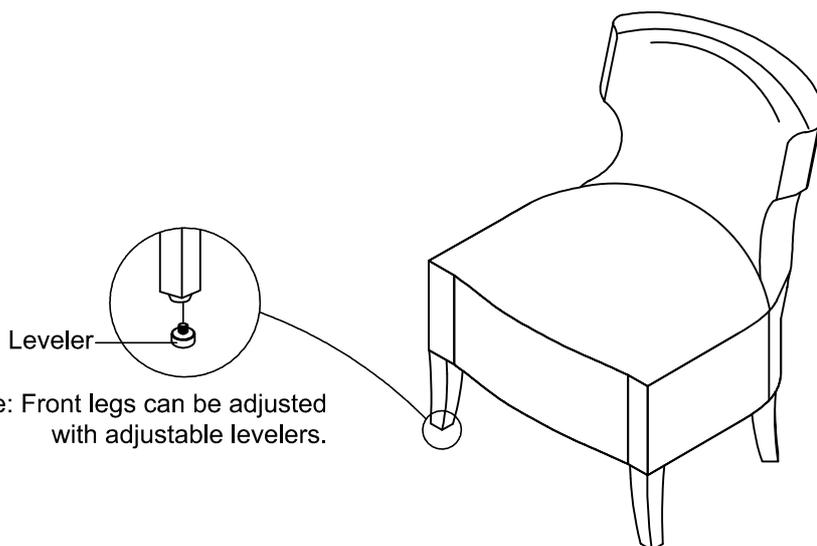

Note: Front legs can be adjusted with adjustable levelers.

ADDITIONAL NOTE ABOUT SAFETY:

BOLTS MAY LOOSEN DURING NORMAL EVERYDAY USE.

THEY SHOULD BE INSPECTED AT LEAST EVERY 3 MONTHS AND RE-TIGHTENED AS NEEDED TO PREVENT DAMAGE OR INJURY, AND ENSURE STABILITY.

Thank you for your purchase