


Sofa Assembly Instructions

Your Sofa comes packaged in one box.

DO NOT use any sharp objects to open plastic wrapped components as damage to product or components may result.

Carefully remove all of the components from the packaging and set aside for assembly. Assemble on a soft surface to prevent scratching the finish.

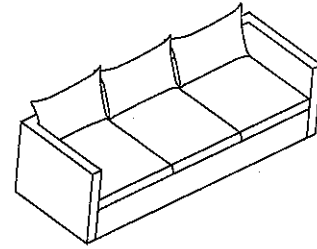

Parts List

 
① 2 x Arms




② 1 x Back



③ 1 x Seat



④ 3 x Seat Cushions

 

⑤ 3 x Back Cushions



⑥ 4 x Legs



⑦ 2 x Middle Legs



Hardware List

A 27 x Long Bolts
M6 x 30MM



B 27 x Flat Washers
M6 x $\phi 6.5$ x $\phi 12$




C 1 x Hex Key
M5 x 75mm




Assembly


Step 1

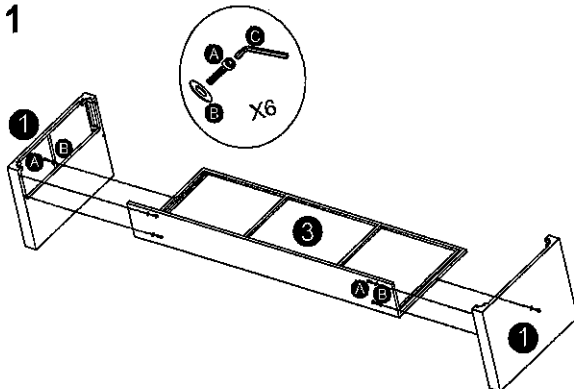


Step 2

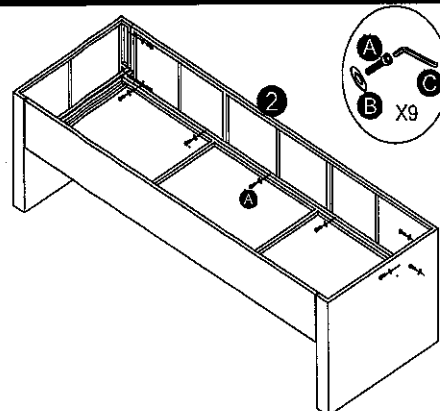

Step 3

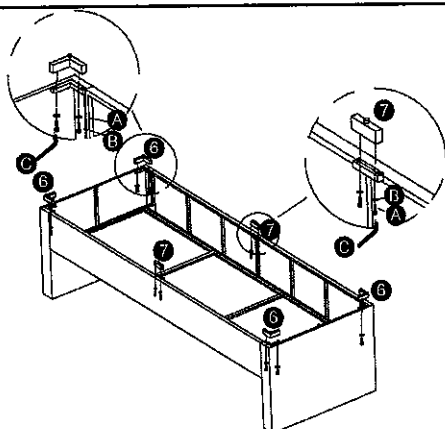

Step 4

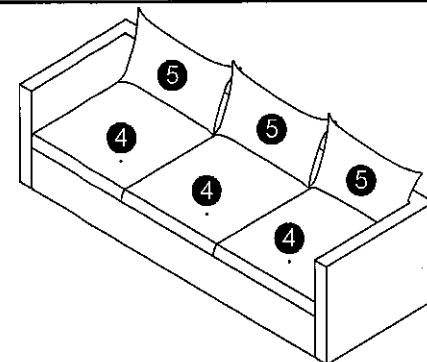

Note: It is recommended that outdoor furniture cushions and pillows be placed in a deck box or covered when not in use. This will help to minimize the fading effects of UV exposure and extend the vibrancy of your fabric.

One Year Warranty: The furniture is warranted against defects in workmanship and materials. Items covered would be seam slippage, frame structural integrity, fit and finish of parts. Items not covered would be product abused by the user, normal wear and tear, stains or discoloration due to use, damage in any transportation. Softening of foam is considered normal wear and tear and is not covered by warranty. Warranty is for PARTS ONLY and does not include transportation and labor costs associated with any warranty claim.

Your set style may differ from images. Care for your furniture by periodically tightening all bolts using the included hex key.

CAUTION: Tighten all components securely before use. Failure to do so may result in personal injury.

Customer Support: 866-238-0531
Mon-Fri 8:00am - 4:30pm CST
customerservice@furniturequestions.com



Assembly Instructions

Armless Chair

Your Armless chair comes packaged in one box. Carefully remove all of the components from the packaging and set aside for assembly. Assemble on a soft surface to prevent scratching the finish during assembly.

Package Contents



- ① 1x Armless Back ② 2x Armless Seat Panels ③ 1x Armless Seat

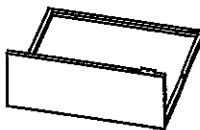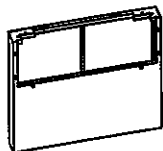

- ④ 4x Legs



 - ⑤ 1 x Seat cushion ⑥ 1 x Back cushion

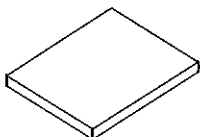

- Ⓐ 20x Bolts



M6 x 30MM

- Ⓑ 20x Flat Washers




M6 x ϕ 6.5 x ϕ 12

- Ⓒ 1 x Hex Key




M5 x 75mm


Step 1

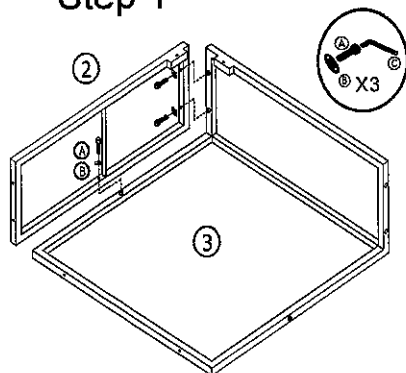


Step 2

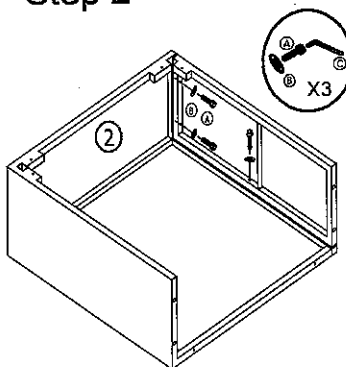


Step 3

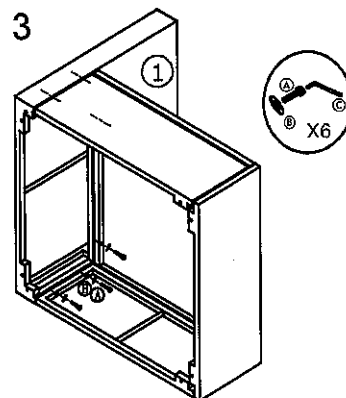

Step 4

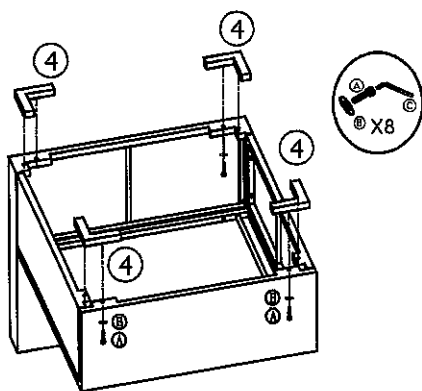

Step 5

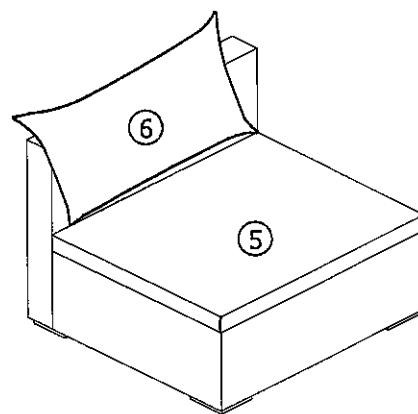

CAUTION:
Tighten all components securely before use. Failure to do so may result in personal injury.

DO NOT use any sharp objects to open plastic wrapped components as damage to product or components may result.

Note: It is recommended that outdoor furniture cushions and pillows be placed in a deck box or covered when not in use. This will help to minimize the fading effects of UV exposure and extend the vibrancy of your fabric.

Parts - 1 Year Warranty: The furniture is warranted against defects in workmanship and materials. Items covered would be seam slippage, frame structural integrity, fit and finish of parts. Items not covered would be product abused by the user, normal wear and tear, stains or discoloration due to use, damage in any transportation. Softening of foam is considered normal wear and tear and is not covered by warranty. Warranty is for PARTS ONLY and does not include transportation and labor costs associated with any warranty claim.

Care for your furniture. Periodically tighten all bolts using the included hex key.

Do not return product to retail store.

Call Customer Support: 866-238-0531

Mon-Fri 8:00am - 4:30pm CST

customerservice@furniturequestions.com

Updated :03.22.2017