

Assembly Instructions:

1. Unpack the product and take out all components.
2. Place the base on a solid flat surface.
3. Insert the HARP into the SOCKET.
4. Take out the SHADE. Put the lamp shade on the harp and tighten the shade in place with the SCREW NUT.
5. Screw a bulb onto the socket.
6. Plug the lamp power plug into the power source.
7. Turn the switch on the cord to the on position. Now the lamp is on.

Warning:


1. Use the proper bulb and the proper power supply labeled on the socket.
2. This product can only be used indoors.
3. Be careful when replacing the bulb. First turn off the power supply, then screw off the fixed nut and take off the shade. Replace the used bulb until it cools to normal temperature to avoid burns.

Safety instructions

1. Do not place near gas or electric heaters, fireplaces, candles or other similar sources of heat.
2. Do not let lamp rest on the supply cord or on any wire.
3. Close supervision is necessary when this appliance is used by, or near children or disabled persons.
4. Use this appliance only for its intended use as described in this manual.
Do not use attachments not recommended by the manufacturer.
5. Do not hang ornaments or other objects from cord, wire, or light string.
6. To disconnect, press the switch of the wire cord to the off position, then remove plug from outlet.

Use and care instructions:

1. Before using or reusing, check product carefully. Discard the product if any of the following happen: cut, damaged, or frayed wire insulation or cords, cracks in the lamp holder, loose connections, or exposed copper wire.
2. When storing product, be careful to avoid any undue strain or stress on the connections, conductors and wire cord.
3. When not in use, store in a cool, dry location protected from sunlight.

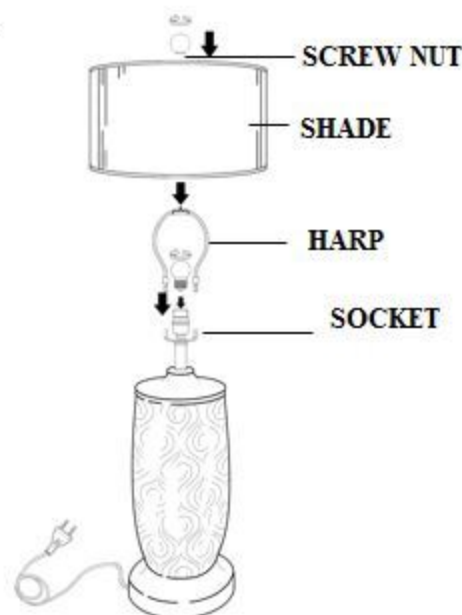

(PIC FOR REFERENCE ONLY)

(SAVE THIS INSTRUCTION)