


# ASSEMBLY INSTRUCTIONS


## DINING TABLE

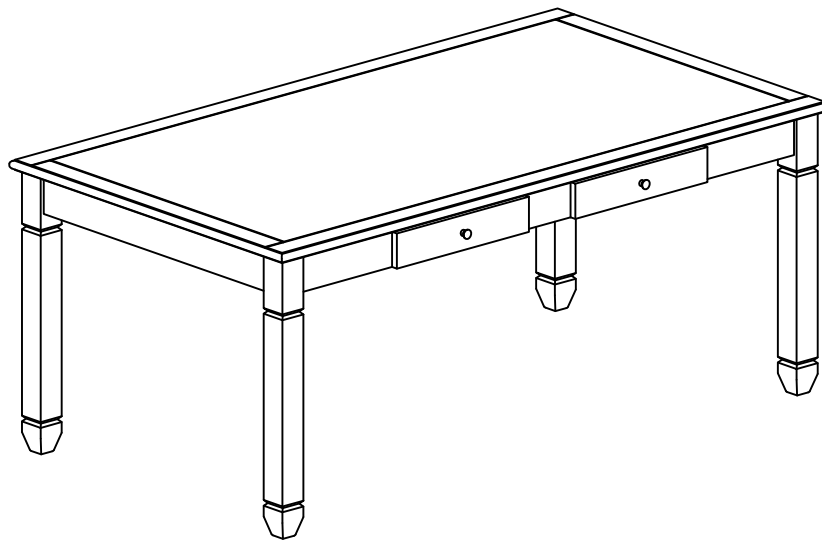

 



WF306327

**IMPORTANT NOTE:**

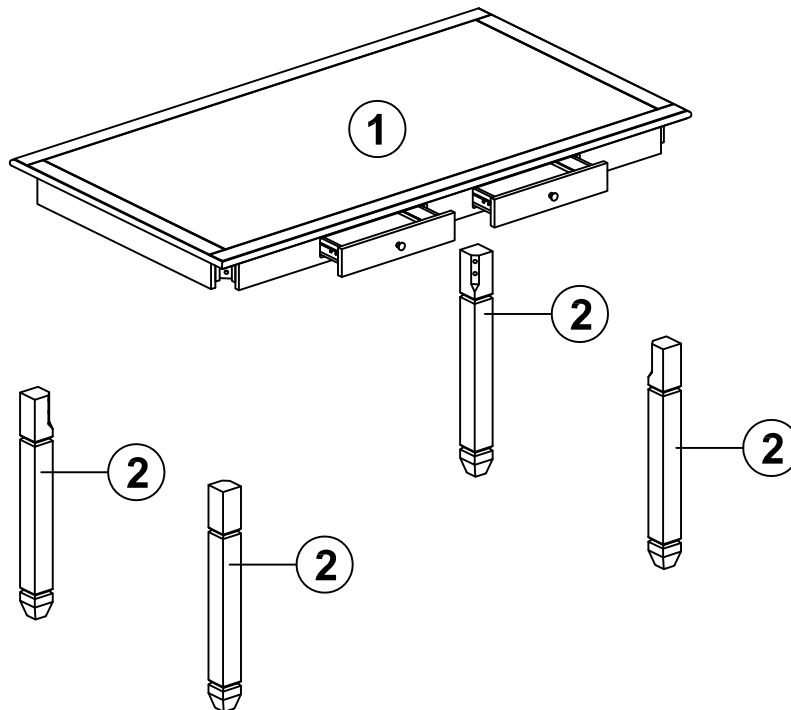- ① PLACE ALL PARTS ON A CLEAN AND SMOOTH SURFACE SUCH AS A RUG OR CARPET TO AVOID THE PARTS FROM BEING SCRATCHED.
- ② BEFORE YOU BEGIN, KINDLY FOLLOW THE ASSEMBLY INSTRUCTIONS STEP BY STEP.
- ③ DO NOT TIGHTEN ALL SCREWS AND BOLTS UNTIL THE TABLE IS FULLY SET-UP.



## Hardware List For One Table

<p><b>A</b></p>  <p>Ø5/16"x 70mm</p>	<p><b>C</b></p>  <p>Ø5/16"x 19mm</p>
<p>BOLT (8pcs)</p>	<p>FLAT WASHER (8pcs)</p>
<p><b>B</b></p>  <p>Ø5/16"x 12mm</p>	<p><b>D</b></p>  <p>4mm</p>
<p>LOCK WASHER (8pcs)</p>	<p>ALLEN KEY (1pc)</p>

# Part List For One Table

①

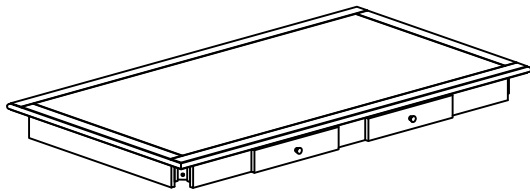


TABLE TOP (1pc)

②

 







TABLE LEG (4pcs)

## Step 1

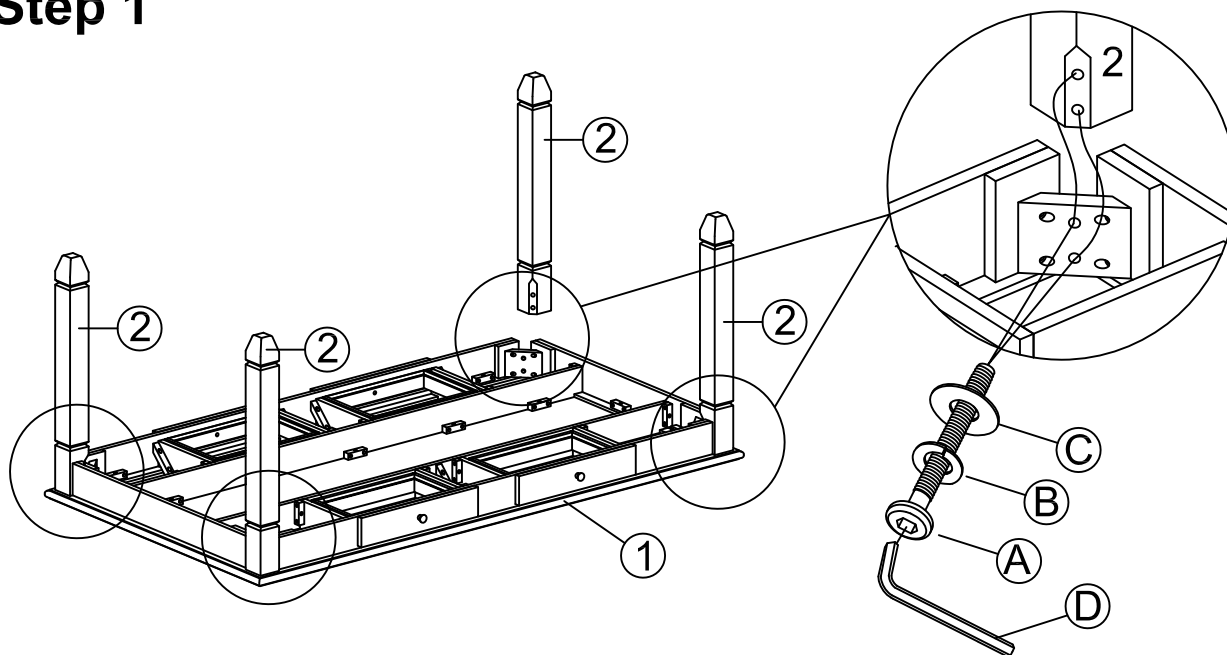

A	Ø5/16" x 70mm		8pcs	C	Ø5/16"x19mm		8pcs
B	Ø5/16"x12mm		8pcs	D	4mm		1pc

## Step 2

