

MADISONPARK.

PARKER CONSOLE

Assembly instructions:

PARTS LIST

| No. | DESCRIPTION | IMAGE | QTY |
|-----|-------------|-------|-----|
| P1 | TOP | | 1 |
| P2 | LEGS | | 2 |
| P3 | BASE | | 1 |

HARDWARE LIST

| No. | DESCRIPTION | IMAGE | QTY |
|-----|------------------------------|-------|-------------|
| H1 | BOLT (ø1/4" x 38mm) | | 8 |
| H2 | SPRING WASHER (ø1/4" x 11mm) | | 8 |
| H3 | FLAT WASHER (ø1/4" x 16mm) | | 8 |
| H4 | ALLEN KEY (M4 x 60mm) | | 1 |
| H5 | ANTI TIP KIT | | 1 SET |
| H6 | SCREW DRIVER | | NOT PROVIDE |


NOTE: PO # is located underneath/ at the back side of each item. Please be prepared to provide this # should any claim be necessary.

CAUTION: Item is heavy. Assembly should be performed by two people.

DISCLAIMER:


When properly assembled, this item is safe for intended use. Seller is not liable for any damages resulting from item being improperly assembled after purchase.

1

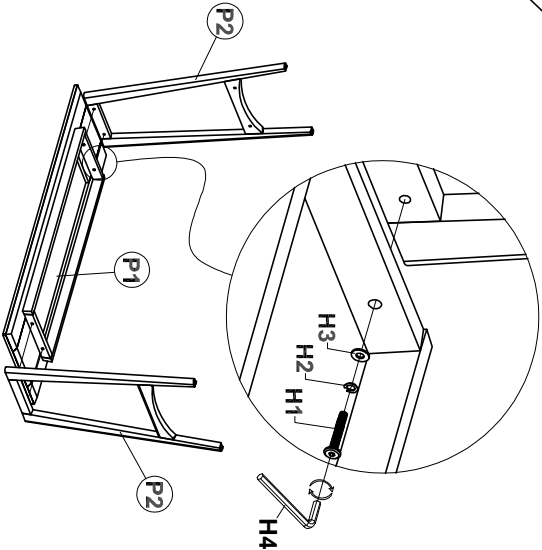


PLS, DON'T TIGHTEN BOLTS UNTIL LAST STEP.

2

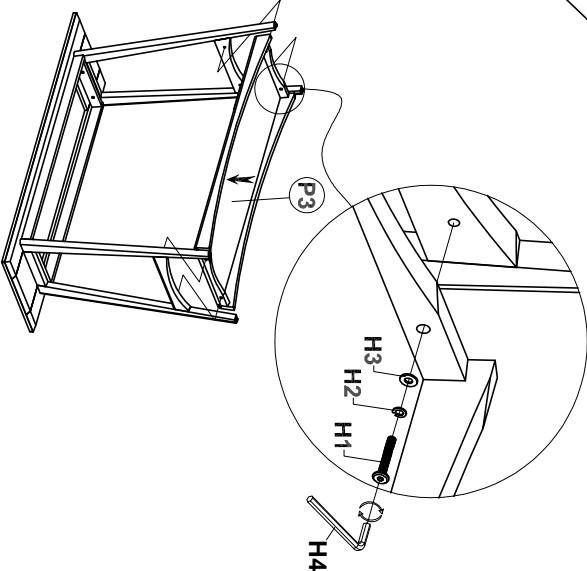

ASSEMBLY COMPLETED

3

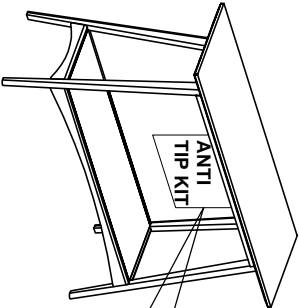

Anti Tip Kit hardware has been attached to the product. Pls install to the wall to prevent product from tipping

ADDITIONAL NOTE ABOUT SAFETY:
BOLTS MAY LOOSEN DURING NORMAL EVERYDAY USE.
THEY SHOULD BE INSPECTED AT LEAST EVERY 3 MONTHS AND RE-TIGHTENED AS NEEDED TO PREVENT DAMAGE OR INJURY, AND ENSURE STABILITY.
Thank you for your purchase

Warning: Serious or fatal injuries can occur from furniture tip-over. To help prevent furniture tip-over: Use provided mounting hardware to secure furniture to the wall. This may reduce but not eliminate the risk of furniture tip-over. Do not allow children to climb on furniture. Keep remote controls, toys, and other items that might attract children off of this product. Unless specifically designed to accommodate, do not set televisions or other heavy objects on top of this product.