



20 : 00

estimated  
assembly time



2 or more

people required

Ok, let's  
get started!



- Put on mood music!
- To prevent damage to product, use the clean side of package carton or rug as working surface.
- In the event of missing or damaged parts, delivery problems etc., please reach out to our team.  
We will be happy to fix the problem!

# care guide

- Clean regularly with a soft and dry cloth.
- To protect finish, avoid use of abrasive cleaners.
- Wipe up spills immediately. Please!

---

ⓘ While assembling the product, tighten the bolts up to 50%. Once all parts are in place, only then fully tighten the bolts.



 
product  
parts



A  
Cabinet Case  
x1



B  
Left Metal Leg  
x1

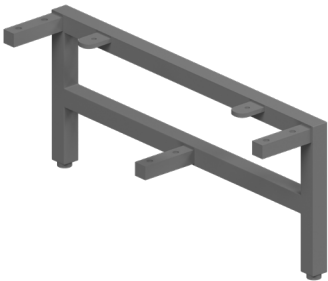

B  
Right Metal Leg  
x1




C  
Center Metal Leg  
x1

# what's included



 (D) - Flat Washer  
(Ø20mm x Ø8mm)  
x4



(H) - Allen Key  
(Ø4mm x Ø110mm)  
x1



(E) - Lock Washer  
(Ø15mm x Ø8mm)  
x4



(I) - Allen Key  
(Ø5mm x Ø100mm)  
x1



(F) - Bolts  
(M8 x 25mm)  
x4



(J) - Handle  
x2



(G) - Bolts  
(M6 x 10mm)  
x12



(K) - Bolts  
(M6 x 25mm)  
x4

## assembly instructions


Friendly Tip: Take a deep breath going in. This may be a tricky part, but nothing too overwhelming. Just follow these steps to the T and the outcome will be worth it!



- ⓘ While assembling the product, tighten the bolts up to 50%. Once all parts are in place, only then fully tighten the bolts.


step 1:

Start by turning the cabinet case (A) upside-down. Unscrew the preinstalled metal rods (using Allen Key (H)) on the cabinet case by 50%. See the highlighted areas below for point reference.

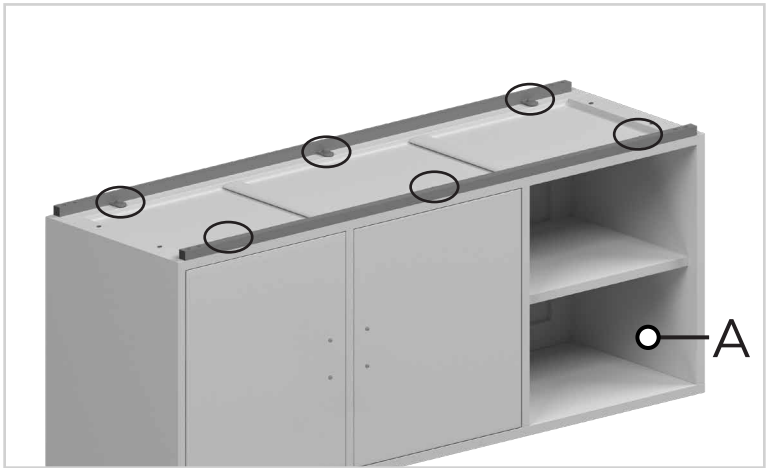


step 2:

Now, insert the left metal leg (B left) into the metal rods on the cabinet case. See this image for reference.

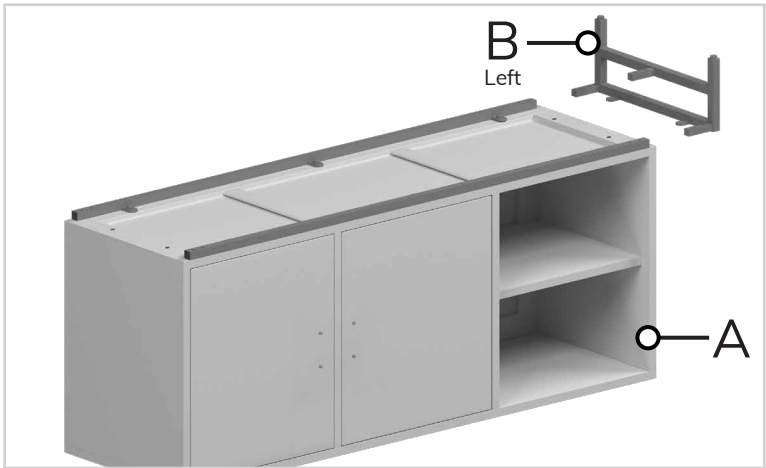


step 3:

Next, insert the central metal leg (C) into the middle slot on the left metal leg (B left).

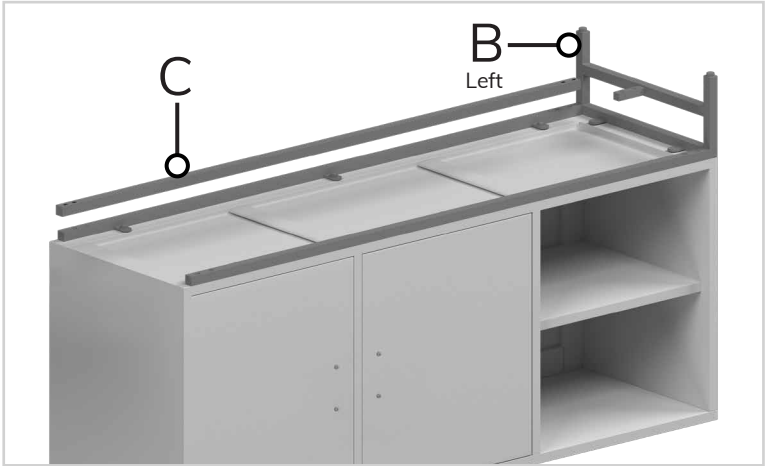

step 4:

Now, take the right metal leg (B right) and insert it into the central metal leg (C) and the metal rods on the cabinet case.

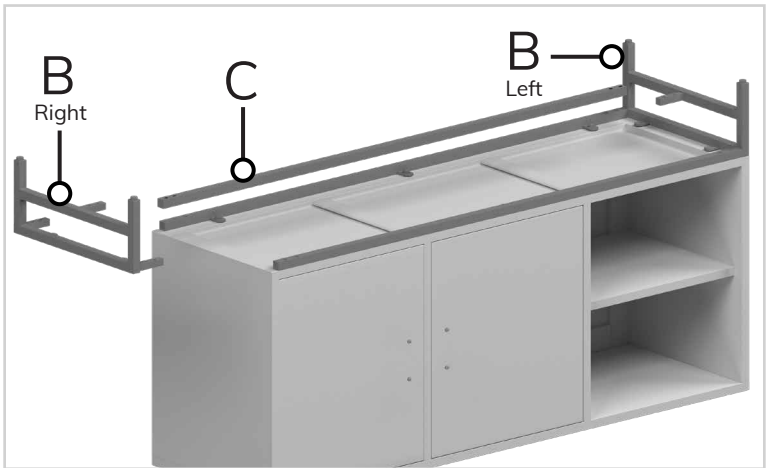




## step 5:

Once the metal base is complete, it's time to secure it in place. See the highlighted areas to know where to tighten the bolts (F).




## step 6:

To fix the cabinet case (A) to metal legs (B left and right) use bolts (F), lock washer (E), and flat washer (D) (in the order D, E, F from bottom to top) and insert them into the pre-drilled holes. Tighten all points using the allen-key (I).

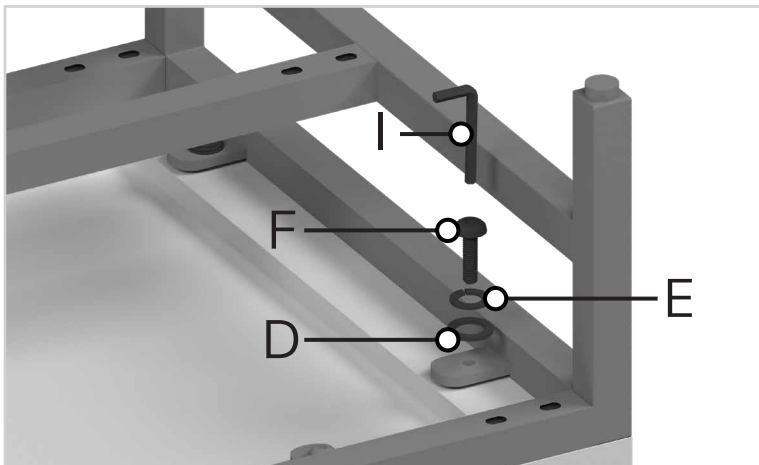


step 7:

Next, to secure the entire metal base together, see the highlighted areas below to know where to tighten the bolts (G).

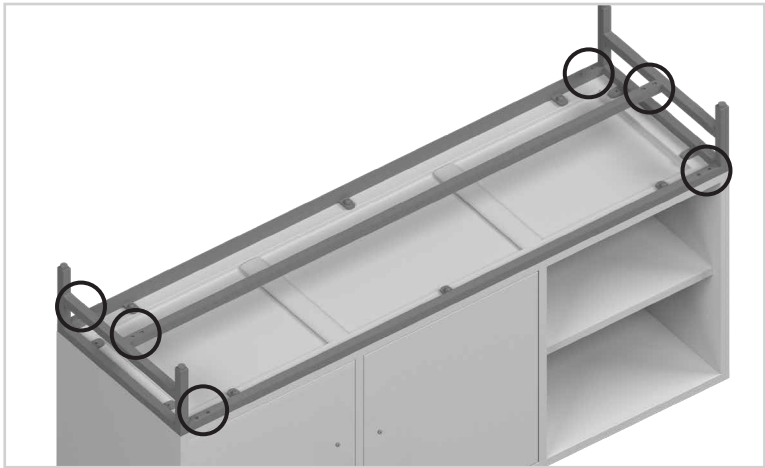

step 8:

Insert bolts (G) on all points and tighten them using the allen-key (H). Make sure all the bolts are 100% tighten.

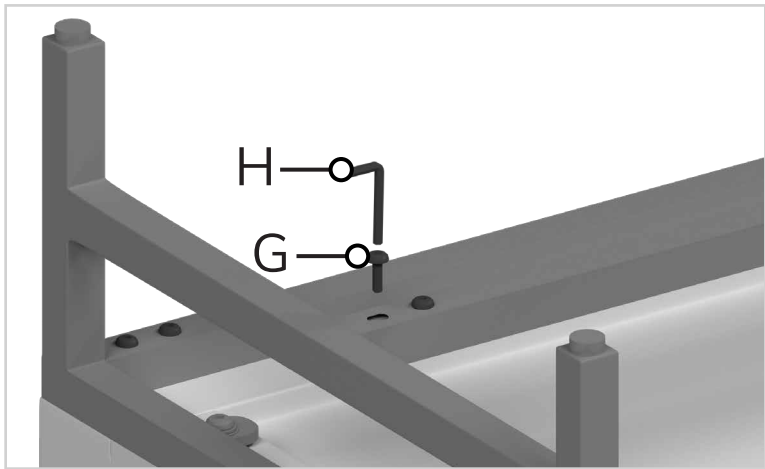

### step 9:

Now turn the cabinet upside-down and pull on the ribbons to open the doors.






### step 10:

Then, place both the handle (J) on the slots outside the doors and attach it using the bolts (K). Tighten it in place using allen key (H).



If the door does not appear square or aligned, loosen or tighten the appropriate screws on each case hinge as shown in images.

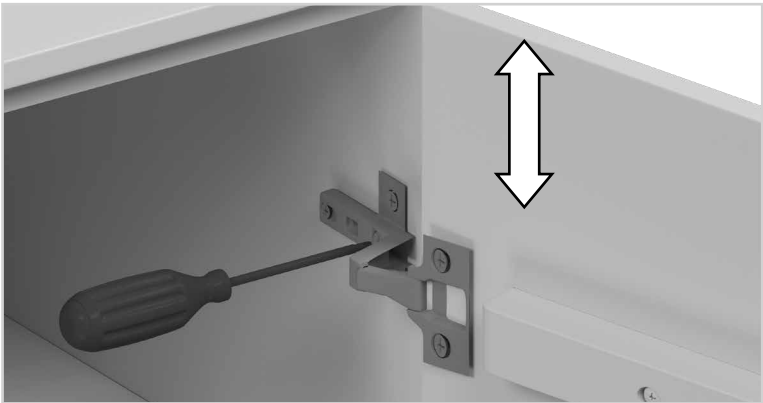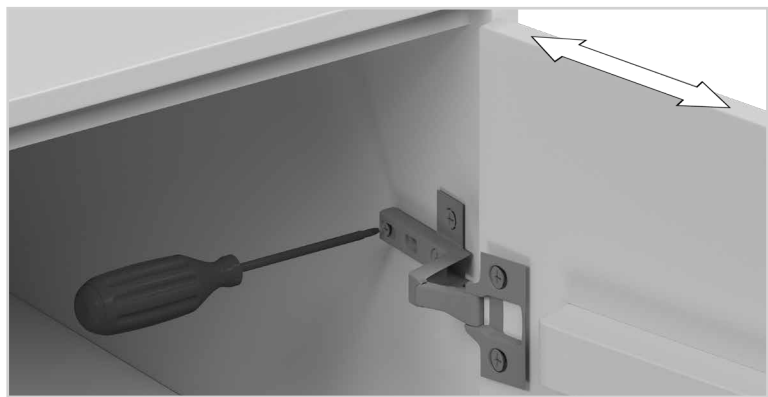

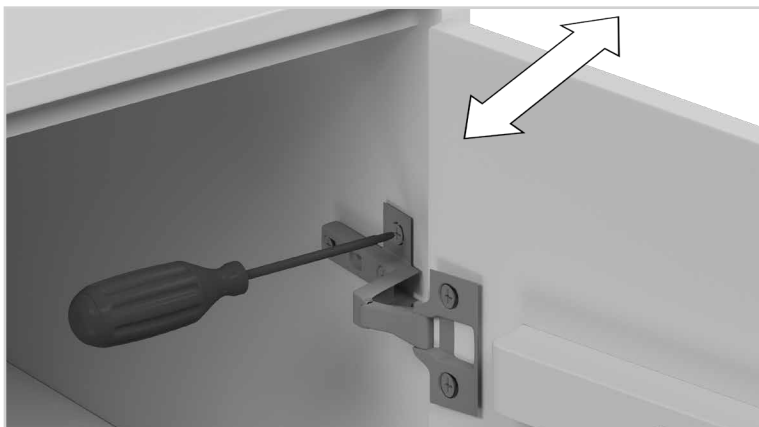

---

**Voila! Your media unit is now assembled and secure!**

you've  
got  
a home  
with us

