

## OKER® ASSEMBLY INSTRUCTION

ITEM: 628-55034-98 Nolita Four Door Entertainment Console


Thank you for purchasing this quality product. Be sure to unpack carefully looking for small parts which may have come loose during shipment.

Read all instruction and study the drawing carefully before starting the assembly process.

## HARDWARE PACK

NO.	DRAWING	DESCRIPTION	SIZE	Q'TY
А	<b>©</b>	Anti - Tip Kit		1 PC



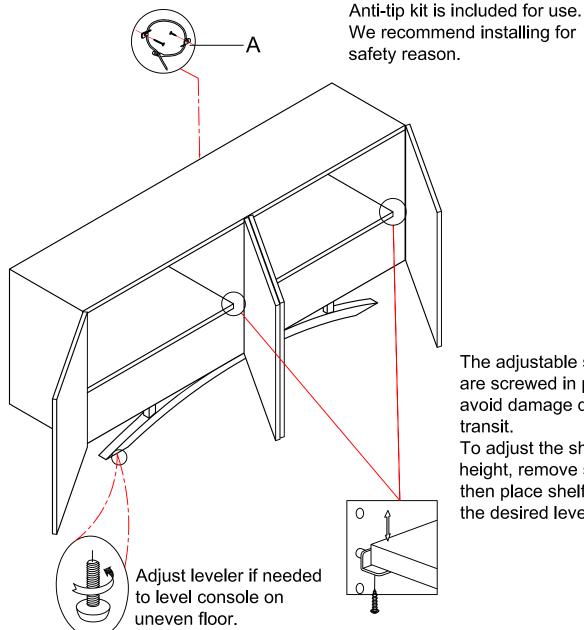

The adjustable shelves are screwed in place to avoid damage during transit

To adjust the shelf height, remove screws then place shelf pins in the desired level.

Note: Anti-tip kit restraint is provided. Please follow the instructions enclosed with the pack.