
### INSTRUCTIONS FOR MODELS

# VS-118

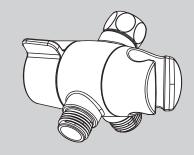

**NOTE:** VS-118 is designed to work with Speakman shower heads. It may or may not work with competitor shower heads.

#### NEED HELP?

For additional assistance or service please contact:


**SPEAKMAN®** 

ල<sup>;;;;]</sup> 800-537-2107


customerservice@speakman.com

www.speakman.com


92-VS-118-02

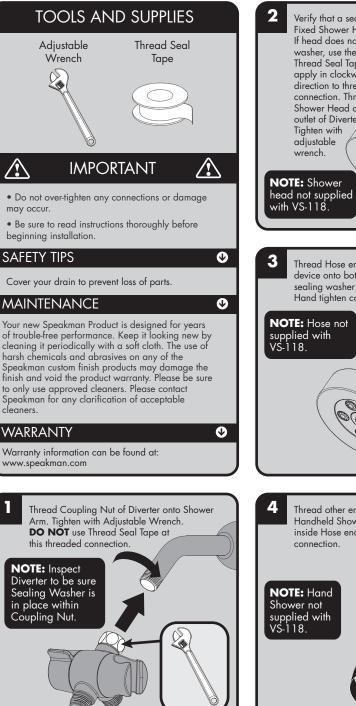

Verify that a sealing washer is present within the Fixed Shower Head to avoid leaks. If head does not have washer, use the included Thread Seal Tape and apply in clockwise direction to threaded connection. Thread Fixed Shower Head onto front outlet of Diverter Thread Hose end with back flow protection device onto bottom outlet of Diverter. Ensure sealing washer is inside hose end to avoid leaks. Hand tighten connection. Thread other end of Hose onto base of Handheld Shower. Ensure sealing washer is inside Hose end to avoid leaks. Hand Tighten

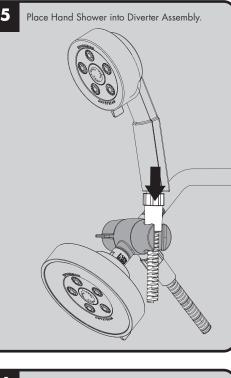

**6** Turn on water supply and check all threaded connections for leaks. If leaks occur, tighten connection with an Adjustable Wrench or by hand. Check Diverter for proper operation by turning the side handle backward and forward to activate the Fixed or Hand Showers.

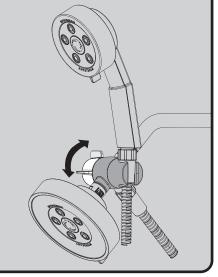

### VS-118 ROUGH-IN DIAGRAM

## **SPEAKMAN**<sup>®</sup>

