## ASSEMBLY INSTRUCTIONS

Style # C1158-BL&C1158-WH Hutch



## NOTE TO CUSTOMERS:

- For ease and speed of assembly we recommend that before you commence each step of the assembly that you identify all the parts required to complete that step.
- We recommend that where possible you allow sufficient space to assemble the item as close as possible to the place where it will be once assembled.
- For the protection of your furniture we recommend that the product is placed on protected surfaces during assembly to prevent any damage.
- During assembly do not over tighten, as this may damage the product.
- Please ensure you retain all the product packaging until the item completely assembled.
- Please periodically check all fittings and re-tighten as necessary.
- It is recommended that this item should be assembled by two adults.



## Note:

- Read these instructions carefully before assembling.
- Tools required : Phillips screwdriver, flat screwdriver.
- Find a clean, smooth area on which to work, such as a carpet, in order to avoid scratching the wood surfaces.
- Wait to dispose of the packing material until assembly is complete and all parts and hardware are accounted for.
- Two or more people might be required for assembly.





Ha	ardware List	
A Quantity of 40	B Quant of 46	ity C Quantity of 28
Camlock	Wood Dowel	Screw
D Quantity of 12	E Quanti of 2	ity F Quantity of 4
		annnnnn - O
Shelf Supporter	Magnet with Screw	Bolt
G Quantity of 5	H Quantit of 9	ty I Quantity of 8
Handle with Bolt	Screw	Door Pin
J Quantity of 1	K Quantit of 1	y L Quantity of 5
O Analysis Same	Damana O	
Anchor with Screw	Anti-tip kit	Camlock
	Page 5 of 13	



Page 6 of 13



Assemble Lower Legs (3 & 4) to Lower Side Panel (28) using Cam-Locks (A) and Wood Dowels (B) as shown above.



Attach Magnet (E) to Front Connect Bars (30) using included Screws, holes are pre-drilled. Then attach Lower Legs (1 & 2 & 3 & 4) and Lower Side Panels (27 & 28) to Connect Bars (7 & 30) And Lower Bottom Panel (5) using Cam-Locks (A) and Wood Dowels (B) as shown above.





Then attach Top Panel (13) and Upper Bottom Panel (6) to Upper Legs (9 & 10 & 11 & 12) and Upper Side Panels (29) using Bolts (F), Cam-Locks (A) and Wood Dowels (B) as shown above.



Attach Upper Bottom Panel (6) to Lower Legs (1 & 2 & 3 & 4) and Lower Side Panels (27 & 28) using Cam-Locks (A) and Wood Dowels (B) as shown above.



Page 11 of 13





Attach Anti-tip Kit (K) nylon strap to the Upper Back Panel (8), then attach the other end of the nylon strap to the wall using Anchor and Screw (J) as shown above.