



MODEL: 66349ORB
PACKING DIAGRAM

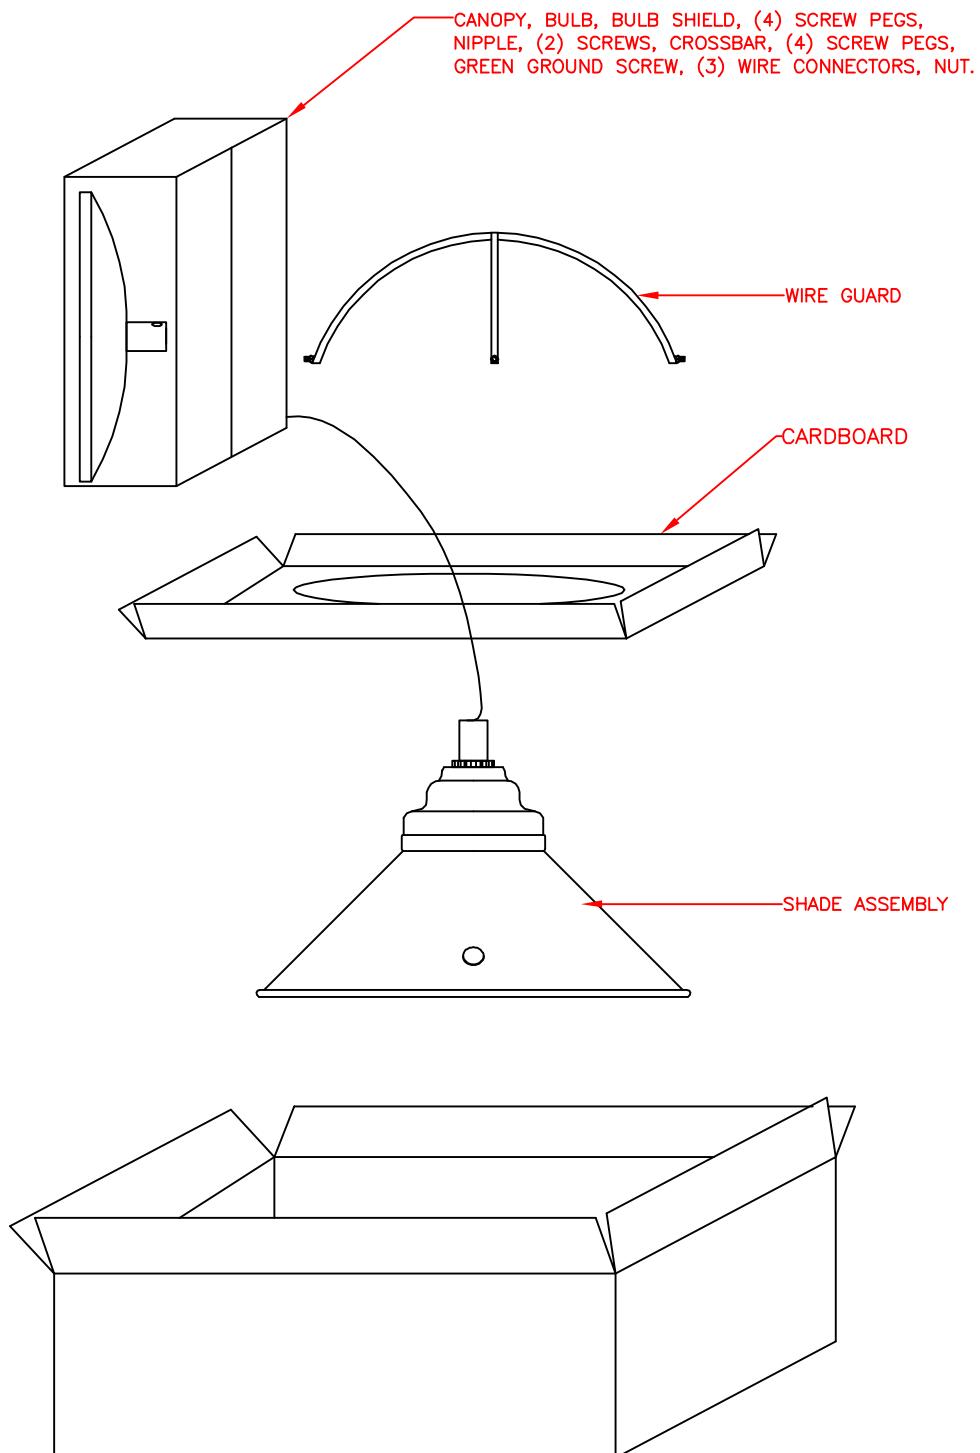

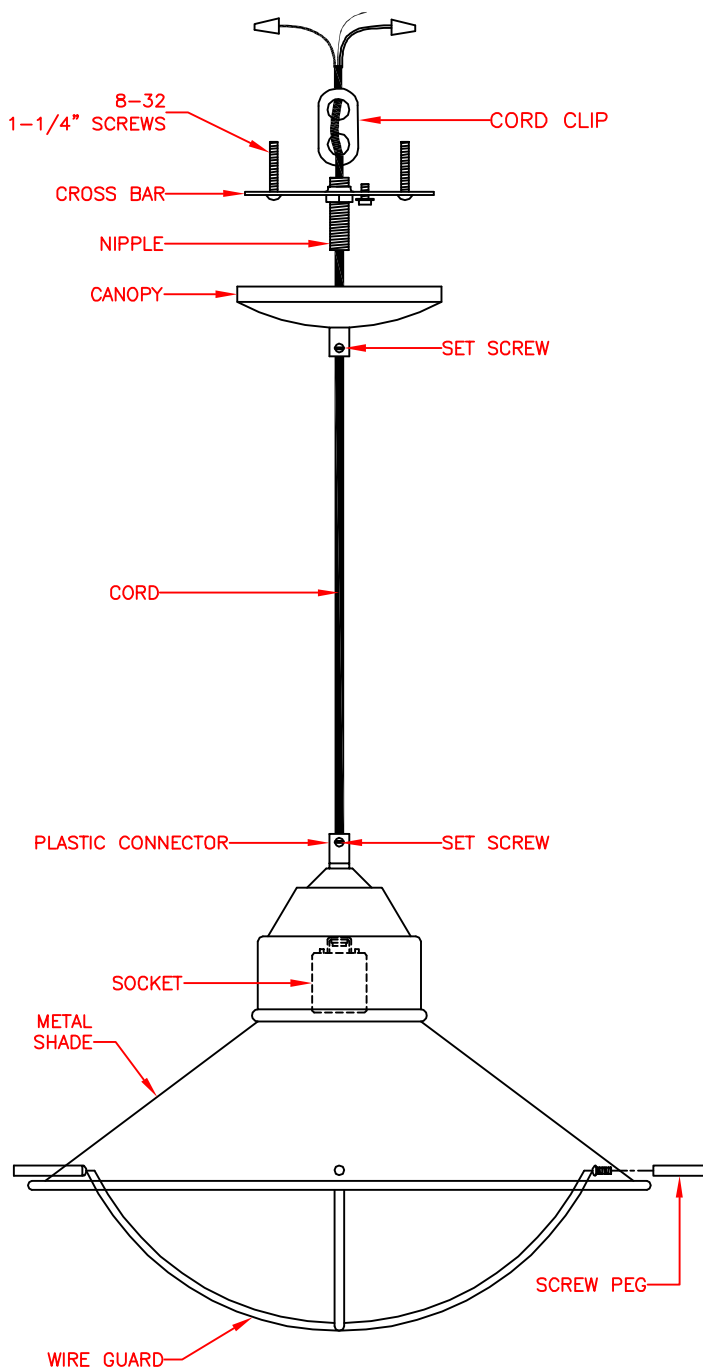

ASSEMBLY INSTRUCTIONS

READ AND SAVE THESE INSTRUCTIONS

READ INSTRUCTIONS ALL THE WAY THROUGH PRIOR TO ASSEMBLY.

THIS FIXTURE SHOULD TAKE APPROXIMATELY 5 MINUTES TO ASSEMBLE.

MAKE SURE ALL PARTS ARE FIRMLY TIGHTENED.

TOOLS

YOU WILL NEED THE FOLLOWING TOOLS OR EQUIPMENT: LADDER, SCREWDRIVER, ADJUSTABLE WRENCH, WIRE CUTTERS, PLIERS

UNPACK THE FIXTURE

TO PROTECT THE FINISH, PLACE ALL PARTS ON A SOFT SURFACE. YOU SHOULD HAVE RECEIVED THE FOLLOWING:

LAMP SHADE ASSEMBLY, CANOPY, (2) CONNECTORS WITH SET SCREWS, WIRE GUARD AND (4) SCREW PEGS.

MOUNTING HARDWARE PACKAGE:

NIPPLE, (2) 8-32 x 1 1/4" SCREWS, CROSS BAR, GREEN GROUND SCREW, (2) WIRE CONNECTORS, NUT.

ASSEMBLE THE FIXTURE

1. ADJUST THE HEIGHT OF THE FIXTURE AS DESIRED BY LOOSENING THE SET SCREW, SLIDE THE CORD CLIP INTO THE CANOPY TO SECURE THE CORD, ONCE THE DESIRED HEIGHT IS ACHIEVED, TIGHTEN THE SET SCREW.


2. SLIDE THE CONNECTOR THEN CANOPY DOWN THE FREE END OF THE CORD SO THAT THEY BOTH LINEUP AS SHOWN IN THE DIAGRAM.

3. CUT THE CORD TO DESIRED LENGTH, MAKING SURE TO LEAVE 6" EXTRA FOR WIRING.

4. SCREW NIPPLE INTO CROSS BAR AND SECURE WITH NUT. TIE SAFETY KNOT IN CORD ABOVE NIPPLE.

5. SEE NEXT PAGE FOR INSTALLATION INSTRUCTIONS



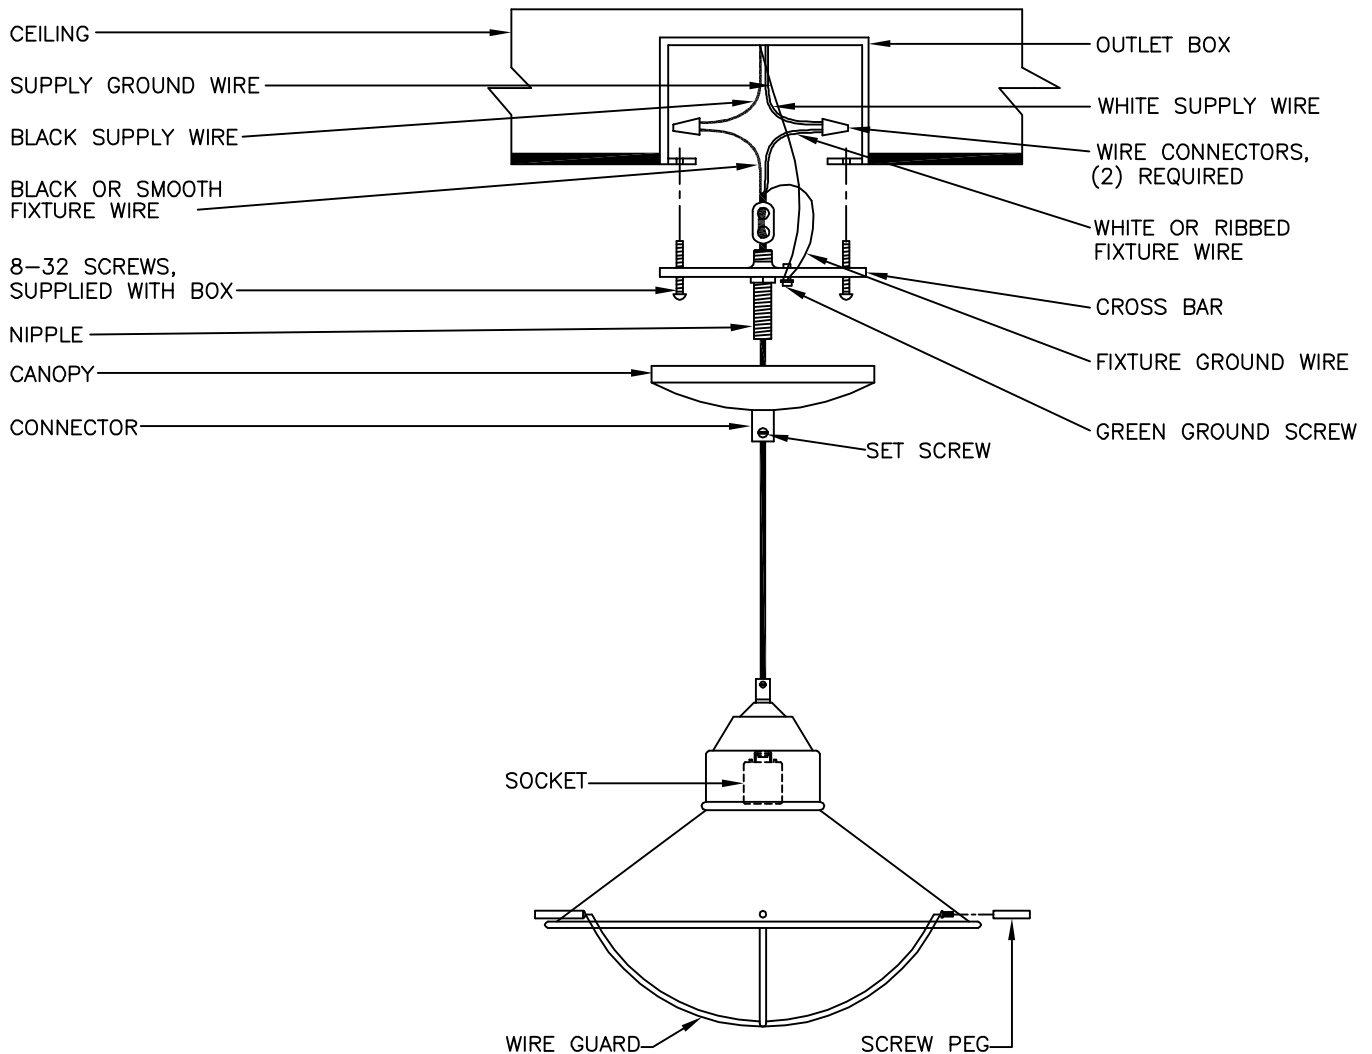

INSTALLATION INSTRUCTIONS

READ AND SAVE THESE INSTRUCTIONS

CAUTION

TO AVOID POSSIBLE ELECTRIC SHOCK, MAKE SURE THE ELECTRICITY IS SHUT OFF AT THE MAIN PANEL. IF YOU ARE REPLACING AN EXISTING FIXTURE, FIRST TURN THE FIXTURE OFF. NEXT, TURN THE WALL SWITCH OFF. FINALLY, GO TO THE MAIN FUSE OR BREAKER BOX IN YOUR HOME. TURN THE FUSE OR BREAKER TO THE OFF POSITION. SOME TYPES OF FUSES MUST BE UNSCREWED TO SHUT OFF THE POWER.

* ALL WIRING MUST BE DONE IN ACCORDANCE WITH NATIONAL AND LOCAL ELECTRIC CODES. IF YOU ARE NOT FAMILIAR WITH WIRING, YOU SHOULD USE A QUALIFIED ELECTRICIAN.

** THIS FIXTURE IS INTENDED TO BE MOUNTED TO A UL LISTED OUTLET BOX CAPABLE OF SUPPORTING THE FIXTURE.

1. ATTACH THE CROSS BAR TO THE CEILING OUTLET BOX USING THE TWO SCREWS PROVIDED WITH THE OUTLET BOX. (NOTE: IF THE SCREWS WITH THE OUTLET BOX ARE TOO SHORT, USE THE (2) 8-32 x 1 1/4" SCREWS PROVIDED IN THE MOUNTING HARDWARE PACKAGE). SCREW THE NIPPLE INTO THE CROSS BAR.

2. INSERT THE FIXTURE WIRE AND THE GROUND WIRE UP THROUGH THE NIPPLE. TIE A SAFETY KNOT IN THE CORD JUST ABOVE THE CROSS BAR AS SHOWN ABOVE. CONNECT THE WHITE FIXTURE WIRE TO THE WHITE SUPPLY WIRE IN THE OUTLET BOX USING THE TWIST-ON WIRE CONNECTOR PROVIDED. CONNECT THE BLACK FIXTURE WIRE TO THE BLACK SUPPLY WIRE IN THE SAME MANNER. ATTACH THE FIXTURE AND SUPPLY GROUND WIRES ONTO THE CROSS BAR USING THE GREEN GROUND SCREW.

3. TUCK THE WIRES CAREFULLY INSIDE THE OUTLET BOX. NEXT RAISE THE CANOPY TO THE CEILING AND SECURE IN PLACE BY SCREWING THE CONNECTOR ONTO THE NIPPLE AND TIGHTENING SET SCREW.

4. PRIOR TO INSTALLING THE BULB, PLEASE INSPECT SOCKET FOR SILICA PACKET. IF PACKET IS PRESENT, REMOVE AND THROW AWAY. DO NOT EXPOSE TO CHILDREN AND PETS.

5. INSTALL A 150 WATT BULB (NOT INCLUDED) INTO THE SOCKET.

6. RAISE THE WIRE GUARD AND SECURE WITH (4) SCREW PEGS AS SHOWN.

7. RESTORE POWER. YOUR NEW FIXTURE IS NOW READY TO USE.

