

 



ASSEMBLY INSTRUCTION

Item#:3002-10458 WRITING DESK 60 INCH DUNE/BEACH

** Please make sure you have all parts indicated below prior to assembly.

NO.	HARDWARE LIST		Q'TY
A		FLAT WASHER	8
B		LOCK WASHER	8
C		BOLT	8
D		ALLEN WRENCH	1

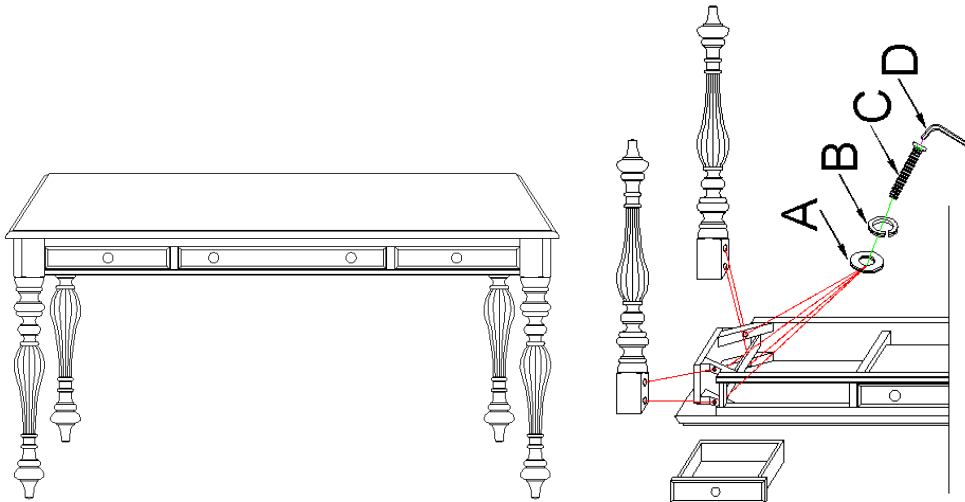


Diagram 1

Assembly Steps:

1. Remove two side drawers, place table top upside down on a soft surface to prevent from scratching top.
2. Attach leg to table top using 2 bolts(C), 2 lock washers (B), 2 flat washers (A), by turning with allen wrench (D) in a clockwise direction. (see diagram 1).
3. Attach other three legs to top by the same steps as above.
4. Turn writing desk upright and put two drawers back.

Caution: Do not over tighten.

Cleaning Instruction: Clean finished parts with a damp cloth using a mild dishwashing liquid and water solution. Polish the finish with soft cloth and an industry recognized furniture polish.