



Thank you for choosing Made4home!

Our goal is to provide high quality products
with outstanding customer service-all at an affordable price.

Please let us know how we are doing!

Happy?

Please leave us a review!
You can make others happy too!



CARE INSTRUCTIONS

**PRODUCT IS INTENDED FOR INDOOR & OUTDOOR USE. THIS PRODUCT IS
CONSISTENT WITH SAFETY REQUIREMENTS**

- ☒ When in use, do not exceed the maximum load of:
 - Coffee table: est 170lbs (glass table top: est 150lbs)
 - Side table: est 60lbs
 - Chairs: est 260lbs

MAINTENANCE AND STORAGE:

- ☒ Eucalyptus/Acacia wood is a hard and fibrous wood.
- ☒ Outdoor wooden furniture is subject to a natural aging process. External use can lead to surface impurities come. These can be treated with water, a brush and neutral soap.
- ☒ Unvarnished wooden furniture should be cleaned once a year with a Maintenance oil (e.g. Mellerud maintenance oil. 0.5 l, item no.: 3217445)

- ☑ The occurrence of fine hairline cracks is a natural winding process that does not affect the stability and lifetime of this furniture. Under the influence of moisture, these cracks often diminish.
- ☑ It is necessary to store the product in a dry place during the winter to protect it from severe weather (heavy snowfall /rain, strong wind). It is recommended to cover the product with a water-proof cover when you are not using it.
- ☑ Never use abrasive materials for cleaning. Preferably use a soft clean cloth.
- ☑ To spot clean an area in rope applies a mist of mild soapy water and work in the solution with a soft cloth by blotting or using light pressure. Then rinse off the solution thoroughly and allow it to air dry. Do not use abrasive materials, excessive scrubbing or a high-pressure hose.
- ☑ If it is cracking and chipping occur, recommend we proceed as follows:
 - Abrade the affected areas / areas in a controlled manner.
 - Paint the sanded areas with a for the paint suitable for outdoor use.
- ☑ In the case of colored lacquered furniture, the original wood becomes completely covered. This furniture is not suitable for Overwinter outdoors, because of frost and high temperatures fluctuations cracks and flaking may occur.

DIRECTIONS FOR USE:

- ☑ Install on an even floor. Do not stand on the product. Do not use sharp units or pressure washer on product's surface
- ☑ Always keep the product away from heat source such as outdoor grill, flame, cigarette,...
- ☑ Active use may loosen bolts and screws to become loose. Perform a hardware check every few months or so
- ☑ Please never store wooden furniture in warm, dry rooms such as B. Boiler rooms. This can cause hairline cracks to form favor. Please store your wooden furniture in winter as follows:
- ☑ If possible, please store your furniture in the garage, basement or covered one.

Please cover the garden furniture with a suitable one cover off.