Smart Toielt Instructions



Side Button Instructions



Drying

Press this button to start drying while there is people sitting on and you can cut the running by Stop button



sitting on the seat cover bowl. The drying will finish in 3 minutes. It also can be stopped by Stop button.

The rear flushing function will be run by press this button while people sitting on the seat cover bowl. And press this button again can root the moving mode. You can cut the running by **Stop** button. And the washing will also stop itself after people leaving the seat.

Stop

Rear

The product will stop working by pressing this button while it is in use. And it will also stop itself after people leaving the seat.

The rear flushing function will be run by press this button (بير) while people sitting on the seat cover bowl. And press this button again can root the moving mode. You can cut the running by **Stop** button. And the washing will also stop itself after people leaving the seat.

The product will stop working by pressing this button while it is in use. And it will also stop itself after people leaving the seat.

Bidet

The lady's flushing function will be run by press this button while people sitting on the seat cover bowl. And press this button again can root the moving mode. You can cut the running by "Stop" button. And the washing will also stop itself after people leaving the seat.

Flush

Flushing once.

The lady's flushing function will be run by press this button while people sitting on the seat cover bowl. And press this button again can root the moving mode. You can cut the running by **Stop** button. And the washing will also stop itself after people leaving the seat.



Smart Toielt Instructions

Remote Control Instructions

Note: Please pair the code following the way below if the controller is not working at the first time in use.

- Press on side button both Stop and Bidet for 3-5 seconds. Press any button on controller when you hear a beep sounds. • Press any button on controller when you hear a beep sounds.
- The code will be paired when hear a beep sounds again.



Water Temp Dry le cleaning Seat Temp auto R

Toilet Lid Seat Light/Help

PREVENT GET HURT IN BURNS

• Please do remember to shut down seat temp. and drying temp. so as to prevent get hurt in burns in the situation as below: ▲ The people who can not adjust the temperature as like as children, elder, etc... ▲ The patients, disabled people or impaired physical mobility. ▲ People who took the sleeping pills or over drinking or weary or drowsiness.

Rear

Child mode

low strength grade.

The nozzle will start rear washing by press this button while people sitting on the seat cover bowl. The washing will finish in 2 minutes. It also can be stopped by STOP button While the rear washing is running, press this button can root the moving mode During the washing, you can adjust the strength of spray. The washing will stop itself after people leaving the seat.

(The actual product shall prevail)

Stop/Flush The product will stop working by pressing this button while it is in use. The product will stop itself and auto flush once after people leaving the seat The auto flush will be rooted by pressing this button while no people sitting on the seat.

Drying

Press this button to start drying while there is people sitting on the seat cover bowl. The drying will finish in 4 minutes. It also can be stopped by Stop button. The drying temperature can be adjusted in 4 grades by temperature adjusting button The drying will stop itself after leaving the seat.

..... Bidet

Lighting & Defecation assist Auto one key spa Press this button to root auto function while there is people sitting on The nozzle will start bidet washing by press this button while Press this button to root defecation assist while there the seat cover bowl. is people sitting on the seat cover bowl. there is people sitting on the seat cover bowl Includes 30s rear washing, 30s moving mode and 2mins drying. The water pressure is on high grade. The washing will finish in 2 minutes. It also can be stopped by The working will stop itself or be ended by Stop button. The working can be ended by STOP button. STOP button This function is convenient to elders and children. Turn on the night light by pressing this button while While the bidet washing is running, press this button can root there is no people sitting on the seat cover bowl. Press this button after pressing Bidet button, the auto bidet washing the moving mode. During the washing, you can adjust the strength will be rooted. ofspray The auto function will be off working while people left. The washing will stop itself after people leaving the seat.

■ Water strength ADJ Press this button to root auto washing for child. Press this button to adjust the strength of spray in 4 grades. Includes 15s rear washing, 15s moving mode and 1mins drying in One light means low grade, and more lights means higher strength. The working can be ended by Stop button.

operation

other operation.

Drying Temp.

Press this button to adjust the temperature in 5 grades while the drying function is working. Light off means home temperature, and more lights means higher temperature.

Indicating Light Instructions



ECO light

The product is under energy saving mode when the light is on. The product is out of ECO mode when the light is off.

LED Display Instructions



■ Water Temp. light Water temperature can be adjusted for 4 grades. Green light means low temp... Purple light means middle temp. Red light means high temp ... Light off means home temp.

Power light

The red light means the product is in working mode. The light off means out of power.

ECO The product is under energy saving mode.

Temp. of water coming out from nozzle.

Sensor light

Light on means people are in the sensor area and the function of washing & drying can be rooted if need. Light off means people have left and the function of washing & drying can not be rooted.

Four grades of drying temp..

No light means home temp...

More light means higher temp.

More light means higher temp.

No light means home temp..

Seal Ring

Inlet

Valve

Down <

Valve adjusting

Close

SOLUTION

Ensure plug in power

Pull out the plug & plug in again

Check the valve and open it

Clean the filter

Clean the nozzle by toothbrush

Tighten inlet valve and hose

Adjust the temp. again

Valve closing

Open

Four grades of cover heating temp..

Knife

Seat Temp. light

Water temperature can be adjusted for 4 grades. Green light means low temp.. Purple light means middle temp.. Red light means high temp.. Light off means home temp.

This function can be rooted without seating on the sensor area.

Forward & Backward

■ ECO & Extended press

Extended press to shut down the power.

Press once to root the product.

The position of nozzle can be adjusted by these two button while the washing function is working.

■ Water Temp.

Light off means home temp.. ······

Press this button to adjust water temperature in 4 grades.

The lid will close itself in 1.5 minutes while there is not any other

Seat Temp.

Press this button to adjust seat cover temperature in 4 grades. Light off means home temp..

Open/Close Cover Seat

Press open/close button to operate. The lid will close itself in 1.5 minutes while there is not any other operation.

Body Identification

people sitting on the seat cover.

Feet Sensor Flushing

While there is on people sitting on the toilet bowl seat, it can flush once after your feet meeting the area of sensor.

Press once to root the 8 hours electric save mode while the power is on.

The electric save mode will be off in 8 hours or be off while there is

Feet Sensor Cover

Open/Close Cover lid

Press open/close button to operate.

While there is on people sitting on the toilet bowl seat, the cover can be opened by meeting the area of sensor. inductive area. The cover will close itself in 1.5 minutes while there is not any

Inlet filter cleaning

3. Tighten the filter and open the valve.

the valve.

1. Close the valve and take off the filter by slotted screwdriver.

2. Take out the filter and clean it out before installing back to

■ Inductive Auto Cover (only for 2206C) The cover will open itself while people meet the The cover will close itself in 1.5 minutes with any other operation.

take off the filte

Smart Toielt Instructions





7. Apply mould proof sealant evenly between the bottom edge of toilet and ground.

Smart Toielt Instructions

Surface cleaning

1. The surface can be cleaned by sponge, soft rag with neutral detergent. 2. Do not wipe the product with thinner, petrol, detergent and insecticide.

Battery replacing

- 1. Turn off the power.
- 3. Take the battery out of box carefully.
- 4. Replace the battery.

1. Prepare the toothbrush and soft towel.

during it comes out.



Specification

Name		ne	Smart Toilet	Length of wire		1.5m	
Voltage		age	110V 50/60Hz		Rated power	1150W (Inlet Temp 15°C \pm 2°C, 0.2MPa)	
1	Inlet Water Temp.		1°C-30℃		Speed	≥4m/s	
Inle	Inlet Water Pressure		0.15-0.75 MPa		Temp.	4 Grades (home temp~55°C)	
Wa	Water Temp.		Adjustable Range: 30°C~40°C	/ing	Drying Power	200W	
Sh Wa	Water Output	Rear	0.05 4.01 (min (0.0MD-)		Safety Device	Double metal sheet switch& Temp fuse	
<u> </u>		Bidet	0.35~1.2 L/min (0.2MPa)		Surface Temp.	4 Grades (home temp~40°C)	
Device Pos		Rear	50mm~120mm	S	Heating Power	40W	
n Pos	Position	Bidet		eat T	Safety Device	Temp controller & Temp fuse	
	Power Rate		1400W	Temp	Structure	Soft close	
	Safety Device		Temp sensor, Temp Switch, Temp Fuse	7	Safety Device	Leakage protection & Seating sensor	

Routine maintenance

- 2. Hold the both sides on bottom of cover with hands
- and pull the cover out of toilet.

5. Put the box back and install the cover back.

Nozzle cleaning

2. Press the Rear or Bidet button and clean the nozzle

3. Press the Stop button after finish cleaning.



		clean



Installation of hose

1. Replace the new valve and connect the hose to it. The other side of hose connect to the filter. 2. Plug in power and adjust the water pressure to be less than 7.5KGS by valve



Using test

First time to open inlet valve and plug in power

The distribution valve and the washer perform will reset and self-check (extend and return). All lights will be on. The sitting temperature, water temperature, wind temperature, water pressure and tube

position are restored to the factory setting mode (all gear positions are mid-range) while sounds "DING". And the toilet will enter standby after self-checking finished.

1.Sensor area

The area signed on image is for sensor. The main functions can be rooted only while the sensor sensing that people is seating on the cover bowl. Hearing beep sounds once means that people is sensed and the main functions is on standby allready. (Except for Child Mode) The beep will sound once again while people leaving the seat

2.Basin function test Touch the sensor area until the been sounds.

Press the Rear & Bidet button to root the functions.

3.Drying function test Touch the sensor area until the beep sounds. Press the **Drying** button to root it.



Sensor area

 Do not replace the fittings and hose we supply. • The manual base on the last product. We reserve the right to adjust the contents without further notice.

tested well before EXW. Do not dismantle them yourse

CHECKING

Power cut or no plug in power

Water cut or inlet valve closed

The inlet filter is clogged

The nozzle is clogged by scale

Inlet valve is fully tightened

The temp. adjusted to home temp.

The product is with super siphonic jet flushing system.

There would be splash and big noise if the water pressure

Decrease water pressure by adjusting the valve to make

• Ensure install the product with the pipe and fittings which is combined

WARNING

ATTN:

is over 3KGS

flushing in a right way.

Problem & Solution

Problem clearing

PROBLEM

Can not root

No water in flushing or

not in smooth flushing

Leaking Cool water & cool cover

• Please close the valve during power cut.

in the packing or else the toilet would be leaking.

CAUTION

Hose

SERVICE CARD				RECORDS					
Item No.				Date	Repair Subject	Unit in charge	Signed byStaff		
Exw No.		Date							
Tel.		Vendor							
ADD:									
ADD: Maintenance regulations 1. The obligation of maintenance base on normal using. 2. That would require charge as follow situations: The failure causes by incorrect using or incorrect repairing & replacing. The failure causes by moving the installed product. The failure causes by fire, earthquake, flood, thunder, Public disaster & abnormal voltage. The failure causes by using the incorrect plug & wire. The failure causes by other uses except for home use. Can not show this service card. Please keep the card in a safe place.									