

INSTALLATION MANUAL TUB SPOUT ITEM NO.: **AB9201**



***COMPONENT CHECKING**

LIST OF THE STANDARD COMPONENTS:

Please double-check the components list hereinafter and contact our company or our distributor for any unconformity.

- Remark: 1. Without affecting their performancing, components may be changed without further notice;
 - 2. Drawings for reference only. Product size & shape refer to actual model.



%Installation instructions

 $\stackrel{}_{\sim}$ Do not disassemble the main body, as it has been installed &commisioned correctly & precisely before leaving the factory;

 \precsim To avoid the faucet from jammng, do flush the water pipes before installation;

 \And After installation, make sure every joint safely sealed & no leaking;

☆ The nominal water pressure is 0.05-1.0MPa(including cold & hot water pressure), suitable for water temperature from $4^{\circ}C-90^{\circ}C_{\circ}$



※Dimension drawing



※Installation procedures





%Usage

After installation, turn on the mixer, water comes out from spout.
If any dirt to make the flow rate become smaller, please circumrate the aerator off with spanner and clean it.

%Cleaning & Maintenance

 \Rightarrow To keep the product clean & shining, follow the steps as below:

1. Flush with clean water & dry with soft cloth only;

2.If any dirt, clean with soft liquid or transparent glass detergent;

3.Do not use any scrubbing detergent, polisher, sand-cloth, paper tissue or scraper;

4.Do not use any acid detergent, indissolvable grain-like detergent or soap;

5.If any dirt to make the flow rate become smaller, please take the aerator off with spanner and clean it.After cleaning, rinse thoroughly with clean water to remove any cleaner residue



