



NEVER adjust the level of recline while you are sitting in the chair, or while anyone else is in the chair. Always adjust with an empty chair and ensure that the back support is completely secure in the recline slots on each side of the chair. To fold the chair, lift the back support and gently push down on the back of the chair. The chair will collapse down to the floor level.



AD-CHL1|AD-ADRID29A|AD-KING1 For information on Care and Cleaning or to Register your highwood[®] product, please visit www.highwood-usa.com. PAGE 2 OF 2