INSTRUCTION MANUAL







Please keep this manual and product code number for future reference and for ordering replacement parts if necessary.

GENERAL INSTRUCTIONS

- Read this manual carefully and completely before proceeding.
- It is recommended that you wear safety glasses at all times during the installation.

INSTALLATION OVER CERAMIC TILES

- If your shower door is to be installed over ceramic tiles, the tiles should lay completely under the wall jamb.
- · Silicone should be used to seal the gap where the ceramic tiles meet the fixed panel.

NOTICE

- · Caulking: no sealant is required inside the shower, unless otherwise stated.
- Some models are equipped with clear sealing gaskets.

CARE FOR YOUR SHOWER DOOR

- Never use scouring powder pads or sharp instruments on metal pieces or glass panels.
 An occasional wiping down with a mild soap diluted in water is all that is needed to keep the panels and metal parts looking new.
- We recommend wiping the glass panels with a squeegee after each use.

TOOLS REQUIRED


SPIRIT LEVEL	POWER DRILL	PENCIL	SILICONE	MALLET
TAPE MEASURE	SCREW DRIVER	6mm&3mm(1/4" & 1/8") DRILL BITS	HACKSAW	SAFETY GLASSES

^{*} Use a 6mm($\frac{1}{4}$ ") drill bit for ceramic when drilling into ceramic tiles

CHOOSE A CONFIGURATION



PARTS LISTING

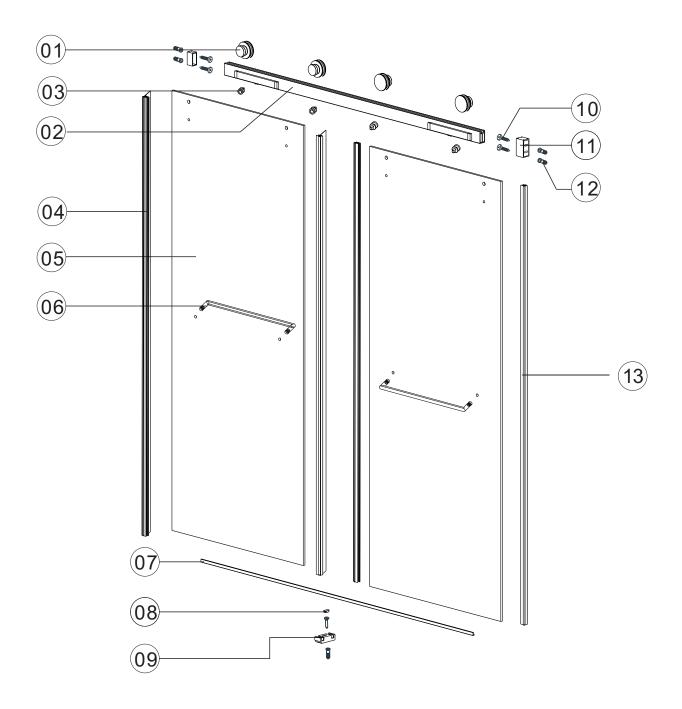

ITEM	PARTS	DIAGRAM	QTY
01	Roller		4
02	Guide Rail & damper		1
03	Anti jumping knob	3	4
04	Plastic seal	\Rightarrow	2
05	Sliding door		2
06	Towel bar	<u> </u>	2
07	Anti-splash threshold	Ĺ	1

ITEM	PARTS	DIAGRAM	QTY
08	Floor guide cover cap	0	1
09	Floor guide		1
10	Screw St4x30	•	5
11	Guide rail bracket	(100)	2
12	Wall plugs Ø6	•	5
13	Door seal		4

