

Purchase Date: / / Order/Customer Reference Number:

Thank you for choosing Sunnydaze Decor. We stand behind our brand and the quality of the items we sell. Replacement parts or products will be sent at our discretion within the 1-year warranty period. Proof of purchase, with the date of purchase as well as photos of the merchandise defect, must be provided. Photos are used to determine the cause of defects and for future quality control. Register your warranty at <a href="http://www.serenityhealth.com/warranty/">www.serenityhealth.com/warranty/</a>

If you have any questions, comments or concerns, feel free to contact us by phone at **888-881-4668**, by email: <u>customerservice@serenityhealth.com</u>, or via our contact us page at <u>www.SerenityHealth.com/contact-us/</u>

## SLATE INDOOR TABLETOP OR WALL-MOUNT WATER FOUNTAIN WITH LED LIGHT GSI-298

Read assembly instructions carefully and follow the care instructions. Save these instructions for future reference.

Select a smooth, level surface to place the fountain.

Assemble components on a soft, clean surface to avoid scratching or damaging the finish.

No.	Parts	QTY.
Α	Lid	1
В	Finger Light	1
С	Fountain Body	1
D	Bolt	4
Е	Washer	4
F	Electric Submersible Pump	1
G	Basin	1
Н	Decorative Stones	1 рк

No.	OPTIONAL PARTS (INCLUDED)	QTY.
I	Wall Screw	5
J	Wall Anchor	1
Κ	Wall-Mount Bracket	1
L	Cord Channel	1
М	Cord Cover	2



**NOTE:** The water tubing is built into the fountain body. Take care when handling the water tube; detaching the water tube from the fountain will damage the fountain and void the product warranty.



## TABLETOP ASSEMBLY

- 1. Clip the rubber end of Finger Light (B) to the underside of Lid (A).
- Keeping the light cord on the backside of Fountain Body (C), attach Lid (A) to Fountain Body (C) using 2x Bolt (D) and 2x Washers (E).
- 3. Run the light cord behind the preinstalled bracket on the backside of the fountain body; this will prevent the light cord from being damaged if the fountain is wallmounted.
- 4. Connect Finger Light (B) to Pump (E).
- 5. Connect Pump (E) to the water tube that is on the backside of Fountain Body (C).
- 6. Making sure the light and pump power cord are run out the groove in the back of Basin (G), gently place the assembled components onto the basin and secure using 2x Bolt (D) and 2x Washers (E).
- 7. Gently place the Decorative Stones (H) onto the bottom of the fountain body.
- 8. Fill the fountain with enough water to keep the pump fully submerged during operation; approximately 1/2 gallon.
- 9. Firmly connect the AC Adapter to the pump power cable and plug it into a properly grounded GFCI outlet.

Note: When first used, there may be air trapped in the pump. It may take several minutes for the air to escape and water begins to flow.

#### ightarrow Before wall-mounting, ensure the wall can support the weight of the fountain while it is full of water. ightarrow



#### **OPTIONAL WALL-MOUNT:**

- 1. Tape the bottom of the wall-mount bracket on the wall 17.5 inches above where the bottom of the fountain will rest on the wall. Check to make sure the bracket is level.
- 2. Mark the holes in the bracket with a pencil. Remove the tape and bracket from the wall.
- 3. Drill starter holes (1/4 inch or 6mm) on the pencil marks.
- 4. Gently hammer three wall anchors into the starter holes.
- 5. Align the wall-mount bracket with the wall anchors and secure it using three wall screws.
- 6. Ensuring the preinstalled bracket on the fountain is centered over the wall-mount bracket, carefully lower the fountain onto the wall-mount bracket. Check to make sure the pump power cord is within the groove on the backside of the fountain basin.

### **OPTIONAL CORD PROTECTORS**

- 1. Tape the cord channel against the wall where the cord will go down the wall.
- 2. Mark the top and bottom hole with a pencil. Remove the tape and cord channel from the wall.
- 3. Drill starter holes (1/4 inch or 6mm) on the pencil marks.
- 4. Gently hammer two wall anchors into the starter holes.
- 5. Align the cord channel with the wall anchors and secure it using two wall screws.
- 6. Put the cord into the Cord Channel. Cover the Channel with one or both cords cover.

# IMPORTANT INFORMATION

#### **USE & CARE**

- FOR INDOOR USE ONLY.
- · Keep fountain out of reach of children and pets.
- · Keep power cord away from all heat sources. Do not place electrical cords in areas with high temperatures.
- Check the water level frequently to ensure the pump remains fully submerged; never allow the pump to run dry as it will burn out the motor.
- · Only use water in this fountain; distilled water is recommended to prevent mineral buildup.
- Periodically change the water to reduce scale and buildup clean components regularly for optimal performance and appearance. DO NOT use harmful additives such as bleach, chlorine, etc.
  DO NOT use abrasive materials to scrub the fountain.
- Always shut off the power supply before cleaning and maintaining the fountain and the pump.
- Take care when handling the pump; only pick it up by the body of the pump, never by the power cord.

#### TROUBLESHOOTING

- Ensure that the pump is fully submerged and add water if necessary.
- · Check the pump and tubing for obstructions.
- If water is not flowing within several moments of the fountain being plugged in, unplug the power supply for a few moments and plug it back in; the pump may have air trapped inside it which can prevent water from circulating properly.
- · Adjust the flow control on the body of the pump to achieve the desired flow rate.
- If water is not flowing evenly, it may be due to the porous nature of the slate material. Moisten the entire slate surface beneath the downspout to even out water flow.
- If the light is not working, ensure the cable is fully connected and the seal is adequately tightened (do not over-tighten).
- Check to make sure the power outlet is working; if in doubt about electrical connections, consult a certified electrician.

Any modification or failure to follow the recommended care will void the product warranty.

# **MWARNING!**

Manufacturer and seller expressly disclaim any and all liability from personal injury, property damage or loss, whether direct or indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, or neglect of this product.

SPQ50048