

BT-9585P PARTS

ASSEMBLY INSTRUCTION

(1)X1	(8)X5
(2)X1	(9)X2
(3)X1(L)X1(R)	(10)X8
(4)X1	(11)X2
(5)X1	(12)X4
(6)X1	(13)X8
(7)X1	(14)X1
	(15)X1

