	ASSEME	BLY INSTRU	JCTION
			SUNPAN
For assembly questions p	www.sunpan.com formon please call: 1-800-787-101	9 (or+1-416-736-0094)outs PARTS LIST	side North America or email to: <u>info@sunpan.com</u>
No.	ou begin, please layo DESCRIPTION	ut all parts and onsu QUANTITY	re you have the correct count. ILLUSTRATION
A	DRESSER	01	
В	LEG FRAME	02	
С	STRETCHER	02	Co O O O O
D	SUPPORT LEG	01	
	li de la companya de	IARDWARE LIST	ſ
1	BOLT M6 x 15	24	
2	LOCK WASHER Ø6	16	Q
3	WASHER Ø6 x 16	16	\bigcirc
4	ALLEN KEY K4	01	
5	ANTI-TIP KIT	02	
			1/3

STEP	DESCRIPTION	ILLUSTRATION
1	Connect the 02 x leg frame "B" to the 2 Stretchers "C" as in the drawing. Use 08 Bolts "1" snap to the appropriate locations, as shown. Use Allen Key "4" when assembling the bolts.	
2	Put the Dresser (A) upside down. Place the leg frames already assembled on the Step 1 and the Support Leg (D); on the underneath dresser and screws it by using : 14 Bolts (1) + 14 Lock Washers (2) + 14 Washers (3) Tighten by Allen key (4).	A the test of the test of the test of
3	Firstly, request 2 people lift dresser up then rotate it 180 vertically then place it on the floor carefully. DO NOT USE THE REAR LEGS AS FULCRUM BECAUSE THE LEGS WILL BE BENDED	DO NOT USE THE REAR LEGS AS FULCRUM BECAUSE THE LEGS WILL BE BENDED Rotation 180° ↓ ↓ ↓ ↓ ↓ ↓ ↓ ↓ ↓ ↓ ↓ ↓ ↓ ↓ ↓ ↓ ↓ ↓ ↓
4	Adjust the adjustable leveler. Attach the ANTI - TIP KIT (5) at the back of the dresser Follow instructions in the hardware bag. Finished.	2 x 5 0 WALL

ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

Please check parts and hardware before assembling. Follow each instruction step by step. Place a protective pad or piece of cardboard on the floor while assembling your item on top of it. Remove all parts from the carton and separate them into part numbers/groups as indicated on the part list. Please follow instructions in the sequence as numbered to assure fast/easy assembly.

WARNING:

Do not attempt to repair or modify parts that are broken or defective - if you find a broken part please contact us for replacement. Keep all hardware parts out of the reach of children.

FURNITURE CARE:

Following these few basis steps will help to ensure that you enjoy your furniture for a long time:

Do not expose your furniture to direct sunlight, dampness or any heat, like a hot cup of coffee or tea. Always use a coaster.

Excessive exposure to sunlight may cause fading. Excessive temperature and humidity or cold may cause cracking or splitting.

Dust with a clean, damp, lint free cloth.

Use a damp cloth with water or mild detergent to clean all surfaces - do not use chemicals or paint thinner which will fade the surface. Place a piece of felt or a pad under the legs of your furniture to avoid scratching the floor.