ASSEMBLY INSTRUCTIONS

WICKER CORNER SOFA SET



NOTE: 50% TIGHTEN BEFORE FIXING ALL BOLTS

WF285000AAB WF285001AAB WF285002AAB WF285003AAB WF285004AAB WF285000AAE WF285001AAE WF285002AAE WF285003AAE WF285004AAE



Notice:

1. 50% Tighten before fixing all screws, Allen wrench is recommended instead of an electric drill.

2. Place the item on a flat ground to adjust and make sure it remains stable

3. Tighten up all screws with tools gradually.

4. If the screws are not aligned with holes during assembly, please loosen all the other screws to 50% and continue the assembly process.

5. If the item is not stable, please loosen all the screws, adjust it on a flat ground and tighten up all screws again.

6. Note : If one or some screws are fully tightened during assembly, chances are the others will not be aligned with holes. In addition, all the holes are designed to be relatively larger to provide more space for the adjustment of the screws.



Part List



Part List



Hardware List

	2	3
Bolt M6 x 100 mm 2 pcs + extra 1 pc	Bolt M6 x 35 mm 8 pcs + extra 1 pc	Bolt M6 x 30 mm 106 pcs + extra 3 pcs
4 Bolt M6 x 25 mm 76 pcs + extra 3 pcs 7	5 W6x1 Washers 116 pcs + extra 3 pcs	6 Plastic feet (38pcs)
Allen key M4 (3 pcs)		





















STEP 26

Connect the parts of the Bench back frame (T) & Bench right frame (R) and Bench left frame (S) completed in STEP 25 with Bolts (1) and Washers (5)



