## **ASSEMBLY INSTRUCTION**






Sunpan Product Name: SHELBURNE DINING TABLE

Please visit our website **www.sunpan.com** for more great products

For assembly questions please call 1-800-787-1019 (or +1-416-736-0094) outside North America or email to info@sunpan.com

PARTS LIST  Before you begin, please layout all parts and ensure you have the correct count.			
PARTS	DESCRIPTION	QUANTITY	ILLUSTRATION
Α	Leg	1	
В	Frame	1	
С	Тор	1	
D	Bolt M6 x 20	9	and the second s
E	Washer	4	0
F	Allen Key	1	

# **ASSEMBLY INSTRUCTIONS ILLUSTRATION DESCRIPTION** STEPS (B) Take out the Frame (B) from Top (C) by unscrew Bolt (D) and washer (E) using allen Key (F) 1 Attached Frame (B) to Legs (A) by using bolts (D) M6x20 with Allen Key (F). 2 A Attached Top (C) to the base using bolt (D) M6x20 and Washer (E) with Allen 3 Key (F).

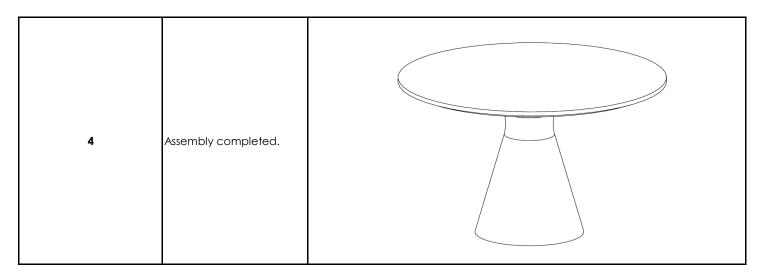

#### **ASSEMBLY TIPS:**

Please check parts and hardware before assembling. Follow each instruction step by step.

Place a protective pad or piece of cardboard on the floor while assembling your item on top of it.

Remove all parts from the carton and separate them into part numbers/groups as indicated on the part list.

Please follow instructions in the sequence as numbered to assure fast/easy assembly.

#### **WARNING:**

Don't attempt to repair or modify parts that are broken or defective - if you find a broken part please contact us for replacement. Keep all hardware parts out of the reach of children.

### **FURNITURE CARE:**

Following these few basic steps will help to ensure that you enjoy your furniture for a long time:

Do not expose your furniture to direct sunlight, dampness or any heat, like a hot cup of coffee or tea. Always use a coaster.

Excessive exposure to sunlight may cause fading.

Excessive temperature and humidity or cold may cause cracking or splitting.

Dust with a clean, damp, lint free cloth.

Use a damp cloth with water or mild detergent to clean all surfaces - do not use chemicals or paint thinner which will fade the surface.

Place a piece of felt or a pad under the legs of your furniture to avoid scratching the floor.