ASSEMBLY INSTRUCTIONS

Read this instruction carefully. See hardware and furniture part list for guidance. Be sure all parts are complete, before you assemble. Place all wooden furniture parts on a clean and flat soft surface to prevent from being scratched. Follow the figure to start assembling.

CAUTIONS: 1. Do not FULLY - TIGHTEN the nut or nut bolt until all nut or bolt is ready assembed.

2. Do not OVER - TIGHTEN the nut or bolt to avoid causing damages to the thread.

3. Keep all hardware parts out of reach of children.

NOTE: THE LIST AND QUANTITY SHOWN ARE FOR 1 UNIT ASSEMBLY.

Tool needed: Screwdriver (not provided).

PART LIST				
ITEM	DESCRIPTION	QTY		
Α	CHAIR BACK	1 PC		
В	CUSHION SEAT FRAME	1 PC		
С	ARM (L)	1 PC		
D	ARM (R)	1 PC		

HARDWARE LIST			
ITEM	DESCRIPTION		QTY
1	JCBC Bolt M6 x 45mm	***********	4 PCS
2	JCBC Bolt M6 x 60mm	••••••••••••••••••••••••••••••••••••••	4 PCS
3	JCBC Bolt M6 x 80mm		2 PCS
4	JCBC Bolt M6 x 90mm		2 PCS
5	M6 FLAT WASHER	0	10 PCS
6	M6 SPRING WASHER	0	12 PCS
7	WOOD BUTTON DIA 13.5mm	0	2 PCS
8	M4 ALLEN KEY (BALL SHAPE)	^	1 PC





