




Step 5: continue with the right side (E) in the same way as step 4. Make sure to tighten all bolts before using.

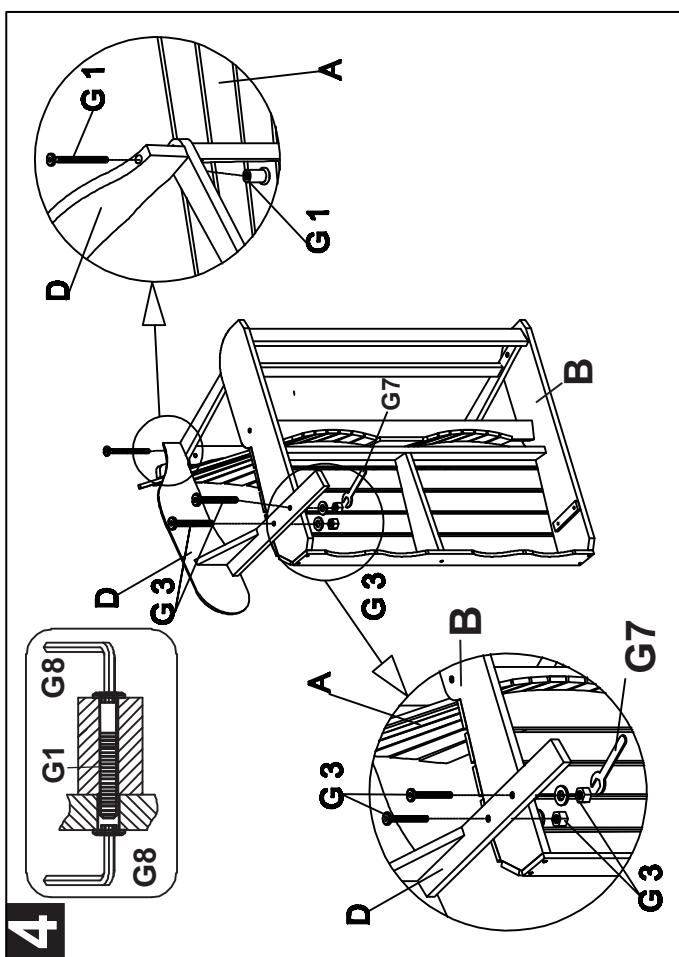


Step 4: attach left side (D) as shown on the picture by using the Allen Bolt L (G1) and the Allen bolt S (G3). Then tighten all with the Allen Key (G8) and wrench (G7) as shown on the picture.

PREPARATION

Before beginning the assembly of the product, make sure all parts are present. Compare the parts with the package contents list and hardware contents list. If any parts are missing or damaged, do not attempt to assemble the product. Tool required for assembly (included): Allen Key and Wrench.

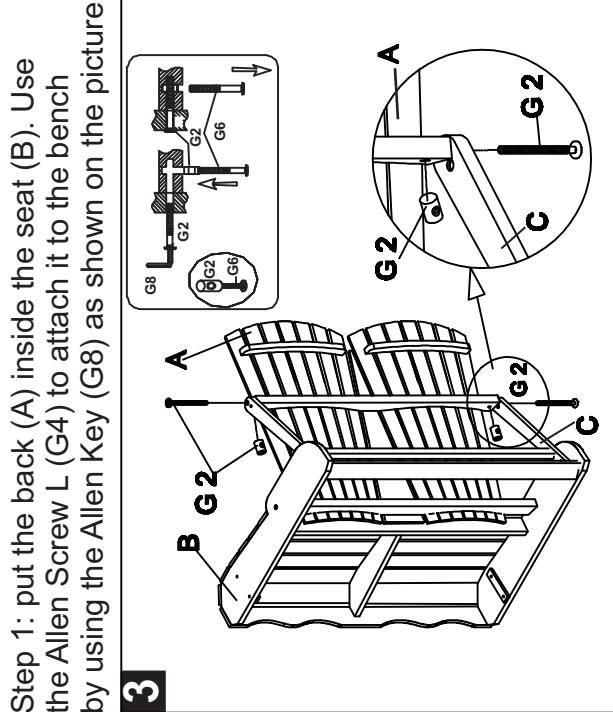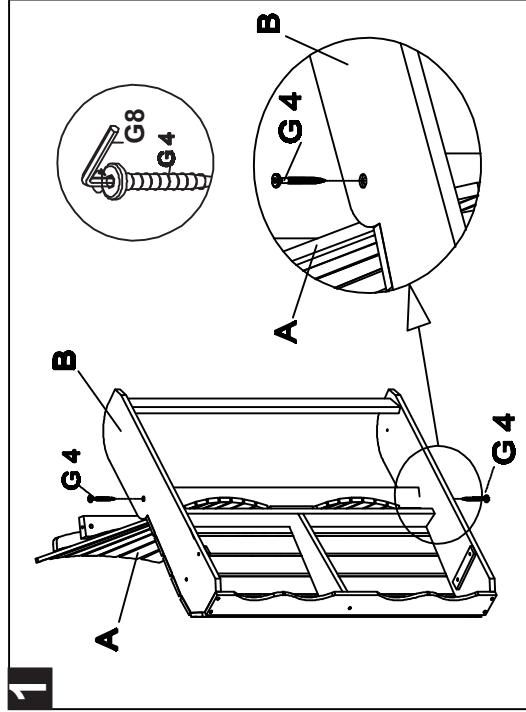

Step 1: put the back (A) inside the seat (B). Use the Allen Screw L (G4) to attach it to the bench by using the Allen Key (G8) as shown on the picture.

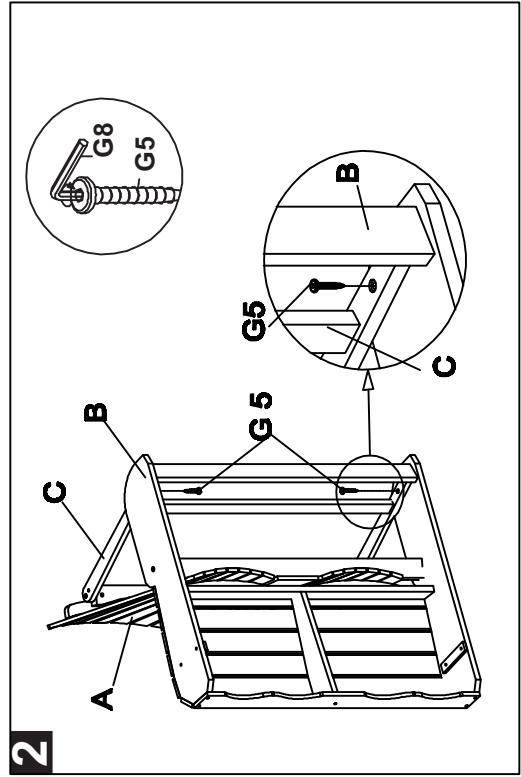

Step 2: attach the support (C) to the back (A) by using the Allen Screw S (G5) and tighten it with the Allen Key (G8) as shown on the picture.

Step 3: use the Allen nut (G2) to attach the support (C) to the back (A) and tighten it with the Allen Key (G8) as shown on the picture.

CARE AND MAINTENANCE

Store outdoor furniture indoors or cover well when it is not in use. Dust regularly with small brush or vacuum. Spills should be taken care of immediately before they harden or stain with a slightly dampened sponge.

NOTICE

Please make sure that you have all parts indicated before you begin assembly of this item.

Part List and Hardware List

PIECE	DESCRIPTION	PICTURE	QUANTITY
A	Back		1X
B	Seat		1X
C	Support		1X
D	Left side		1X
E	Right side		1X
G1	Allen Bolt L		2X
G2	Allen nut		2X
G3	Allen Bolt S		4X
G4	Allen Screw L		2X
G5	Allen Screw S		2X
G6	Extra Bolt		1X
G7	Wrench		1X
G8	Allen Key		2X



MODEL# PAT6702
Product Dimension: 57.09"W x 37.4"D x 32.68"H

Weight capacity : 600 lbs.

Warning : Do not stand on the bench
Warning : Do not torque bolts / screws

