
INSTRUCTION MANUAL

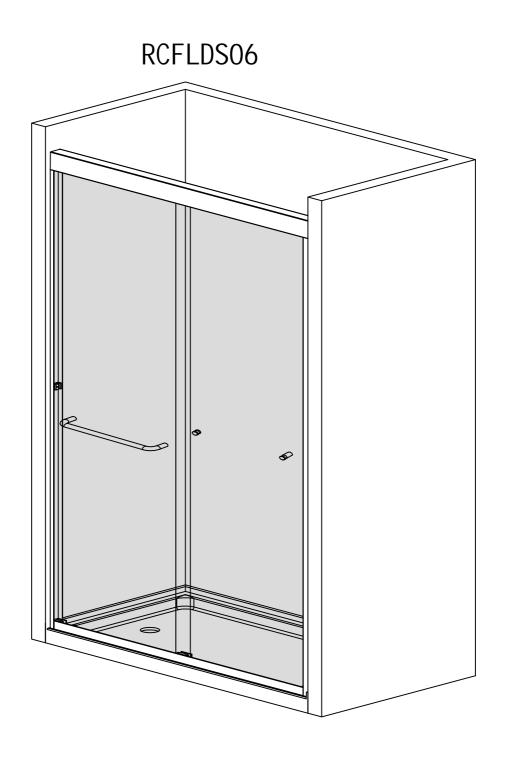



Please keep this manual and product code number for future reference and for ordering replacement parts if necessary.

GENERAL INSTRUCTIONS

- · Read this manual carefully and completely before proceeding.
- . It is recommended that you wear safety glasses at all times during the installation.

INSTALLATION*OVER*CERAMIC*TILES

- If your shower door is to be installed over ceramic tiles, the tiles should lay completely under the wall jamb.
- · Silicone should be used to seal the gap where the ceramic tiles meet the fixed panel.

NOTICE

- Caulking: no sealant is required inside the shower, unless otherwise stated.
- . Some models are equipped with clear sealing gaskets.

CARE FOR YOUR SHOWER DOOR


- Never use scouring powder pads or sharp instruments on metal pieces or glass panels.
 An occasional wiping down with a mild soap diluted in water is all that is needed to keep the panels and matal parts looking new.
- We recommend wiping the glass panels with a squeegee after each use.

TOOLS REQUIRED


SPIRIT LEVEL	POWER DRILL	PENCIL	SILICONE	MALLET
TAPE MEASURE	SCREW DRIVER	6mm&3mm(1/4" &*1/8") DRILL*BITS	HACKSAW	SAFETY GLASSES

 $[\]hbox{\it ***} Use \hbox{\it **a**6mm} (?") \hbox{\it 'drill*bit*for*ceramic*when*drilling*into*ceramic*tiles}$

CHOOSE A CONFIGURATION

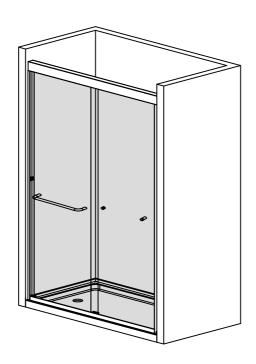

PARTS LISTING

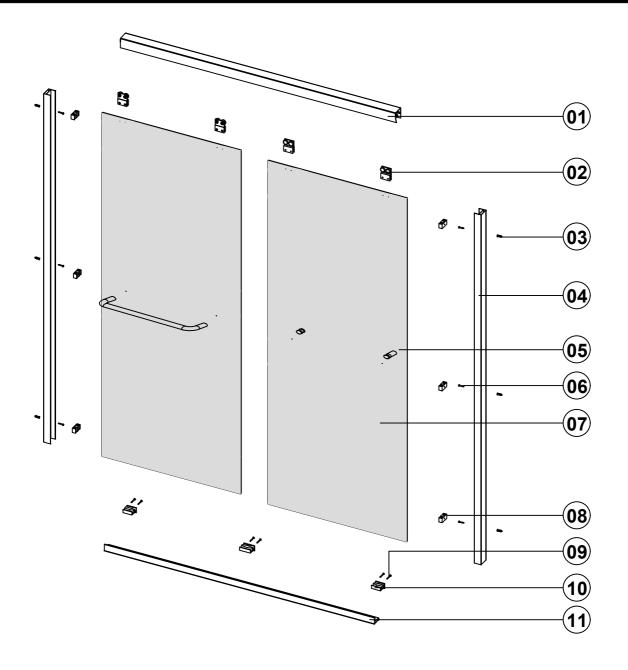

ITEM	PARTS	DIAGRAM	QTY	ITEM	PARTS	DIAGRAM	QTY
01	Header	F	1	07	Door panel		2
02	Top roller		4	08	Stopper	J	6
03	Wall plug Ø6	6	6	09	Screw ST4x10		3
04	Wall profile		2	10	Floor guide		3
05	Towel bar	* * * * * * * * * * * * * * * * * * *	1+1+1	11	Bottom profile		1
06	Screw ST4x30	0	6				

